



 
Performance is everything.™

User Guide

Vax Service line AU: 1300 361 505

NZ: 0800 800 900

Bagless Cylinder

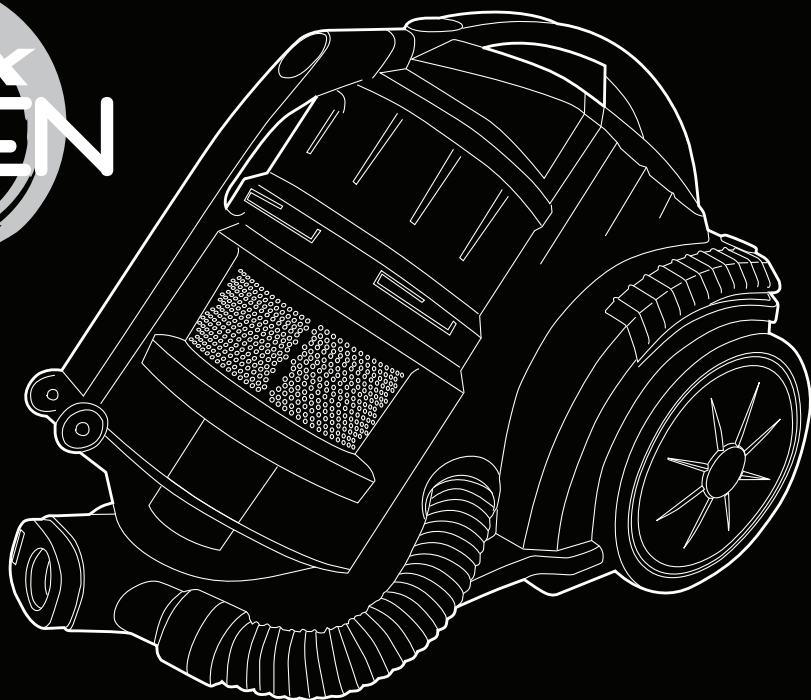

Get Cleaning...

 
What's your Vax's model number?

/ /


What's your serial number? (Located on the base of the machine)

Note these down in case you need them in future. Please keep instructions for further use.

Machine Overview

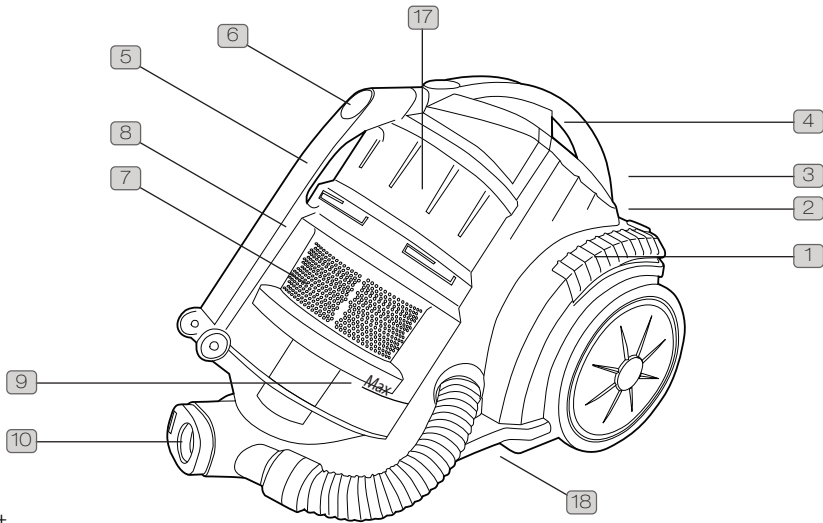


Unit

- | | | |
|------------------------------------|---|---------------|
| 1 On/off button | 6 Dirt container release button | 10 Hose inlet |
| 2 Auto cord rewind button (hidden) | 7 Separator | |
| 3 Floor tool parking slot (hidden) | 8 Dirt container | |
| 4 Carry handle | 9 Max fill line  Dirt container must be emptied as soon as this line is reached. | |
| 5 Dirt container carry handle | | |

Accessories

 Filters

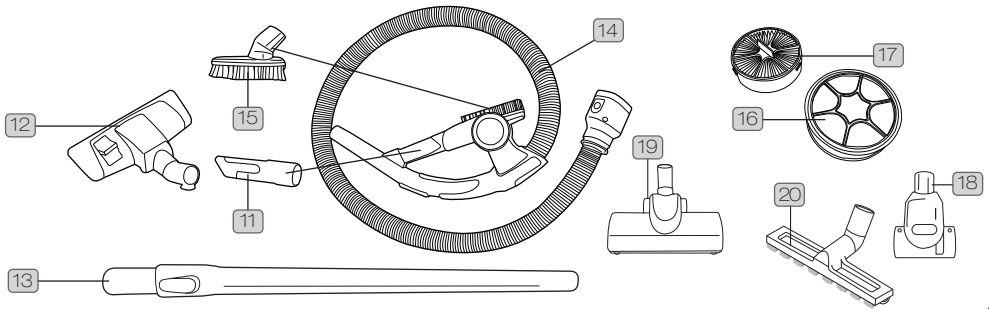

- | | |
|--|--|
| 11 Crevice tool | 16 Pre-motor filter |
| 12 Combination floor tool (VCZ1600 / VCZP1600 models only) | 17 Post-motor filter |
| 13 Telescopic extension tube | 18 Turbo tool (VCZP1600 / VCZR1600 models only) |
| 14 Flexible hose & handle (4.2m stretch hose on VCZR1600 model only) | 19 Turbo brush (VCZP1600 / VCZR1600 models only) |
| 15 2-in-1 tool (dusting brush & upholstery tool) | 20 Hard floor brush (VCZR1600 model only) |

General Safety Information


FOR HOUSEHOLD USE ONLY.


When using the vacuum cleaner, basic safety precautions should always be observed, including the following:


1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use


in the presence of explosive liquids or vapours.

14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.
19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.

 **WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

 **CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

 **IMPORTANT:** If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

 
 **IMPORTANT:** Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Operation


Keep your Vax like new

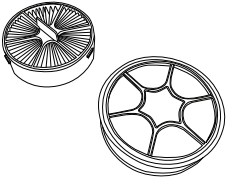


! **IMPORTANT:** The condition of the filters affects the performance of your machine. Please check and clean filters periodically (depending on the level of use). For full cleaning instructions, see page 5.

! **IMPORTANT:** Do not use the vacuum cleaner without all of the filters in place.

 
Assembling your vacuum cleaner

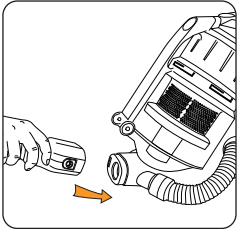


Attach hose to hose inlet on vacuum.

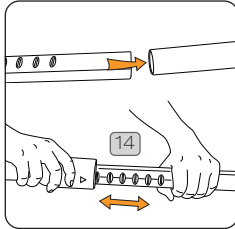 


Attach & extend telescopic wand.

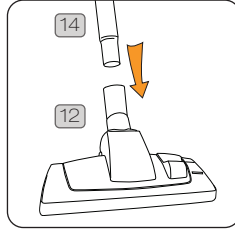 

 Choose an accessory & attach to telescopic wand.

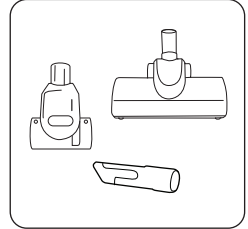


Operating the appliance

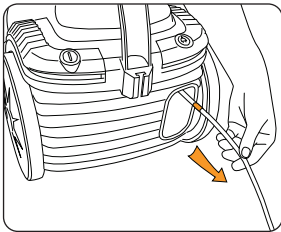 

NOTE: Fully unwind power cord before every use. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord length beyond the yellow mark.

 Switch vacuum cleaner on

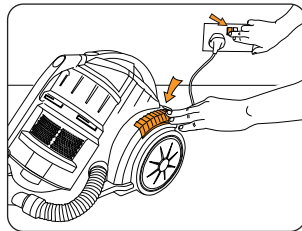

Press on/off switch located on the top of the cleaner.

Operation

Carpet cleaning

For carpet cleaning press the rocker switch on the combination floor head to lift the brushes or use the turbo brush accessories. (Turbo brushes in VCZP1600 / VCZR1600 models only).

Hard floor cleaning

Hard floor cleaning, press the rocker switch on the combination floor head to lower the brushes or use the hard floor brush accessory. (Hard floor brush in VCZR1600 model only).

Accessories

The accessories can also be attached directly to the handle by removing the telescopic tubes and pushing in the desired accessory.

2-in-1 tool (Upholstery & Dusting Brush)

Dusting brush; for delicate surfaces. Upholstery tool; for carpet, upholstery and stairs etc.

 
Crevice tool

For crevices, corners and cracks, etc.


Turbo tool (VCZP1600 / VCZR1600 models only)

For cleaning upholstery, stairs, car interiors, mattresses and small surfaces.


Using the stretch hose (Not standard on all models VCZR1600 Model only)

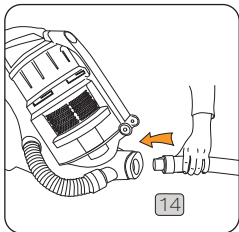

Attach stretch hose to vacuum


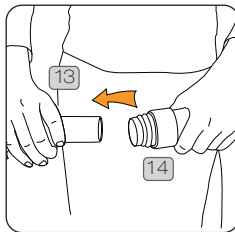 


 Attach stretch hose to telescopic extension tube.

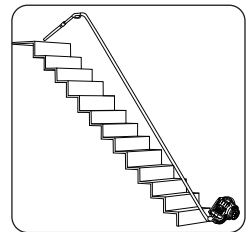

Vacuum can remain at bottom of stairs against bottom step.

  Packing away and storage

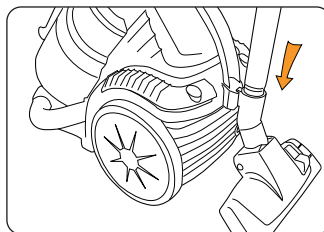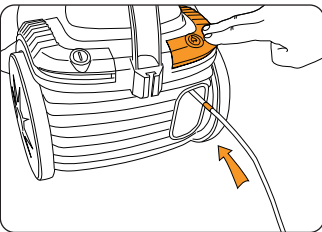

NOTE: For convenience there is a parking slot located at the rear of the vacuum cleaner where the floor tool and tubes can be attached for storage and carrying.

 
Maintenance (Keep your Vax as good as new)

Emptying and cleaning the dirt container


⚠ WARNING: Always unplug the vacuum cleaner from the electrical outlet before removing dirt container.

⚠ WARNING: Do not use the vacuum cleaner without all filters in place.

⚠ WARNING: Vax recommends that filters should be checked & cleaned periodically (eg every 6 months as a guide), depending on level of use.

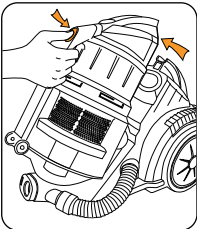

 Press down the button located on the dirt container. When the button is pressed down, the dust barrel can be lifted to remove.

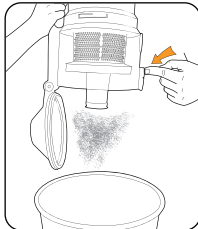

Hold the dirt container over a bin and press the quick release button to empty the container. When emptied, close the dirt container flap. A click will be heard when closed. Replace the dirt container.



 
Advanced cleaning

Cleaning the cyclone separator

1. Twist and pull the dirt container bin off the cyclone separator. The dirt container bin may be wiped clean.
2. The separator should only be cleaned with a soft brush and wiped with a damp cloth.
3. Leave the separator to dry completely before replacing. Allow 24 hrs to dry.

⚠ WARNING: The cyclone separator should not be submerged in water.


Cleaning the pre-motor filter

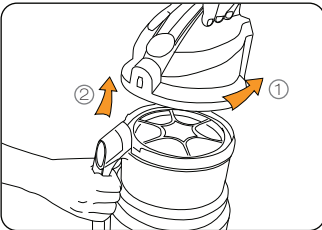


Twist the top of dust canister and lift.



 
Pull filter out.

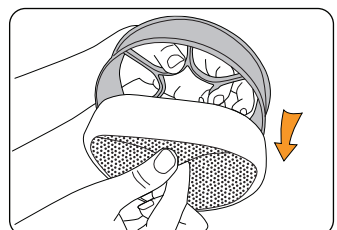


Separate the two filter components.

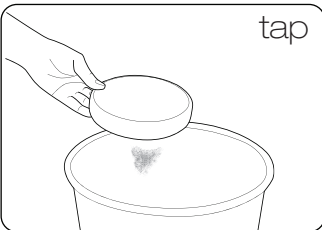 

Tap over bin to release excess dirt.

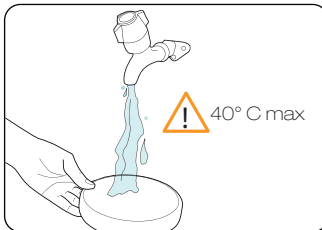 

 Rinse in warm water (max 40°C). Do not use detergents.

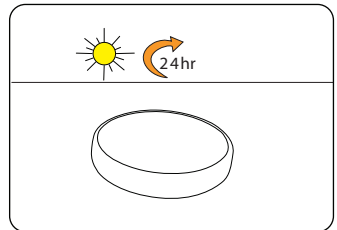


Allow to dry for 24 hours after removing excess water.

Maintenance (Keep your Vax as good as new)


Cleaning the post-motor filter



 
WARNING: Do not wash the post-motor filter.

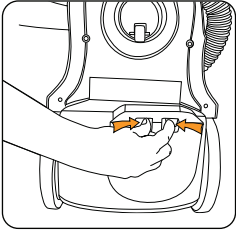

 
Squeeze together the tabs at the base of the vacuum.

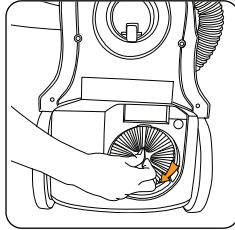

Remove filter by twisting.

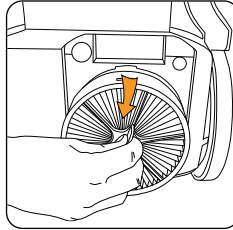 

Pull filter out of cleaner.

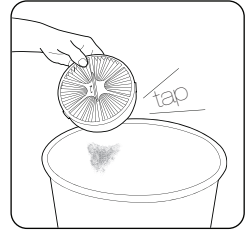 

Tap over bin to release excess dirt. Do not wash.

Cleaning Blockages



WARNING: To reduce the risk of electric shock, turn the vacuum cleaner off and unplug from the electrical outlet before performing maintenance/troubleshooting checks.

Hose Blockages

 
The hose may be disconnected from the vacuum cleaner. Carefully remove any blockages found and reconnect hose securely.

Accessory Blockages


Remove accessory from hose/ tube. Carefully remove the blockage and return to the cleaner.

Cleaning Debris from the Turbo Tool (VCZP1600/VCZR1600 Models only)


NOTE: Switch the cleaner off and disconnect the power plug from the electrical outlet.

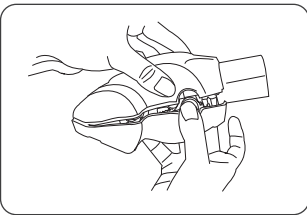

 Press the two side buttons together & pull sides apart.

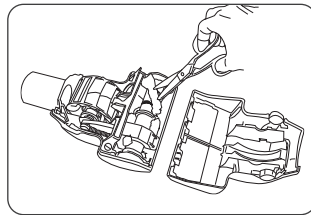

 Carefully use scissors to cut out the blockage.

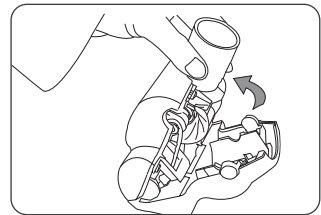

Realign turbo brush sides & press together.

Maintenance (Keep your Vax as good as new)

 
Removing the debris from the Turbo Brush

(VCZP1600/VCZR1600 Models only)

The brush bar will stop rotating if it is blocked during operation by vacuuming up foreign objects, or if strands of hair or carpet are wrapped around it.

Switch the vacuum cleaner off and disconnect the power plug from the electrical outlet.

Lay the Turbo Brush floor head on a flat surface and turn over to expose the brushbar. Using a pair of scissors, cut through any threads or hairs caught by the brushbar that have wrapped around the guides.

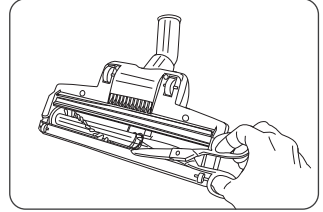



WARNING: to reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the 'Machine Overview' page in this guide to make sure the part is definitely included in your unit.
- If it is missing, we're here to help. Simply call us on **AU: 1300 361 505 / NZ: 0800 800 900**

Why won't the accessories pick up properly?

- The accessory may be blocked: Refer to the Maintenance section (Page 7).
- The accessory may be faulty: call our Vax Careline to order a replacement: **AU: 1300 361 505 / NZ: 0800 800 900**

Why won't the vacuum cleaner pick up?

- The filters may be clogged: Refer to the Maintenance sections (Page 6).
- The Dirt Container is full or blocked: Refer to the Maintenance sections (Page 6).
- The Dirt Container may be incorrectly installed: Refer to the Maintenance sections (Page 6).

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical outlet correctly. Ensure that the plug is pushed into the electrical outlet securely.
- The electrical outlet may not be working. Check the fuse or breaker and consult an electrician.

Why is dust escaping from the vacuum?

- The filters may not be installed correctly. Refer to the Maintenance sections (Page 6).
- The Dirt container may be incorrectly installed: Remove the Dirt Container from the unit by pressing the Dirt Container Release Button (Page 6) and reattach it to the unit, ensuring it is locked firmly back into place.
- The filters may be clogged: Refer to the Maintenance sections (Page 6).

What do I do if an accessory/the unit becomes damaged or broken?

- Visit www.vax.com.au for where to purchase parts and spares or please call our Vax careline
- AU: 1300 361 505 / NZ: 0800 800 900**

Visit www.vax.com.au or call on **AU: 1300 361 505 / NZ: 0800 800 900** for information on where to purchase spare parts.

we're here to help

Instead of taking me back to the shop, simply call:

AU: 1300 361 505
NZ: 0800 800 900

vax.com.au

This does not affect your statutory rights

Other Information

Vax Service & Help

Vax Customer Careline AU: 1300 361 505 / NZ: 0800 800 900

Monday-Friday 8.30am to 5.00pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification


Voltage:	220-240V ~50Hz		
Wattage:	1600 W		
Capacity:	2.6L		
Filters:	Pre-motor filter (washable) HEPA 12, Antibacterial post-motor filter (lifetime - tap to clean)		

	VCZ1600	VCZP1600	VCZR1600
Cord length:	8m	8m	8m
Product weight:	6.5kg	6.5kg	6.5kg
Packed weight: <small>(includes accessories)</small>	9.5kg	10.2kg	10.2kg

Subject to technical change without notice.



 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.





Performance is everything.™

Distributed by Techtronic Industries Pty. Ltd.
Level 1, 666 Doncaster Rd, Doncaster, Australia 3108.
www.vax.com.au. Service Line: AU: 1300 361 505 / NZ: 0800 800 900