



INTELLIGENCE

User Manual

SI-200



We congratulate you for choosing Sauber Intelligence the first-class cleaning system. Before operating the Sauber Intelligence please read this instruction manual carefully and keep it for future reference.

sauber - It's German for clean



Overview

- A Hose connector with shutter
- B Front lid
- C Handle
- D Side parking position
- E LCD Display
- F Mode buttons
- G Blow port
- H Power cable
- I Cable winder foot pedal
- J ON/OFF foot pedal
- K Aroma compartment (not shown)
- L Powered hose
- M Electronic control handle
- N Telescopic tube
- O Automatic floor head
- P Small combination tool
- Q Radiator brush
- R Crevice tool
- S PL1 Powerclean brush
- T PB1 Powerclean head
- U Turbo Clean optional accessory*

*sold separately



Assembly



1 Open the shutter and gently push the powered hose in the canister opening.



2 Connect the electronic control handle to the telescopic tube.



3 Connect the telescopic tube to the Automatic floor nozzle.



4 To extend the length of the telescopic tube, slide the lock down.
To reduce the extension, slide the lock up.



5 Gently pull out the power cable and connect it to the power socket.



Safety Instructions

Please read through the important safety instructions carefully before you use the vacuum cleaner.

- The manufacturer is not liable for any damage caused by improper use.
- Persons who are physically, mentally or because of lack of experience unable to operate the vacuum cleaner safely are not allowed to operate this machine without supervision.
- Never leave small children unattended near the vacuum cleaner.
- Before cleaning the unit or changing the filters always switch off the vacuum cleaner and pull the plug out of the power socket. Never pull the plug out by the power cable.
- Never leave the vacuum cleaner connected to the mains power when not in use.
- Compare the electric contact data on the rating plate with the mains voltage, frequency and maximal ampere, these figures must match.
- The mains have to be protected by a 16A or 10A fuse.
- The electric hose contains electrical connections:
 - do not use to vacuum water;
 - do not immerse it in water for cleaning;
- Check hose regularly. Do not use if hose is damaged.
- If the power cable is damaged, it must be replaced by a Sauber service qualified person in order to avoid any hazard.
- Use the vacuum cleaner only for dry substances. Never use the vacuum cleaner in damp or wet environment.
- Never vacuum people or animals.
- Never vacuum sharp-edged objects.
- Be careful that hair, fingers, clothing and the like never come in contact with the head while the vacuum cleaner is connected to the mains power.
- Never vacuum close to smoke, sparks or fire (such as cigarettes, matches, hot ashes), flammable liquids and gasses or explosive materials.
- Aerosols may not be sprayed in or on the vacuum cleaner it could explode.
- Do not use the vacuum cleaner if it is damaged and, if it breaks down. Check the electrical components regularly for defects. Have damaged connection cables, electrohoses, electrical contacts and electric tubes exchanged immediately.



- Do not pick up liquid, dry use only.
- Never clean the vacuum cleaner and all its electrical parts, especially the electrical connections, with water or liquid cleaners.
- Only use the socket on the vacuum cleaner for Sauber accessories mentioned in this instruction manual.
- Maintenance and repairs may only be undertaken by authorised Sauber customer service personnel. Use only ORIGINAL Sauber spare parts and accessories.
- Never attempt to make any modifications electrically to the vacuum cleaner.

PB1 and PL1 Safety Instructions

Use the electric Powerclean head only for vacuuming dust and dry substances in the home.


- The manufacturer is not liable for any damage caused by improper use or incorrect operation. Users of this machine are urgently requested to observe the following instructions.
- Never vacuum people or animals with the electric Powerclean head.
- Be careful that hair, fingers, clothing and the like never come in contact with the rotating roller of the electric power cleaning head. Never touch the brush roller while the vacuum cleaner is connected to the mains.
- Always switch off the vacuum cleaner before cleaning it and pull the plug out of the socket. Never pull the plug out by the cable.




Operation

From the electronic control handle



- 6** To start the vacuum cleaner press on the /AUTO button. The vacuum cleaner will start in the Intelligent Power Control (IPC) mode.

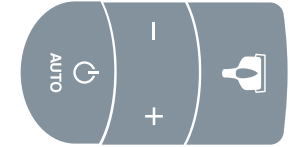

- 7** To manually increase or decrease the power level, press the + or – button.




- 8** To return to the Intelligent Power Control (IPC) mode from the Manual mode press once on the /AUTO button.



- 9** Press the “brush” button to turn ON/OFF the Powerclean head or Powerclean brush.



- 10** To turn off the vacuum cleaner in the Intelligent Power Control (IPC) mode, press once on the /AUTO button.



Operation

From the vacuum cleaner



- 1 To start the vacuum cleaner press the ON/OFF foot pedal. The vacuum cleaner will start in Intelligent Power Control (IPC) mode.
To switch off the vacuum cleaner press the ON/OFF foot pedal.



- 2 To change to manual mode, press the +/- buttons.



- 3 Set the Automatic floor head on the AUTO function. In this mode the Automatic floor head will adapt to the surface it is vacuuming by lifting and lowering the brush automatically.



- 4 To manually set the carpet function, slide the button towards the back, as indicated on the Automatic floor head.
To manually set the hard floor function, slide the button towards the front, as indicated on the Automatic floor head.



- 5 For short breaks, insert the nozzle in the side parking position, the motor will then stop running. If the break is longer than 5 minutes, the Sauber Intelligence will turn off automatically for safety reasons.



PB1 Powerclean Head

Green Light: The electric powerclean head is in operation.

Red Light: Automatic switch off function – the powerclean head is blocked and the motor is switched off automatically. When the motor of the brush has switched off, turn the cleaner off, remove the item that is blocking the brush and turn the cleaner on again.



- 1 Open the shutter and gently push the powered hose in the opening.



- 2 Connect the electronic control handle to the telescopic tube.



- 3 Connect the telescopic tube to the Powerclean head (PB1).



- 4 To extend the length of the telescopic tube slide the lock down.
To reduce the extension, slide the lock up.



- 5 Gently pull out the power cable and connect it to the power socket.



- 6 Switch on the vacuum cleaner, from the electronic control handle or from the vacuum cleaner.



- 7 Switch on/off the Powerclean head by pressing on the brush button on the electronic control handle.

When the Powerclean head (PB1) is placed in the park position, the vacuum cleaner enters stand-by mode and the Powerclean head (PB1) switches off for safety reasons. When restarting the Sauber Intelligence, the Powerclean head (PB1) must be switched on again.



PL1 Powerclean Brush



1 Open the shutter and gently push the powered hose in the opening.



2 Connect the Powerclean brush (PL1) to the powered hose.



3 Gently pull out the power cable and connect it to the power socket.



4 Switch on the vacuum cleaner from the electronic control handle or from the vacuum cleaner.



5 Switch on/off the Powerclean brush by pressing on the brush button on the electronic control handle.



6 The green light turns on to indicate that the Powerclean brush is operating. Keep moving the nozzle to avoid wearing of the fabric and overheating of the Powerclean brush.

VACUFLEX™

VACUFLEX™ is a patented flexible bottom plate for deep cleaning.

Removal of VACUFLEX™



1 To remove VACUFLEX™, hold the plate at one side edge. With little force, turn it down over the small side ramp. The locking of the plate will lift and automatically release itself.



Assembly of VACUFLEX™



2 To assemble the VACUFLEX™, click the plate on its lodging.

Application

Cleaning with VACUFLEX™



1 Use VACUFLEX™ to deeply clean mattresses, couches, sofas, car seats and all kinds of fabric and upholstery. The plate stretches the fabric surfaces creating a vacuum effect. This combined with the suction performance of the Sauber Intelligence will guarantee a deep efficient cleaning. The VACUFLEX™ high flexibility makes use of the Powerclean brush light and simple.

Cleaning without VACUFLEX™



2 Remove VACUFLEX™ to clean stairs and small carpet areas. This application requires air flow in order to allow dust pick up.

Important Information

The Powerclean brush (PL1) has been designed for small surfaces (max. 6m²), and is not suitable for big carpet areas or carpeted floors. The Powerclean brush (PL1) should not be used to clean leather or similar material.

It is not advised to use the Powerclean brush (PL1) on curtains and other hanging canvas.



PL1 Maintenance

Always switch off the vacuum cleaner and plug in the power cable before cleaning the Powerclean brush. Clean the Powerclean brush (PL1) regularly after use.

Cleaning the brush



- 1 If threads and other matter gets caught in the brush roll, remove the VACUFLEX™, carefully cut along the cutting groove of the roller, being careful not to damage the brush; then turn on the vacuum cleaner to suck in the loose threads. The Powerclean brush can be wiped clean with a damp cloth.

Automatic switch-off function

If the Powerclean brush is blocked the motor switches off automatically. If this occurs, switch off the vacuum cleaner, remove whatever item has blocked the Powerclean brush, and switch on again. If the Powerclean brush does not start again after cleaning, contact your local Sauber service centre.



Accessories



- 1 Use the small combination nozzle on the brush side for dusting.



- 2 Use the combination nozzle on the wing side to vacuum upholstery.



- 3 When vacuuming curtains, reduce the vacuum power manually.



- 4 The small combination nozzle can always be kept at hand by placing it on the handle support.



- 5 Use the crevice nozzle when vacuuming narrow spaces such as corners and grooves.



- 6 Place the radiator brush on the crevice nozzle.



Blowing function



- 1 Open the lid and push the powered hose into the blow port connection. Use the buttons on the vacuum cleaner, as the handle buttons do not work when using the blowing function.



- 2 Use the blowing function to dry shoes.

After use




- 1 Switch off the vacuum cleaner, unplug the power cable and press on the cable winder foot pedal to retract the power cable.



- 2 Always store your Sauber Intelligence as indicated in the picture in a cool, dry place.




Sauber **mediclean**™ a world revolution in healthy cleaning

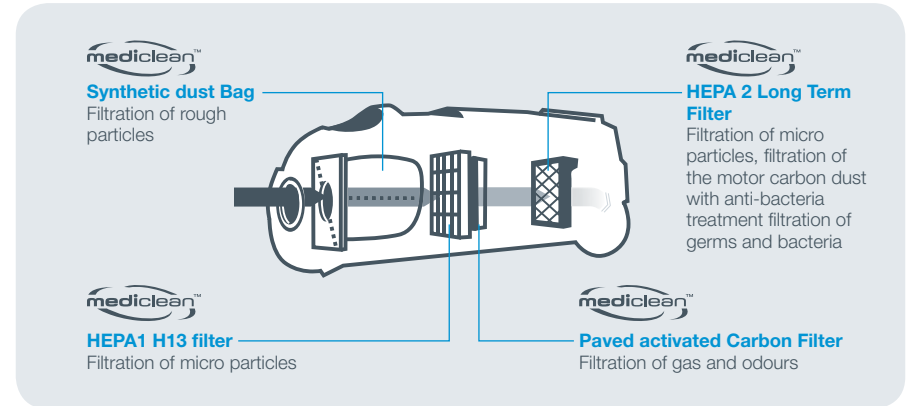

This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to a Sauber service or collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of this product.

LCD Display

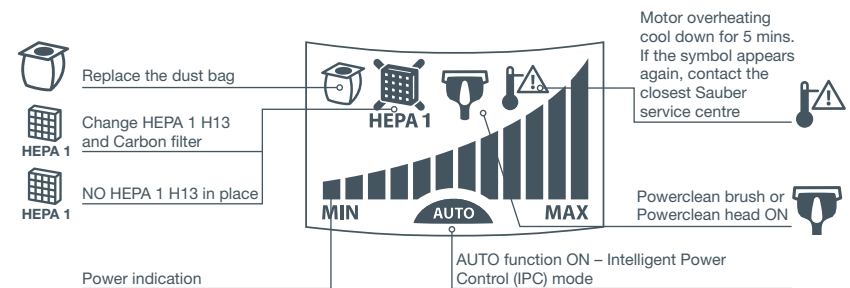



Replacement of consumables (Dust bag and filters):



1 Open the front lid by pressing on the opposite locking button.



2 To change the dust bag, take it out by the handle, dispose of it and replace it with a new bag. If the dust bag is not in place the lid will not close.



3 To change the HEPA 1 H13 and the carbon filter, unlock the HEPA 1 H13 filter handle in the upright position and pull out the filters. Dispose of them.



4 Click the carbon filter in the HEPA 1 H13 filter frame. Make sure that the filters are correctly in place. Lock the HEPA 1 H13 filter handle in position.



5 Replace the dust bag and close the front lid. The long term HEPA 2 filter lasts some years, with regular use, before it needs replacing.

The warranty may be void if ORIGINAL Sauber bags and filters are not used.



Technical Data

Double insulation CE conforms to the EU directive for CE certification.
Safety approved according to IEC335-1 and 335-2-2.

Dimensions: 57.5 x 25 x 23.5 cm
Weight: 6.7kg
Max. power consumption: 1250W
Max. motor power consumption: 1200 W
Voltage: 240v/50Hz
Noise level vacuum cleaner: 65 dBa
Operating radius: 12.5m

Sauber Intelligence is recommended by the German Allergy and Asthma Federation DAAB as a result of scientific tests run by the independent institutes TÜV NORD and GUI.

TESTED & RECOMMENDED BY EXPERTS



Approved by the National Asthma Council, Australia's Sensitive Choice Program on the basis of its exclusive five stage mediclean TM filtration system



Recommended by the German Allergy and Asthma Federation (Deutscher Allergie - und Asthmabund e. V. - DAAB).



Scientifically tested and demonstrated to effectively reduce fine dust in indoor air.



Suitable for people with allergies. Passed a voluntary indoor air hygiene test according to TUV NORD standards for house dust and indoor allergen retention.



PB1 Technical Data

Nominal power consumption: 80 W
Voltage: 240V / 50Hz
Noise level: 72 dB(a)
Brush width: 270mm

PL1 Technical Data

Dimensions: 28 x 19 x 9cm
Weight: 532gm
Brush width: 15cm
Power Consumption: 20W
Voltage: 240V / 50Hz
73/23/EU (amended by 93/68/EU).

Double insulation () CE complies with the EU directive for CE certification. Safety in accordance with 69/336/EU (amended by 91/263/EU, 92/31/EU and 93/68/EU). 73/23/EU (amended by 93/68/EU).

Parts and Accessories

Product Name	Product Code
Dust Bags (4 Pack)	3244 0274
Dust Bags (20 Pack)	3242 0356
Long Term Filter	3220 0718
HEPA 1 H13 Filter and Carbon Filter Kit	3220 0719
Bag and Filter Kit (includes 8 dust bags, HEPA 1 H13 filter and carbon filter)	3230 0004

Customer Service

For Customer Service or product enquiries please visit our website or call:

1800SAUBER
1800 728 237
www.sauber.com.au
www.sauber.co.nz



5 Year Warranty Sauber Intelligence



Conditions of warranty

Your Sauber cleaner, in the case of domestic use, has a 5 year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact International Cleaning Solutions Pty. Ltd.

PO Box 5445, Brandon Park, Vic 3150, or on 1800 728 237, Monday-Friday 9am-5pm EST.

The decision to repair or replace the cleaner is at the sole discretion of Sauber. If Sauber decide to repair or replace the cleaner, it will do so at its own cost.

Sauber is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Sauber Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Sauber will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

