



## Instruction Manual



**Please read this Manual before operating cleaner**

Congratulations on your purchase of your new vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction book so that you may take best advantage of them.

### **BEFORE YOU BEGIN**

This product must be operated in accordance with these instructions and used only for domestic cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics.

This cleaner is intended for domestic household use only and is not designed for the collection of vitreous building material including particle board construction products and similar products such as wood/fibres, sand, cement, fillers, fibre glass etc. The pickup of these materials may be harmful to your cleaner and will void the manufacturer's warranty.

Safety reminders and taking care of your cleaner.

### **PLEASE READ THESE INSTRUCTIONS THOROUGHLY.**

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Book in a handy place for future reference.

### **IMPORTANT**

Always switch the cleaner off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. The cleaner must only be connected to an AC supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions. Never operate the vacuum cleaner without filters.

DO NOT pick up hard or sharp objects, matches, hot ashes, cigarette ends or similar items.

DO NOT pick up flammable liquids such as cleaning fluids, petrol etc., or use in the presence of such vapors.

DO NOT use your cleaner out of doors or on any wet surface or for WET pick-up.

DO NOT run over the power cable with the Power Brush.

Young children should be supervised to ensure that they do not play with the appliance. Close attention is necessary when used near children.

\* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

If using an extension cord please make sure that it is of an approved type and that it is fully extended. Failure to do so could cause your cleaner to overheat and damage it.

## FAULTS

Do not continue to use this appliance if it appears to be faulty or the supply cord is damaged. If a fault cannot be rectified, please return to the point of purchase. If damaged, return the cleaner for repair by an authorised Service Centre in order to avoid a safety hazard.

Consult the trouble shooting guide in this manual if your vacuum cleaner fails to operate properly. Contact an authorised service agent if the problem persists.

## AFTER USE

Switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before attaching any accessories or cleaning the appliance.

## PROTECTING THE ENVIRONMENT

 
 
When you have unpacked the unit, do not simply throw the packing into the household waste. Take them to an appropriate collecting point for the recycling.

Hurricane Plus  
220-240V ~ 50Hz  
2000W MAX  
App. No.: A/11967EA



PROBLEM	CAUSE	SOLUTION
Motor does not start or stops.	No power supply	Check cable, plug and socket. If still inoperative, contact service agent.
Suction force gradually decreases	Filters are dirty, suction hose or wand is blocked	Clean or replace filters, remove objects from hose and wand.
Due to our program of continuous product improvement and innovation, sometimes the product you buy may differ slightly from the one shown on this product carton.		

# Hurricane PLUS

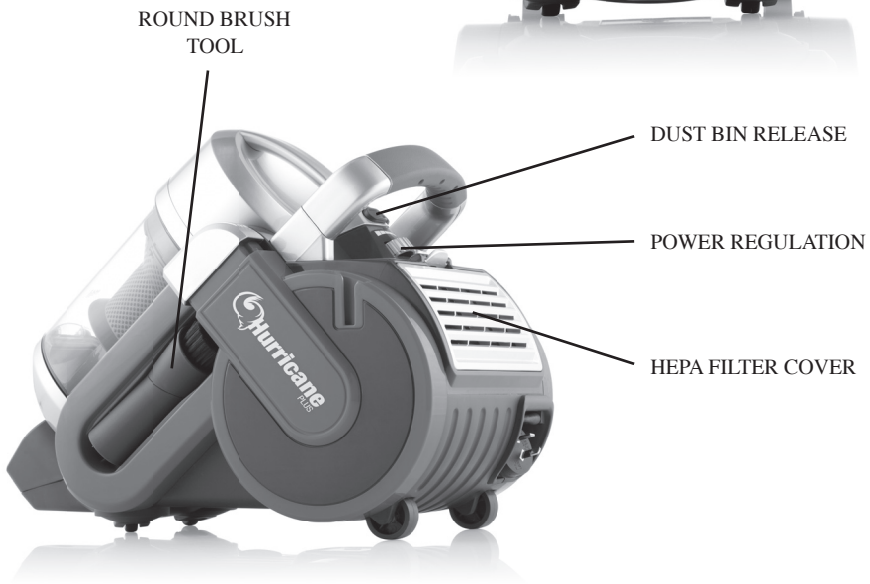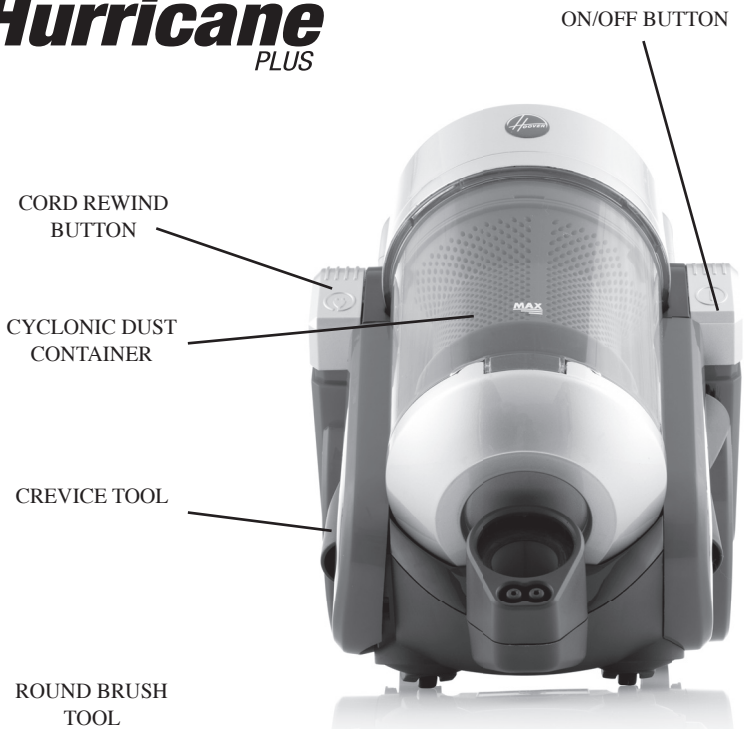


## ASSEMBLING YOUR CLEANER

The cleaner should be switched off and disconnected from the mains supply before you start to assemble.



 
1. Connect the hose body connector to the cleaner.

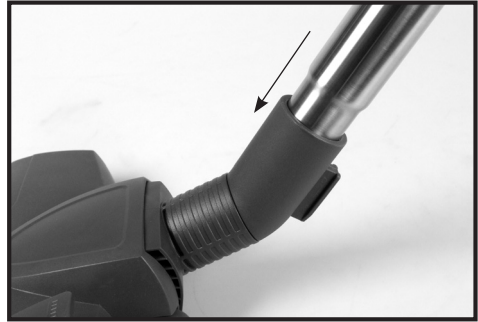

2. Insert the wand into the floor brush.



 3. Fit the other end of the telescopic wand to the hand piece.

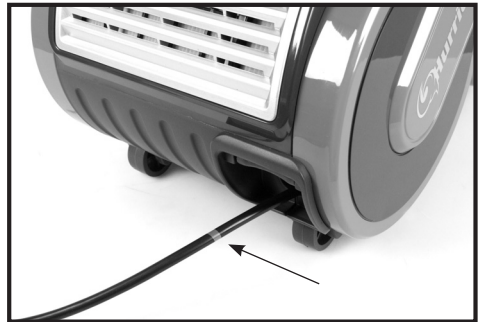

4. Never extend the power cord further than the yellow mark.




5. Press the On/Off button to switch the appliance on.



6. Rotate the power regulation knob to adjust the performance of the appliance.

## CLEANING THE CYCLONIC FILTER

 
The cleaner should be switched off and disconnected from the mains supply. Never operate without filters as damage to cleaner could occur.

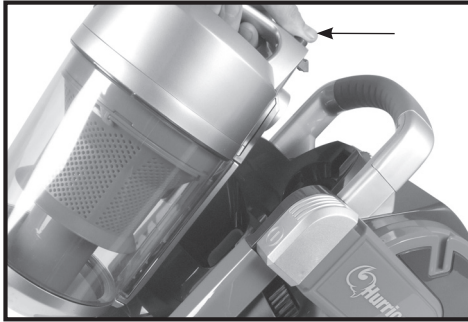

1. To access filters move press the dust bin release button.



 2. Once the dust bin is released, press the cover release button.

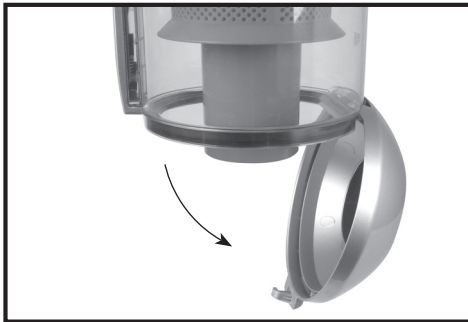

3. Ensure the dust bin is over a disposal area before releasing the cover.



4. If there is dust on the filter, twist the container anti-clockwise to release the cover.



5. To clean motor air inlet filter, lift off top and rinse in warm water. Allow to air dry for a minimum 24 hours. Filter must be completely Dry before refitting



6. To clean dust filter, simply lift the filter out wipe with a cloth or simply rinse with warm water. Must be dry before refitting

## CHANGING OR CLEANING THE HEPA FILTER

The cleaner should be switched off and disconnected from the mains supply.  
Never operate without filters as damage to cleaner could occur.



1. Remove filter cover by squeezing the tab on the rear of appliance.



2. Remove HEPA filter and replace, or rinse with warm water. Allow to dry for 24 hours.

Clean up the dust in the dust container regularly to avoid failure.

When cleaning, avoid scrubbing with a brush as it may damage the filters.

All filters must be allowed to air dry for minimum 24 hours.

Filter must be completely Dry before refitting.



# 2 Year GUARANTEE

This guarantee applies in Australia and New Zealand only.  
For the guarantee in another country, please  
contact your local retailer/distributor.

Your new Hoover cleaner which has been fully tested, inspected and adjusted, carries in the case of domestic users, a two year parts and labour guarantee against defects. This product is warranted 90 days for commercial usage.

This cleaner is intended for domestic household use only and is not designed for the collection of vitreous building material including particle board construction products and similar products such as wood/fibres, sand, cement, fillers, fibreglass etc.

The pick-up of these materials may be harmful to your cleaner and will void the manufacturer's warranty.

Brushes and filters, unless actually defective in manufacture are not subject to this guarantee since their length of life depends upon usage and care given. Any transportation costs involved in the repair of the appliance or the replacement of a defective part shall be borne by the claimant.

This Guarantee commences from the date of purchase of the cleaner.

When properly used and cared for, your new cleaner will render excellent service, and therefore, the purchaser should carefully read the instruction book, as misuse or failure to follow the instructions makes this guarantee void. It also becomes void if the product is used on an electric voltage other than that shown on the rating plate.

E.H.A Pty Ltd is unable to accept responsibility under this guarantee for damage from repair work carried out by other than authorised service retailers or centres, or from the use of other than genuine parts.

This guarantee does not apply to the cost of replacing any part of the product due to normal wear and tear, alteration, improper installation, physical abuse, misuse or accident.

In the event of service or advice being needed, please contact your retailer.

The benefits conferred by this guarantee are in addition to all other rights and remedies in respect of the product which the consumer has under the Trade Practises Act and other State and Territory laws.

## **Keep this Guarantee and your receipt as proof of purchase**

Purchase Date...../...../.....

Our policy is one of continuous development and accordingly we reserve the right to change specifications without prior knowledge.

E.H.A Pty Ltd (ACN 007 539 577)

Locked Bag 120 Silverwater D.C. 1811 NSW