

6KG Tumble Dryer

/ GVA6KG



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed. Read all instructions carefully, even if you are quite familiar with the appliance.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person who is responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance.
- Indoor use only - this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles on the appliance.
- Do not allow the appliance or cord near the heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
- Do not run the cord under floor coverings. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
- To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way.
- Do not attempt to repair, disassemble or modify this appliance. The warranty becomes void if not serviced or repaired by a qualified person.
- Do not place items that have been soiled with flammable liquids inside the dryer without washing them with detergent thoroughly before hand.
- Do not excessively bend, stretch, twist or bind the power cord or place heavy objects on it.
- This appliance is only to be serviced by a qualified person. There are no user-servicable parts inside.
- Do not use an extension cord with this appliance.
- Do not install in a tight fitting cabinet.
- Do not overload the tumble dryer.
- Ensure foreign objects do not find their way into the tub of the tumble dryer.
- The door window may be hot after a long drying cycle. Please ensure children are kept away from the machine.
- If the tumble dryer is not wall mounted, place in a flat, firm, dry and drafty place. Use the adjustable front legs to assist in levelling the dryer if need be. Do not place it on any soft material such as foam or plastic.
- Do not use flammable or combustible materials such as gas, petrol, alcohol or lacquer in the tumble dryer.
- After turning off the power supply to the tumble dryer, wait at least 2 minutes before turning it back on again.
- Please remove the transport packaging at the rear of the tumble dryer, prior to use.

Important Safety Instructions

- If the supply cord is damaged, it must be replaced by service agent or similarly qualified persons in order to avoid a hazard.
- Avoid fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should be washed in hot water with extra detergent, this will reduce, but not eliminate the hazard.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.

To minimize the risk of fire in a tumble dryer, the following should be observed:

- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.
- Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.
- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers.
- Items containing foam rubber (also known as latex foam) or similarly textured rubber. like materials should not be dried in a tumble dryer on a heat setting.
Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer.
- Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes should not be placed in a tumble dryer.

Important Safety Instructions

 
WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items quickly removed and spread out so that the heat is dissipated.

CAUTION: If this appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

Oil-affected items can ignite spontaneously, especially when exposed to the heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Parts

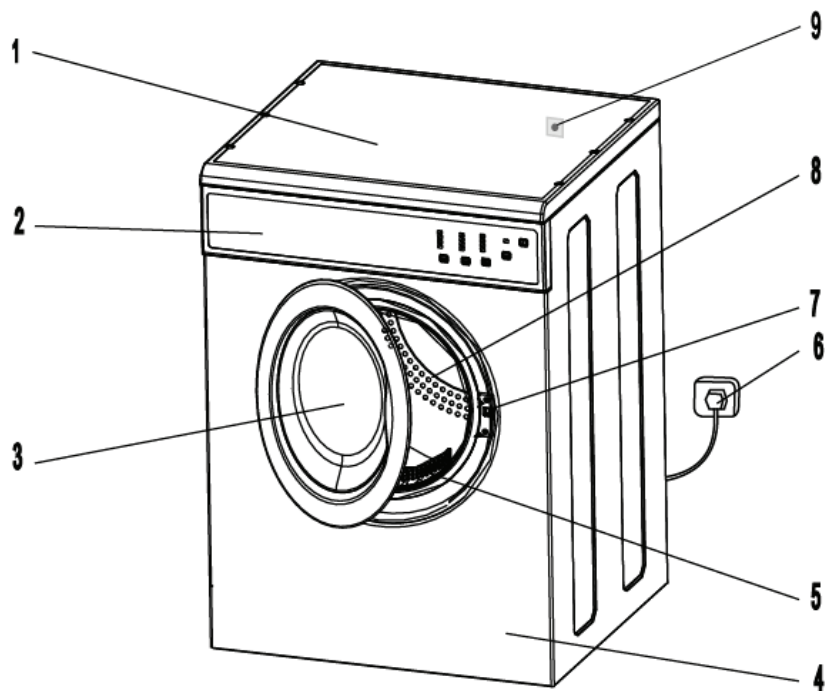


1. Topboard
2. Control panel
3. Door
4. Cabinet
5. Filter
6. Power lead
7. Door lock
8. Tumbling box
9. Reset button

Operating Instructions

Electrical Requirements

 The unit is required to be plugged into a three pin socket that is reliably grounded. The power supply must be 240V. Plug the power cord into the socket.

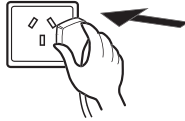


Loading the dryer

It is recommended that items are placed into the dryer one at a time. This ensures they are not tangled which results in uneven drying. When closing the dryer door prior to starting the unit ensure that items are not jammed in the door.

Tips before drying

 Prior to loading the dryer check that the items do not have the following symbols anywhere on them. If they do, do not tumble dry these items.

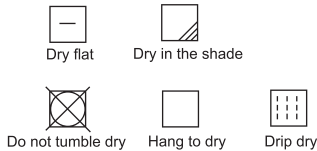

- Check the items to be dried do not have combustible materials or foreign objects within them ie: lighters, hair pins, coins.
- Turn items with zippers inside out and fasten buckles.
- Dryer heat may permanently set stains, ensure you check prior to drying.
- Separate dark and light colored items as you would do when washing.
- For best results load the dryer with similar fabrics. Place small delicate items in a mesh bag and do not overload the dryer.
- The maximum mass is 4.0 kilograms of dry textile material for the dryer and do not overload. The tumble dryer is intended only for drying textile material washed in water.


Drying time reference table

Program	Max volume of dry clothings	Temperature	Clothings type	Air-cold	Anticrease	Child-lock	Max dry time
1 hour dry	4.0~6.0kg	full ✓	Quick drying clothes	10min	✓	✓	70min
	<4.0kg	half ✓					
	6.0kg	Air-dry ✓	Fine fabric and clothing not requiring heat to dry				
Light dry	4.0~6.0kg	full ✓	Chemical fiber and small clothing	10min	✓	✓	100min
	<4.0kg	half ✓					
Middle dry	4.0~6.0kg	full ✓	Cotton weaving and jeans	10min	✓	✓	120min
	<4.0kg	half ✓					
Extra dry	4.0~6.0kg	full ✓	Cotton clothes, jeans and bedsheets	10min	✓	✓	150min
	2.0~4.0kg	half ✓					
	<2.0kg	full ✓	Cotton weaving and jeans				10min

Drying times can be affected by many factors, such as material, bulkiness, how full the dryer is, etc. The above list is only a guide.

NOTE: Cold air function circulates air for 10 minutes at the end of program. This ensures that the items are left at a temperature and that the items will be be damaged. Crease Guard adds an extra 30 seconds after the program to shake clothes in order to protect against creasing.

 Control Panel Functions

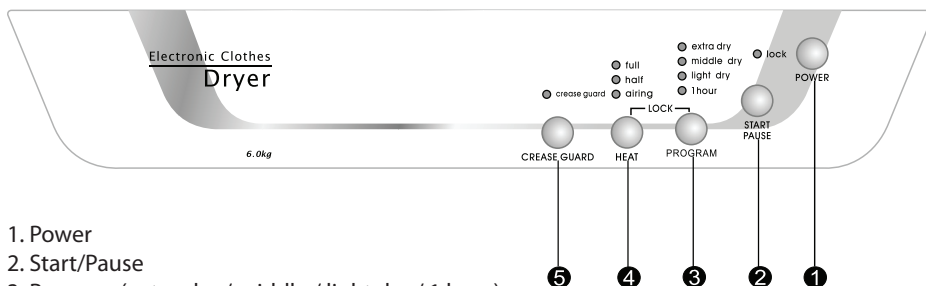

1. Power
2. Start/Pause
3. Program (extra-dry / middle / light dry / 1 hour)
4. Heat (Full / half / airing)
5. Crease Guard

NOTE: Push PROGRAM and HEAT at the same time, this will enable the lock function. This can help avoid children playing with the device.

 
Operation

1. Push Power button.
2. Decide on a program according to the texture and capacity of the clothes. Select the program by pushing the 'PROGRAM' button repetitively until the indicator light cycles to the desired program.
3. Decide on a temperature setting according to the texture and capacity of the clothes. Select the temperature setting by pushing the "HEAT" button repetitively until the indicator light cycles to the desired setting.
4. Press the "CREASE GUARD" button if expensive or easily creased clothed are being dried. Crease guard is indicated on/off via the "crease guard" light.
5. Push "START/PAUSE" button, this will start the program. If you wish to pause the program to add more clothed push the "START/PAUSE" button again. Be careful when opening dryer door, hot steam can release. To continue program, make sure the door is closed then push the "START/PAUSE" button once again. When the dryer is in pause mode it is possible to change or restart programs.
6. Control panel lock feature is initialized by pushing both "PROGRAM and "HEAT" buttons at the same time. When the lock feature is enabled it is indicated by a light, pushing the buttons again will disable the feature.
7. If the unit does not heat, push the reset button located at the back of the unit.


NOTE: Push all buttons will cause a short buzz sounds with flashing indicator lights.

Operating Precautions

- Delicate items should be placed into a nylon net bag prior to drying. It is not recommended to dry under wire bras in this suit.

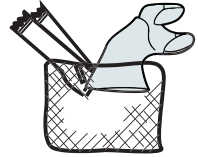

 
- Ensure that foreign objects do not find their way into the dryer. All pockets should be emptied, buttons, buckles and zips fastened. This will also help reduce impact noise when the items hit against turning drum.

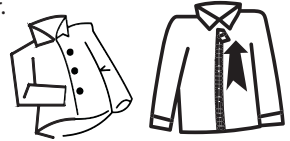

- Do not add items into dryer whilst it is in operation.



 - If drying large items such as a blanket, it is recommended that from time to time you open the dryer door, shake the item, place the item back in the dryer and close the door. This will ensure even drying.

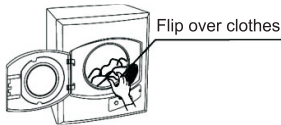

- If any of the below labels are on an items that you are going to place in the dryer, do not put these item into dryer, as the dryer may damage the item.



Dry flat



Dry in the shade



Do not tumble dry



Hang to dry



Drip dry

- Avoid fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent, this will reduce, but no eliminate the hazard.

 
- The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.

Operating Precautions




- Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/ gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in tumble dryer.
- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers.
- Items containing foam rubber (also known as latex foam) or similarly textured rubber like materials should not be dried in a tumble dryer on a heat setting.
- Foam rubber materials can, when heated, produced fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in the tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer.
- Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or waterproof napkin covers should not be placed in a tumble dryer.
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.

Wall Mounting Instructions

1. Determine dryer position on the wall and mark the required bracket position. This dryer is not suitable to be directly placed on top of a washing machine. A minimum 50mm is needed between the top of the dryer and the ceiling for ease of installation. If mounting above a washing machine, allow sufficient room to open the lid of the washer.
2. Fix 2 metallic braces onto the wall which align with the mounting slots of the dryer.

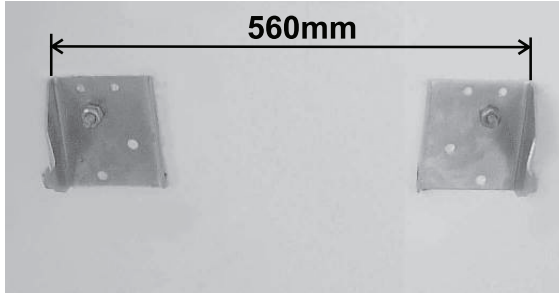

   3. Make sure the mounting wall is of sufficient strength to support the dryer weight.
4. To convert dryer turn anti-clockwise 182 degrees, Then place the plastic supports into their slots and turn them 90 degrees to lock them into position.

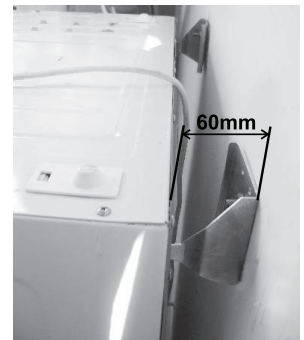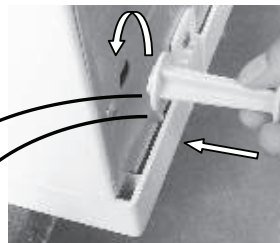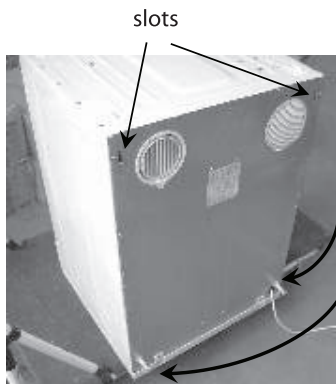

5. Carefully raise the dryer and hang it onto the metallic hooks. Slowly let the weight onto the hooks and let the plastic supports rest again on the wall.
WARNING: the dryer weight exceeds 35kg, please obtain assistance.
6. Replace the panel sticker with the supplied inverted sticker.

Maintenance

Cleaning the lint filter

Please unplug the power cord prior for any cleaning. The lint filter must be in place whenever drying. It must be cleaned before each use.

1. Removing the filter

The lint filter is located in the door opening, remove the lint filter and open it up.

1. Cleaning the filter

Wipe down with a damp cloth.

1. Re-installing the filter

Once the filter is dry, reinstall into the door.
Wipe the filter after use everytime..




Cleaning the interior and exterior of the dryer

- Do not wash directly with water.
- Do not use thinner gasoline or alcohol.
- Do not use any type of spray cleaner when cleaning the interior. If dryer drum becomes stained, clean the drum with a damp cloth.
- Remove any residue before drying the next load.
- Clean cabinet with mild soap and water. Do not use harsh or abrasive cleaners, this could damage the dryer.

NOTE: Regularly clean the lint filter.



Maintenance

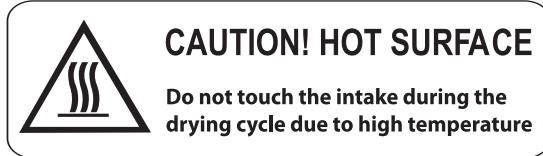

Recycling

At the end of its working life, do not throw this appliance out with your household rubbish. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Warning and Error signals

FAULT	POSSIBLE CAUSE	FAULT INDICATION (LIGHTS)	FAULT INDICATION (SOUND)	SOLUTION
Exceed temperature alarm	<ul style="list-style-type: none"> The inner tube temperature exceeds 63 degrees. 	<ul style="list-style-type: none"> "middle dry" & "extra dry" indicator lights flash. 	<ul style="list-style-type: none"> The buzzer sounds for 10 seconds. If the program is not solved, the sounds every 15 seconds. 	<ul style="list-style-type: none"> Turn off the dryer, wait for the dryer to cool down.
Open door alarm	<ul style="list-style-type: none"> The door has opened during use 	<ul style="list-style-type: none"> "light dry" & "middle dry" indicator lights flash 		<ul style="list-style-type: none"> Close door
Temperature sensor malfunction alarm	<ul style="list-style-type: none"> Program start sensor open. Program start sensor short. 	<ul style="list-style-type: none"> "1 hour" & "light dry" indicator lights flash. "1 hour" & "middle dry" indicator lights flash. 		<ul style="list-style-type: none"> Reset the dryer. If the problem reoccurs call After Sales Support.

NOTE: This machine will auto power-off after 10 minutes when you do not set any programs. This machine will auto power-off after 6 buzzes on drying.

FAQs

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Dryer wont start	<ul style="list-style-type: none"> • Power cut • Power plug not correctly connected. • Dry clothes exceed maximum volume. • Temperature fuse is cut. 	<ul style="list-style-type: none"> • Wait for power to restore. • Check the power socket and make sure plug is connected tightly. • Remove clothes and check dampness, max volume of the dryer if 6kg. • Change the temperature fuse.
Drum does not turn	<ul style="list-style-type: none"> • Is the door closed? • Is the power cord inserted? • Does the receptacle have power? 	<ul style="list-style-type: none"> • Close the door. • Insert the power cord firmly. • Check the power cord receptacle.
Hot air is not blowing out	<ul style="list-style-type: none"> • Is the timer incorrectly set on cold air? 	<ul style="list-style-type: none"> • Set the timer to hot air.
The laundry is not thoroughly dried	<ul style="list-style-type: none"> • Are the front and back filters clogged? • Is there too much laundry in the dryer? • Have items been added whilst the dryer is in operation? • Has the laundry been twisted whilst drying? • Has the dryer been placed in a small and badly ventilated area? • Have you set the dryer to anti-wrinkle? 	<ul style="list-style-type: none"> • Clean the filter. • Reduce the amount in the dryer. Re-dry the items again. • Untwist the items and re-dry. • Place the dryer in a well-vented area. • Try using "Warm" or "Hot" setting instead.

NOTES
