

REMINGTON®
SALON PRO

KERATIN THERAPY TONG

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



KERATIN

ADVANCED CERAMIC

2 YEAR **WARRANTY**

CI5319LAU

IMPORTANT SAFEGUARDS

Warning: Do not use this appliance near bath tubs, showers, basins or other vessels containing water.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER.

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug the appliance immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

Remington strongly recommends that an approved Safety Switch (residual current device) should protect all bathroom power outlets. Ask an electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS.

- Your styler should never be left unattended when plugged into a power outlet.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this styler only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this styler if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged or dropped into water. If the supply cord or plug of this styler is damaged it must only be replaced by a qualified electrical tradesperson.
- Keep the power cord away from heated surfaces.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this styler.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The barrel will be very hot during use. Do not let bare skin touch the heated surface.
- Do not place the heated styler on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.

SAVE THESE INSTRUCTIONS

CI5319LAU KERATIN THERAPY TONG USE AND CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Keratin Therapy Tong. This 19mm salon style clipless tong features an Advanced CeraSol Ceramic barrel infused with heat activated Keratin to promote healthy hair and smooth shiny curls.

KEY PARTS

1. Advanced CeraSol ceramic barrel infused with heat activate Keratin
2. Integrated protective stand
3. On and ready LED indicator light
4. Variable heat dial with 30 variable heat settings
5. On/off switch
6. Salon swivel cord
7. Heat protective glove



ADVANCED CERASOL CERAMIC BARREL INFUSED WITH KERATIN

The heat activated Keratin which is infused into the Advanced CeraSol ceramic barrel will rise to the surface of the barrel and transfer to the hair while curling, for silky, smooth shiny styles.

KERATIN

Keratin is a naturally occurring protein that is a vital element in strong healthy hair. Remington's patent pending coating uses 'bio' technology functional Keratin which has the same Keratin structure as human hair and is proven to restore, repair and enhance shine.

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to styling.

Dry your hair thoroughly before using the styler and make sure that it is tangle free.

Keratin Therapy Tong is not suitable for use on synthetic hair wigs or hair extensions.

AUTOMATIC VOLTAGE ADJUSTMENT

The Keratin Therapy Tong features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

Note: - Some countries will require the use of a plug adaptor that is not included with your styler.

HOW TO USE YOUR REMINGTON® KERATIN THERAPY TONG

Place the styler on a flat, hard, heat resistant surface. Plug in to any household (120/240V AC) power outlet. To switch on press the on/off switch.

The LED on and ready indicator light on the top of the styler will illuminate. The LED on and ready indicator light will flash while the barrel of the tong is heating to the temperature selected. When the temperature selected has been reached the LED on and ready indicator light will be steady.

To select a higher temperature rotate the variable heat dial clockwise towards "+". To select a lower temperature press rotate the variable heat dial anti-clockwise towards "-". The lowest temperature setting is 80°C. The highest temperature setting is 210°C.

Take extra care when using the tong, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use to prevent over drying or damage to your hair. If in doubt, start with the low temperature setting first and increase the temperature gradually.

To switch your styler off, press the on/off switch.

AUTO OFF SAFETY FEATURE

If the styler is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

CURLING YOUR HAIR

- Ensure your hair is completely dry.
- To make styling easier, part the hair either in the middle or to the side and use clips to section your hair, top, sides and back.
- You may need to comb through your hair before styling to ensure that it is tangle free.

- Start at the nape of the neck and curl the underneath sections of hair first. When the underneath sections of hair are complete, move to the next layers, finishing with the hair around the part line.
- Take about a 5 cm section of hair and pull taut and down and away from the scalp.
- Holding the tong with the other hand, start near the roots and wind your hair around and along the barrel. Start at the base of the barrel and wind your hair around until the length of your hair is around the barrel. Try not to overlap or twist the hair.
- Keep hold of your hair and hold the tong in place for a few seconds depending on the texture and length of your hair. The tightness of the curl is determined by how tightly you wrap the hair around the tong and how long you hold the hair in place.
- To release your hair for a super sleek curl, tilt your tong so the tip of the barrel points down, and release the hair and let it slide off the barrel.
- Repeat until the desired amount of curl has been achieved.
- Allow your curls to cool so the curls are fully set. Once cool run your fingers through the hair to break up the curls.
- You can complete your style with a finishing serum or hair spray.

A heat protective glove is included with your styler. Place the glove on the hand that is winding the hair around the barrel.

MAINTENANCE

This styler is designed for household use and is virtually maintenance free.

If cleaning becomes necessary, disconnect the styler from the power outlet, allow it to cool, then wipe the exterior surface and the high grade ceramic barrel infused with Keratin with a soft damp cloth.

Do not immerse the unit in any liquid. **Do not** use an abrasive cleaning fluid or material to clean the high grade CeraSol ceramic barrel infused with Keratin as this will scratch the surface and deteriorate the effectiveness of the surface.

STORAGE

When not in use, always unplug the unit from the power outlet. Allow the styler to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the styler as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug and styler connections. If the cord becomes twisted in use, periodically straighten it.



This product is not suitable to use in a bath or shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

Building C, Ground Floor

600 Great South Road,

Greenlane, Auckland 1051 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON®

REMINGTON SERVICE HOTLINE

- ① Australia 1800 623 118 (toll free)
- ① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., or one of its subsidiaries

© 2011 SBI

Rev. 11/11

Part No. T22-33511