

REMINGTON®
SALON PRO

SILK CERAMIC HEATED ROLLERS AND CLIPS

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au

20 VELVETY HEATED ROLLERS

SILK CERAMIC TECHNOLOGY

2 YEAR WARRANTY

H9096AU

IMPORTANT SAFEGUARDS

Warning: When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this styler.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The barrel of the rollers of this styler will be very hot during use. Do not let bare skin touch heated surfaces. Handle the rollers by the cool touch rims.
- Do not place the heated styler on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.

SAVE THESE INSTRUCTIONS

H9096AU SILK CERAMIC HEATED ROLLERS AND CLIPS

Use & Care Instruction Manual

Thank-you for purchasing your Remington® Silk Ceramic Heated Rollers and Clips. The Silk Ceramic heated rollers and clips are perfect to use when you need to add extra volume or to create soft waves.



KEY PARTS

1. 20 Soft Heated Rollers in two sizes
 - a. 8 Medium
 - b. 12 Large
2. 20 Silk Infused Heated Clips
3. Stay cool outer rims
4. Hinged lid
5. LED light
6. Storage case

DUAL HEATING TECHNOLOGY

The heated clips allow heat to penetrate the hair from the outside as well as from the roller on the inside. Maximum heat transfer onto the hair sets the curls faster and holds them longer; creating curls in 5 minutes.

SILK CERAMIC TECHNOLOGY

Silk ceramic ionic technology, helps seal the hair cuticle to repel humidity and static for incredible lasting frizz-free shine. This combined with the setters high heat and professional performance, gives a faster way to get long-lasting, salon quality curls.

HOW TO USE YOUR REMINGTON® SILK CERAMIC HEATED ROLLERS AND CLIPS

- Place the unit on a flat, hard, heat resistant surface and close the lid. Plug in to any household (220/240V AC) power outlet and switch on.
- The power indicator LED light will illuminate.
- The rollers will be ready in 90 seconds. Allow 3 to 5 minutes for best results.
- For a soft, wavy curl, use the rollers for only a couple of minutes. For a tighter curl, leave the rollers in the hair for 5-10mins.

Caution: These rollers and clips are hot, open the lid when fully heated and wait for one minute before using the rollers.

1. Get Ready

Before setting, hair should be dry or only slightly damp, but never wet. Section the hair and comb it smooth. Roll the hair as usual in the direction of desired style. To secure each roller, place the clip crosswise over the rollers.

2. Get Set

Continue until your entire head is set. The time the rollers are left in affects the tightness of the curl. The shorter the time, the softer the curl. Rollers will remain actively curling for approximately 15 minutes.

3. Go!

To release secured roller, remove each clip and roller gently. Unwind, never pull. Place roller back on the heating element rail. Let each new curl spring back into position and cool for a moment. Then brush out hair and style.

ROLLER PLACEMENT

To maximise the roller temperatures, place the larger rollers on the front three rails and the medium rollers on the back two rails. Ensure rollers and heated clips are correctly placed on the heated rails.

Do not touch the roller rails to with your bare skin as they can get very hot.

MAINTENANCE

Your appliance is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power source and wipe with a damp cloth. Clean the rollers with a damp cloth and mild soap.

NEVER immerse the rollers or the base in water.

STORAGE

When not in use, unplug the unit, retract the stand and close the lid. Allow it to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections. If the cord becomes twisted in use periodically straighten it.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited,
as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc.(SBI), or one of its subsidiaries

©2015 Spectrum Brands Inc.

Rev. 04/15

Part No. T22-0003351

