

Kambrook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

www.kambrook.com.au

Kambrook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513

www.kambrook.co.nz

KAMBROOK

THE SMARTER CHOICE



Jaguar 1600W
Vacuum
Cleaner

KVC50

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Jaguar 1600W Vacuum Cleaner	p6
Operating Your Kambrook Vacuum Cleaner	p7
Care and Maintenance	p8
Troubleshooting Guide	p11

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Jaguar 1600W Vacuum Cleaner

- Carefully read all instructions before operating the vacuum cleaner for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the vacuum cleaner for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this vacuum cleaner.
- Always ensure the vacuum cleaner is properly assembled before use. Follow the instructions provided in this book.
- Ensure that the power source to be used is the same as the voltage requirements of the products.
- Always switch the vacuum cleaner to 'OFF', switch off at the power outlet, and unplug the vacuum cleaner prior to cleaning the filters or changing the dust bag.
- Never use the vacuum cleaner without a dust bag and motor protection filter correctly fitted and in place.
- Never use the vacuum cleaner to vacuum hot ashes, broken glass, sharp objects, or liquids.
- Never use in the presence of explosive liquids or vapours.
- Never vacuum up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never vacuum up acids, asbestos or asbestos dust.
- Do not leave the vacuum cleaner unattended when in use.
- Close supervision is required at all times when operating the vacuum cleaner near children.
- Fully extend the cord (to the yellow tape mark) whenever the vacuum cleaner is in use. Ensure that the cord is not extended past the red tape mark.
- Do not store outdoors.
- Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the vacuum cleaner housing as these can damage the housing.
- To avoid an electrical overload, it is recommended that no other appliances are plugged into the same circuit as your vacuum cleaner when it is in use.
- Hold the plug end when retracting the cord to prevent it from striking you or the vacuum.
- Once the dust bag is inserted 'puff-out' the bag as much as possible to ensure the full capacity of the bag can be used.
- Dirty and clogged filters may result in reduced suction performance. It is recommended that filters are cleaned after every use and replaced regularly to ensure maximum efficiency from your vacuum cleaner. If filters are left unclean, it may result in reduction of suction power.
- Clean the floor tools regularly.
- Keep the vacuum cleaner clean. Follow the cleaning instructions provided in this book.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
 - Connect only to 230V or 240V power outlet.
 - Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
 - To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
 - Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
 - This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats.
- Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
 - Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
 - Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
 - Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
 - Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Jaguar 1600W Vacuum Cleaner

1. 1600 watt motor
2. Cord rewind button
3. Power On/Off button
4. Dust bag compartment
5. Dust bag full indicator
6. 360 degree crush proof hose
7. Variable speed control
8. Cord storage outlet
9. Telescopic chrome wand
10. Carry handle
11. Multi-terrain floor tool to vacuum all floor surfaces
12. Crevice, small brush and upholstery attachments

Not Shown

- Motor protection filter
- Exhaust filter compartment



Operating Your Kambrook Vacuum Cleaner

Before First Use

Remove all packaging from the unit, hose and other accessories; ensure that you have removed all of the accessories before discarding the packaging.

Ensure that the dust bag and filters are correctly fitted.

Locate the crush proof hose and push the connection point into the hose inlet connection on the top of the vacuum, until a "CLICK" sound is heard.

Connect the wide end of the metal wand to the hose end and push together firmly.


Fit the floor tool to the narrow end of the wand and push together firmly.

Fully extend the power cord by pulling the power plug (situated at the rear of the unit) out from the unit, until the yellow tape on the cord is shown.



IMPORTANT: Ensure that you do not over extend the power cord, do not extend past the red warning tape on the cord.

Plug into a 230V or 240V power point and switch on.

To commence vacuuming, push down on the 'ON/OFF' button , at the top, rear of the unit.

When vacuuming is complete, push down on the 'ON/OFF' button to switch OFF. Turn the power off at the outlet and then remove the power cord from the power outlet (when removing plug from the power outlet grasp the plug not the cord).

To retract the cord push down on the

'CORD REWIND' button .



IMPORTANT: Hold the plug end when retracting the cord to prevent it from striking you or the vacuum.



WARNING: Always ensure that the dust bag and the motor protection filter are correctly fitted. Never operate without the dust bag and filters in place.

Variable Power Control

The variable power control slide switch is located on the top of the vacuum cleaner. Slide the control to 'MAX' for maximum power for vacuuming hard floor and carpet surfaces. Slide the control 'MIN' for minimum power level when using the crevice, upholstery and brush tools.

Crevice, Brush and Upholstery Tool Accessories

The crevice tool is ideal for vacuuming hard to reach places such as the edges along skirting boards.

The brush and upholstery tool can be used to vacuum delicate surfaces and areas such as shelves and venetian blinds.

Set the variable speed control between minimum and medium power when using the tool accessories. Turn off the vacuum cleaner when changing any attachments.

Care and Maintenance

Replacing Cloth bag or Paper dust Bag

With your vacuum cleaner you have the option of using a cloth bag or paper dust bag.

The dust bag should be changed when full. The dust bag indicator window will gradually turn red as the bag fills up and when the dust bag indicator displays 'red', it is time to change the dust bag.

Always switch the vacuum cleaner 'OFF', then switch off at the power outlet and unplug the vacuum cleaner prior to replacing dust bags or filters.

To remove the dust bag, ensure the vacuum is down on its wheels, remove the crush proof hose and push the 'Dust bag compartment lid release lever' located at the front of the unit. Once the lid has released, pull the top cover back.

To remove the bag, grasp the top of the dust bag and pull out. If you are using the cloth bag dispose the dust in a rubbish bin. If you are using a paper dust bag you can dispose the bag with its contents in the rubbish bin.

To place a new dust bag, take a fresh dust bag and with the arrow (printed on the front section of the dust bag) pointing down, slide the dust bag down into the holder, until it comes in contact with the bottom of the holder, then push the holding clip forward to secure.

NOTE: Once the bag is inserted 'puff-out' the bag as much as possible to ensure the full capacity of the bag can be taken up.

When vacuuming fine dust particles, the fine dust particles can clog the pores of the dust bag and the dust bag indicator will indicate full. If this happens the bag could appear relatively empty, however the bag will still need to be changed to avoid strain on the motor.

NOTE: The bag compartment lid may not close if the bag is not correctly fitted.



WARNING: Do not use the unit without a dust bag in place.

Always switch the vacuum cleaner 'OFF', then switch off at the power outlet and then unplug the appliance prior to cleaning or replacing filters.

Cleaning and Replacing Filters

Filters must be cleaned from time to time to remove the fine dust particles that have been collected. This can be done by shaking them; however after approximately 5 dust bag changes, the filters should be replaced.

Motor Protection Filter

The motor protection filter must always be in place when operating the vacuum otherwise damage to the motor may occur.

To clean or replace the motor protection filter, remove the dust bag or pull the bag forward. The motor protection filter sits in grooves located at the rear of this dust bag chamber. Pull the plastic filter holder upward to remove. To clean, separate the foam filter from the plastic holder and shake debris from the filter into a garbage receptacle.

When clean, replace the foam filter into the plastic holder and reinsert into the vacuum by pushing downwards into the grooves provided. To replace the filter, dispose of old filter and insert a new, clean filter into the vacuum cleaner.

Exhaust Filter

The exhaust filter should be cleaned after every use for maximum vacuuming performance. To clean, simply unclip the grill at the back of the vacuum cleaner and shake and tap the filter to remove any dust accumulated. Then relocate the filter and reattach the grill.

NOTE: Dirty and clogged filters may result in reduced suction performance. It is recommended that filters are cleaned after every use and replaced regularly to ensure maximum efficiency from your vacuum. If filters are left uncleaned, it may result in reduction of suction power.

Care and Maintenance continued

Cleaning the Exterior

To clean the outside of the unit, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

Clean and/or replace both the motor protection and exhaust filter on a regular basis.



WARNING: Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the vacuum cleaner housing as these can damage the housing.



WARNING: Clean the floor tools and accessories regularly.

Spare Parts

To order spare parts for your Kambrook Vacuum Cleaner including Filters and Dust Bags, please contact Customer Service on:

1300 139 798 (Australia)
or 0800 273 845 (New Zealand).

Dust bag and replacement filter spare part code: KVB50.

Troubleshooting Guide

Troubleshooting

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Vacuum cleaner is not working	<ul style="list-style-type: none">• The unit may not be plugged into power outlet	<ul style="list-style-type: none">• Ensure the power plug is securely plugged
Vacuum cleaner is not picking up dirt	<ul style="list-style-type: none">• Dust bag is full• Filter is clogged• Dust bag is not fitted correctly	<ul style="list-style-type: none">• Empty/replace dust bag• Refer to 'Cleaning and Replacing Filters', page 9• Check dust bag installation
Dust escaping from vacuum	<ul style="list-style-type: none">• Dust bag is not fitted correctly• Hose is not fitted correctly• Dust bag is full	<ul style="list-style-type: none">• Check dust bag installation• Check hose installation• Empty/replace dust bag