



HYGIENE PLUS

HOOVER HYGIENE PLUS

Part Number : 11120334




- Hygiene Plus VC358P -









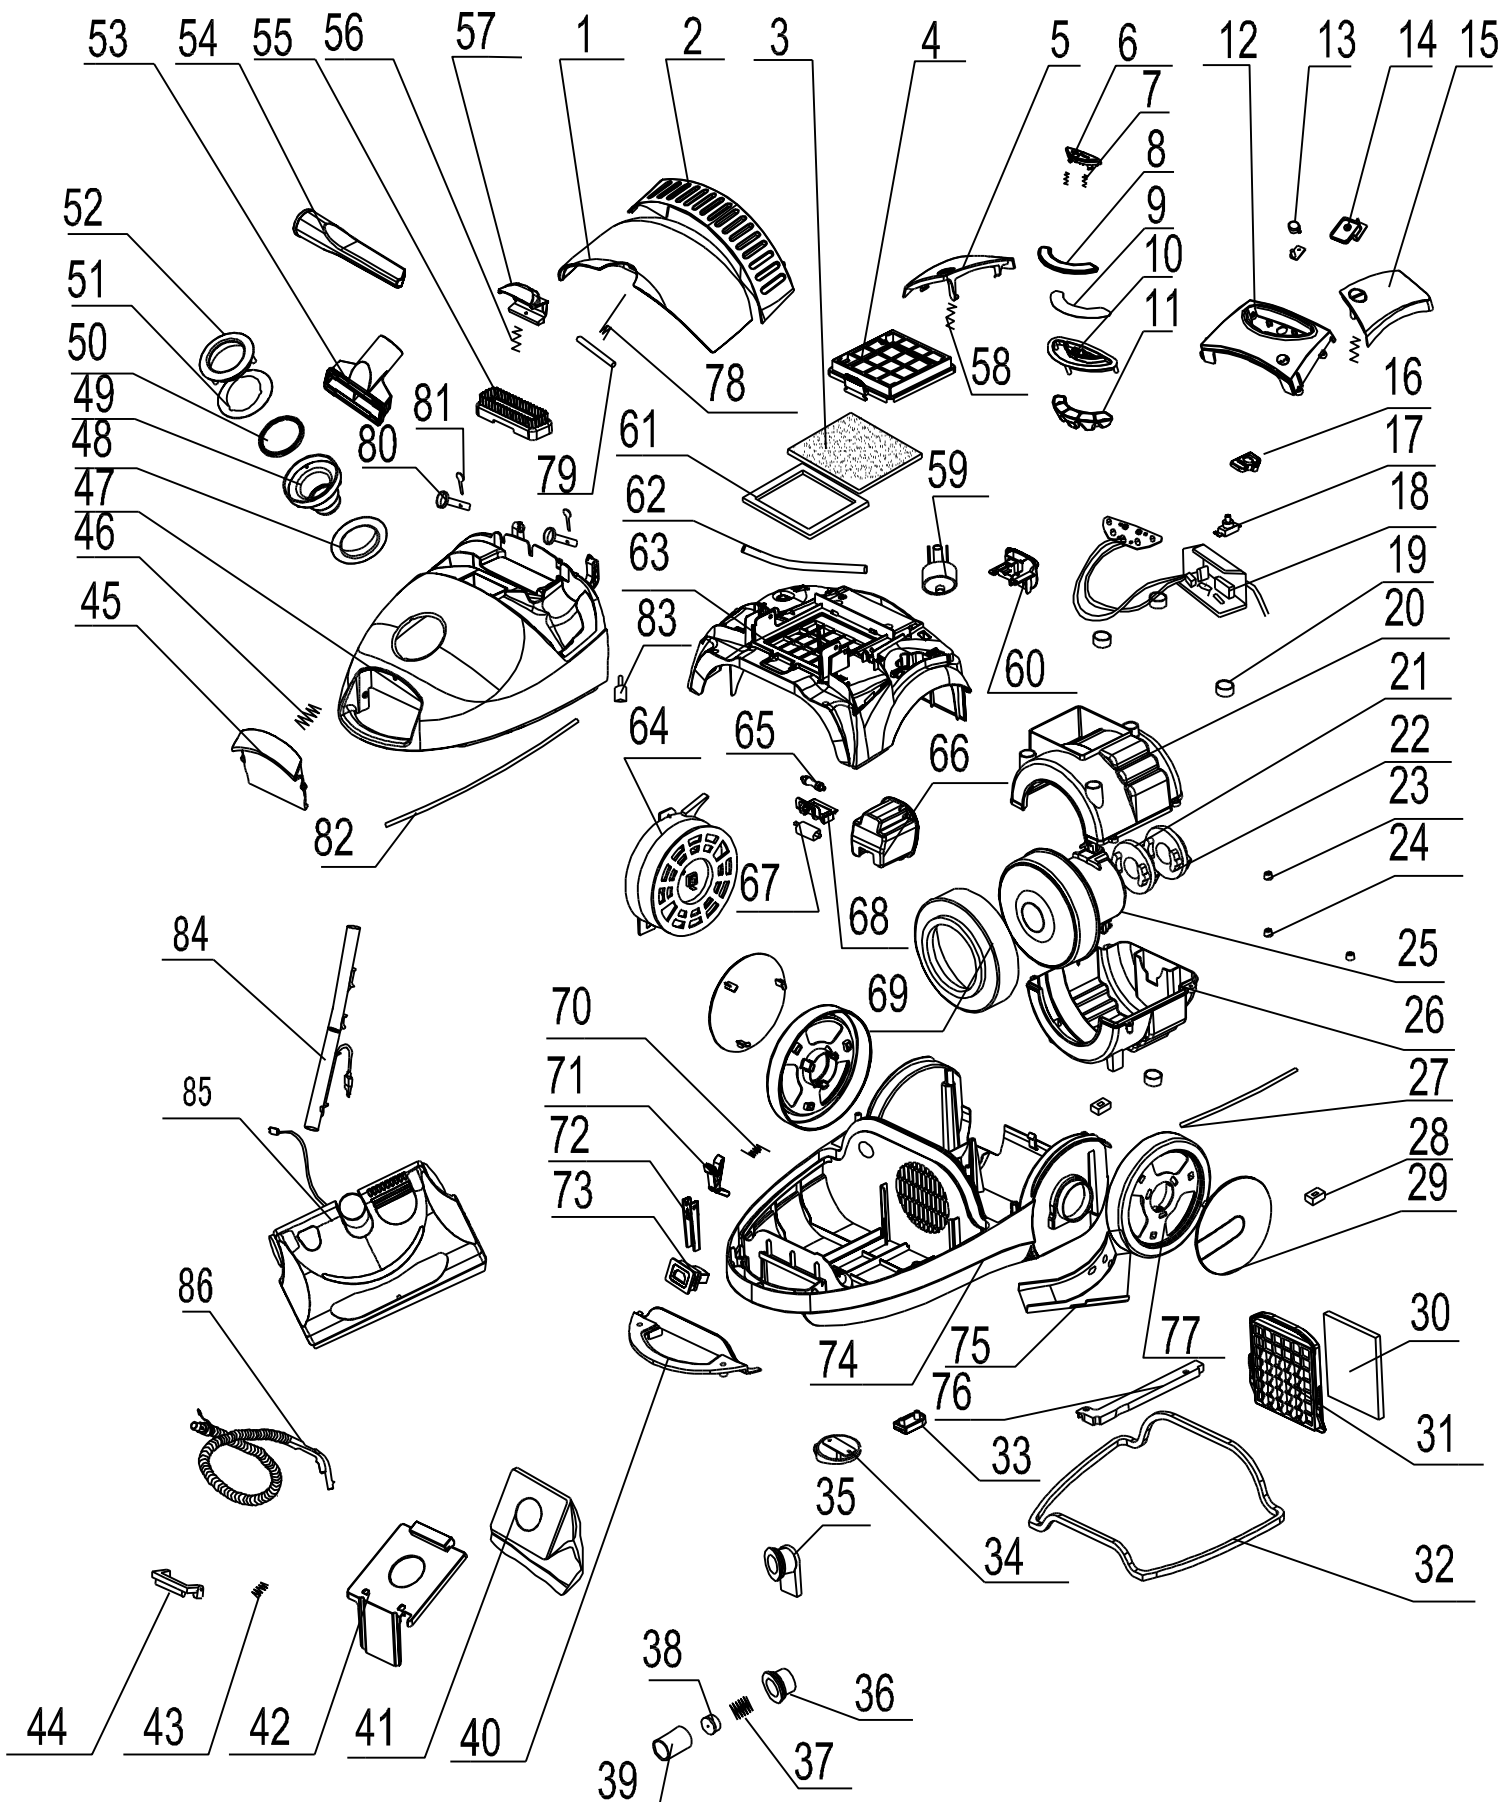











Product Numer	Supplier Reference	Diagram Number	Description	Reference	Order Type
11120334	VC358RSK+PB12		Hoover,vc358p hygiene plus 2000w		W/O
11400080	RED P/HEAD VC358	85	Phead,vc358p hygiene complete (disc)		W/O
31220371	TH32LXC1900BK-VC	86	Hose complete,32mm hoo hygiene plus vc358p		W/O
31300345		84	Rod, 32mm hoo hygiene plus vc358p		W/O
31110108			Main Floor tool, 32mm, hoo hygiene vc358, vc358p plus		W/O
32200360	VC358-4.1	4	Filter, HEPA, hoo hygiene vc358, vc358p plus		W/O
32200361	VC358-21	31&31	Filter, Air inlet, hoo hygiene vc358, vc358p plus		W/O
32420213	WRHA0206JD01	41	Bag, hoo hygiene vc358, vc358p plus		W/O
34400147	VC358-17	25	motor, hoo hygiene vc358, vc358p plus		W/O
33200466	VC358-12	18	pcb, hoo hygiene vc358, vc358p plus		W/O
33200562	VC358 / 12	18	pcb speed control, hoo hygiene vc358, vc358p plus		S/O
33200010	VC2030-42	64	cord retract, hoo hygiene vc358, vc358p plus		W/O
33200467	VC358-11	17	switch on/off, hoo hygiene vc358, vc358p plus		W/O















- Hygiene Plus VC358P -

*W/O : Warehouse order
*S/O : Special order
*REP: Repair centre order







 



 
 











Hygiene Plus Breakdown Diagram


 











 
 

 


PRODUCT NAME		CANISTER VACUUM CLEANER	PRODUCT MODEL	VC358N-E	
NO	EXPLODE VIEW NO	SPARE PARTS NAME	PHOTO	MATERIAL	STANDARD
1	1	ACCESSORY COVER		ABS	GP22
2	2	AIR OUTLET GRID		ABS(warm up protect)	777B
		SCREW		A3	M4X12
3	3	AIR OUTLET HEPA FILTER		HEPA	H11
4	4	HEPA FILTER GRID		ABS(WARM UP PROTECT)	777B
5	5	CORD REWINDER SWITCH PEDAL		ABS	GP22
6	6	SPEED CONTROL SWITCH		ABS	GP22
7	7	SPRING FOR SWITCH		65Mn	
8	8	TRANSPARENT COVER		PC(透明)	
9	9	LIGHT COLLECT PEDAL		PP	BU510
10	10	DECORATING COVER		ABS	GP22
		SCREW		A3	M3X14
11	11	LAMP COVER		ABS	GP22
12	12	PANEL		ABS	GP22
		SCREW		A3	M4X14 (
13	13	DUST FULL indicator		PC(TRANSPA RENT RED)	
14	14	COVER1		ABS	GP22
		SCREW		A3	M3X14
15	15	POWER SWITCH PEDAL		ABS	GP22
16	16	SWITCH COVER		PP	BU510

		SCREW		A3	M3X12
17	17	POWER SWITCH			
18	18	PCB			
19	19	RUBBER SUPPORT (ROUND)		RUBBER	
20	20	UPPER MOTOR COVER		PP	BI750
21	21	MOTOR RING		RUBBER	
22	22	MOTOR ADJUST RING		PA	
23	23	SHOCK ABSORBER		RUBBER	
24	24	CORD OUT SEAL RING		RUBBER	
25	25	MOTOR			
26	26	LOWER MOTOR COVER		PP	BI750
27	27	MOTOR SEAL RING		EPDM	
		SCREW		A3	M4X14
		SCREW		A3	M4X16
28	28	RUBBER SUPPORT (SQUARE)		RUBBER	
29	29	WHEEL COVER		ABS	GP22
30	30	AIR INLET FILTER			
31	31	AIR INLET GRID		ABS	GP22
32	32	DUSTBIN SEAL BAR		RUBBER	
33	33	HOOK		ABS	GP22
34	34	VERSATILE WHEEL			

		SCREW		A3	M4X12
35	35	NO HOLE VALVE COVER		ABS	GP22
36	36	SAFTY VALVE COVER		RUBBER	
37	37	SAFETY VALVE SPRING		65Mn	
38	38	BUOY		ABS	GP22
39	39	SAFTY VALVE		ABS	GP22
40	40	HANDLE COVER		ABS	GP22
		SCREW		A3	M4X14
41	41	DUST BAG			
42	42	DUST BAG SUPPORT		ABS	GP22
43	43	DUST BAG LOCK SPRING		65Mn	
44	44	DUST BAG LOCK PLATE		ABS	GP22
45	45	FRONT COVER LOCK PLATE		ABS	GP22
46	46	FRONT COVER LOCK SPRING		65Mn	
47	47	FRONT COVER		ABS	GP22
48	48	DUST-PROOF RING		橡胶	
49	49	SUCTION RING		ABS	GP22
		SCREW		A3	M3X14
50	50	SUCTION SUPPORT		RUBBER	
51	51	SUCTION SEAL RING		RUBBER	
52	52	SUCTION		ABS	GP22
53	53	SMALL FLOOR BRUSH		ABS	GP22

54	54	FLAT NOZZLE		ABS	GP22
55	55	BRISTLE BRUSH		ABS	GP22
56	56	ACCESSORY COVER LOCING SPRING		65Mn	
57	57	附件开关		ABS	GP22
		SCREW		A3	M4X12
58	58	SWITCH PEDAL SPRING		65Mn	
59	59	SENSOR			
		SCREW		A3	M4X12
60	60	HOOK BASE		ABS	GP22
		SCREW		A3	M4X12 (割槽)
61	61	HEPA FILTER SEAL RING		FROTH RUBBER	
62	62	AIR OUT SEAL RING		EPDM	
63	63	BACKBOARD		ABS	GP22
		SCREW		A3	M4X14 (割槽)
		SCREW		A3	M4X16 (割槽)
64	64	CORD RRWINDER			
65	65	CORD OUTLET WHEEL		ABS	GP22
66	66	CORD OUTLET		ABS	GP22
67	67	CORD OUTLET WHEEL		ABS	GP22
68	68	CORD OUTLET FRAME		ABS	GP22
69	69	MOTOR SEAL RING		FROTH RUBBER	
70	70	SECURING PLATE SPRING		65Mn	
71	71	SECURING PLATE		ABS	GP22



72	72	SECURING PLATE FI		ABS	GP22
73	73	PLUG OF BRUSH			
74	74	BOTTOM		ABS	GP22
75	75	CORD REWINDER FIX FRAMEL		ABS	GP22
		SCREW		A3	M4X12
76	76	WIRE FIXER		ABS	GP22
		SCREW		A3	M4X10 (cr ew cut)
77	77	BIG WHEEL		ABS/PP	GP22
78	78	ACCESSORY COVER SPRING		65Mn	
79	79	TORSIONAL SPRING AXES		A3	
80	80	METAL AXES FOR FRONT COVER		A3	
81	81	DOWEL			
82	82	CAPILLARY			
83	83	SENSOR RUBBER SEAL		RUBBER	
84	84	TELESCOPIC TUBE			
85	85	POWER BRUSH			1
86	86	SUCTION CONNECTOR OF HOSE			

hygiene⁺

Instruction Manual



Please read this Manual before operating cleaner



Congratulations on your purchase of your new vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction book so that you may take best advantage of them.

BEFORE YOU BEGIN

This product must be operated in accordance with these instructions and used only for domestic cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics.

This cleaner is intended for domestic household use only and is not designed for the collection of vitreous building material including particle board construction products and similar products such as wood/fibres, sand, cement, fillers, fibre glass etc. The pickup of these materials may be harmful to your cleaner and will void the manufacturer's warranty.

Safety reminders and taking care of your cleaner.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY.

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Book in a handy place for future reference.

IMPORTANT

Always switch the cleaner off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. The cleaner must only be connected to an AC supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions. Never operate the vacuum cleaner without filters.

DO NOT pick up hard or sharp objects, matches, hot ashes, cigarette ends or similar items.

DO NOT pick up flammable liquids such as cleaning fluids, petrol etc., or use in the presence of such vapors.

DO NOT use your cleaner out of doors or on any wet surface or for WET pick-up.

DO NOT run over the power cable with the Power Brush.

Young children should be supervised to ensure that they do not play with the appliance. Close attention is necessary when used near children.

* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

If using an extension cord please make sure that it is of an approved type and that it is fully extended. Failure to do so could cause your cleaner to overheat and damage it.

FAULTS

Do not continue to use this appliance if it appears to be faulty or the supply cord is damaged. If a fault cannot be rectified, please return to the point of purchase.

If damaged, return the cleaner for repair by an authorised Service Centre in order to avoid a safety hazard.

Consult the trouble shooting guide in this manual if your vacuum cleaner fails to operate properly. Contact an authorised service agent if the problem persists.

AFTER USE

Switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before attaching any accessories or cleaning the appliance.

PROTECTING THE ENVIRONMENT


When you have unpacked the unit, do not simply throw the packing into the household waste. Take them to an appropriate collecting point for the recycling.

Hygiene Plus
Model: VC358
230-240V 50Hz
1800W nom. 2000W max
App. No: V17123



PROBLEM	CAUSE	SOLUTION
Motor does not start or stops.	No power supply	Check cable, plug and socket. If still inoperative, contact service agent.
Suction force gradually decreases	Filters are dirty, suction hose or wand is blocked	Clean or replace filters, remove objects from hose and wand.

Due to our program of continuous product improvement and innovation, sometimes the product you buy may differ slightly from the one shown on this product carton.

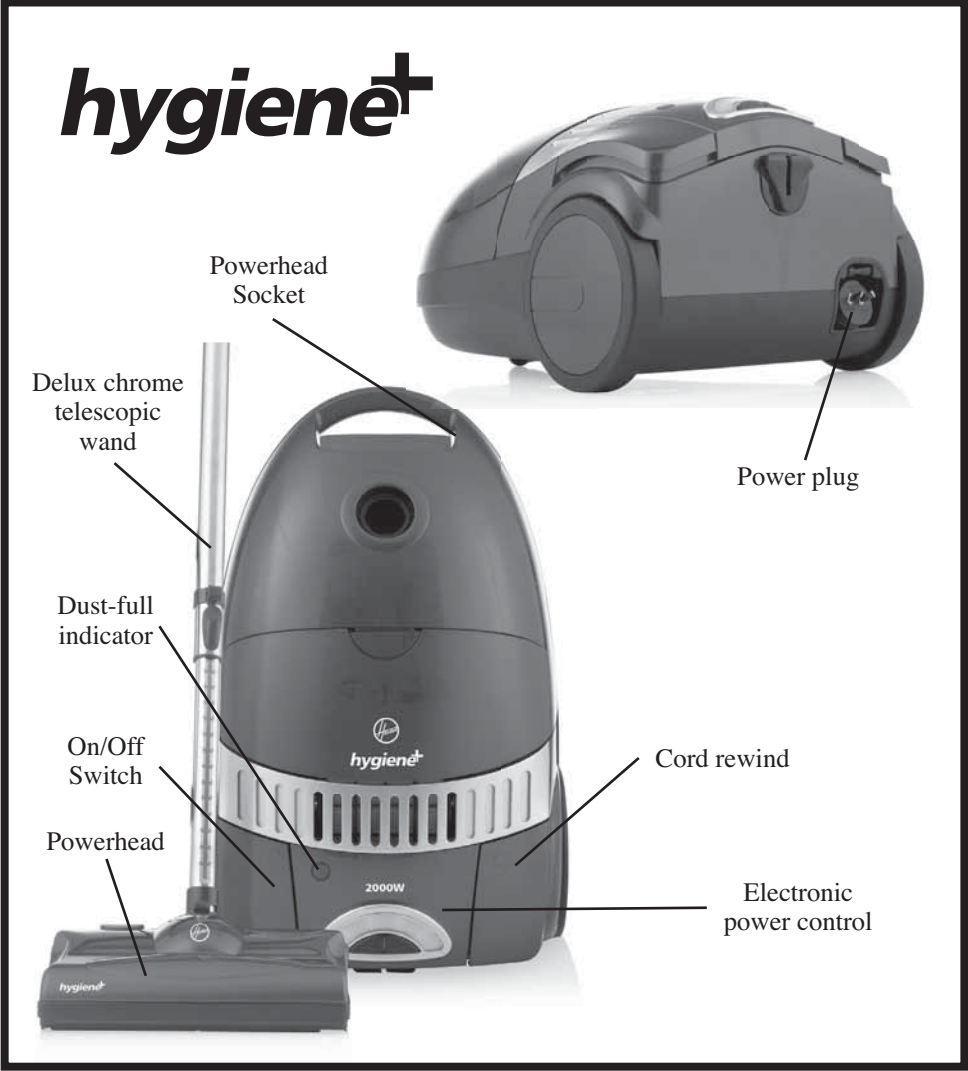

When connecting the Powerhead to the Powerhead socket, make sure the cleaner is turned off and disconnected from the mains supply.




MIN (-) For delicate fabrics, like curtains. **Max (+)** For hard floors and heavily soiled carpets

ASSEMBLING YOUR CLEANER


The cleaner should be switched off and disconnected from the mains supply before you start to assemble.



1. Connect the wand to the handle.

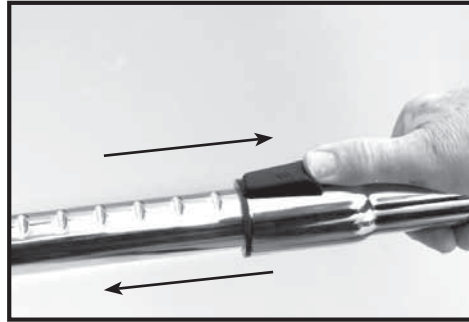

2. Adjust the telescopic wand.

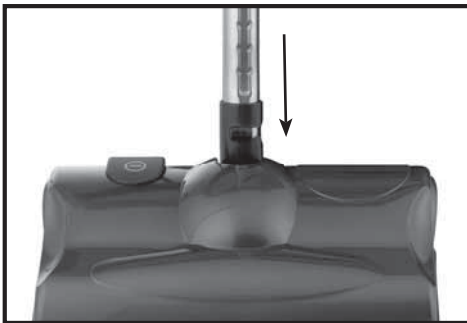


3. Push the wand into the Powerhead by depressing button.



4. Put the plus into the socket located under the handle.




5. Do not pull the supply cord out further than the red mark.

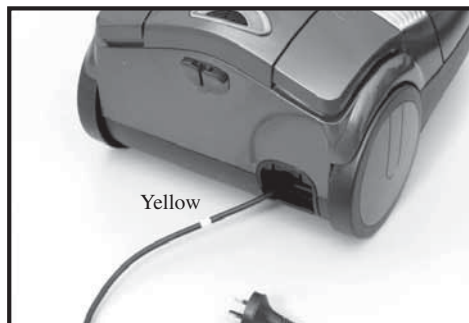

6. Correct length of cord is indicated by a yellow mark.

ACCESSORIES

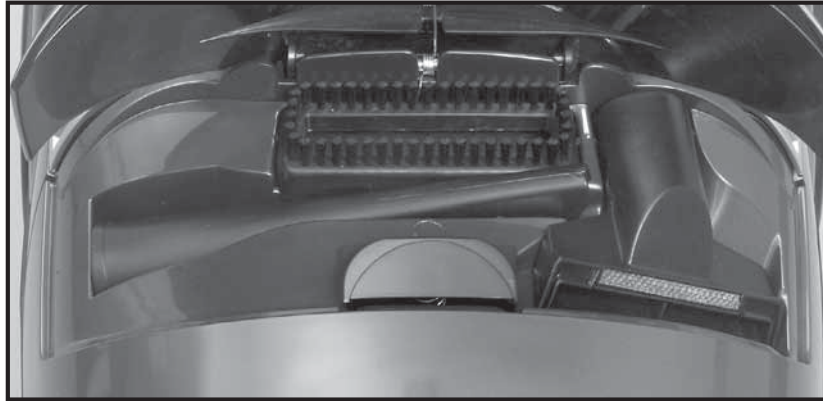

Additional Accessories


Your Hoover vacuum cleaner has been designed to handle a number of cleaning chores, effortlessly and efficiently.

Accessories, including a crevice tool, upholstery brush and dusting brush are conveniently located under the accessory cover.



1. Upholstery Brush
2. Crevice Tool
3. Dusting Brush


OPERATING YOUR CLEANER

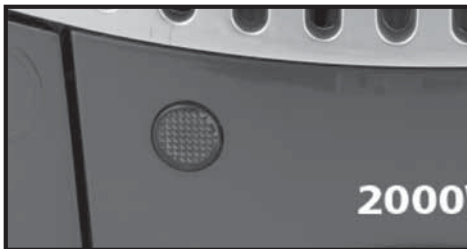

Dust-full Indicator

If the Dust-full Indicator changes to RED while you are cleaning, the dust-bag needs replacing. If the Dust-full Indicator continues to display RED even after changing the bag, turn the cleaner off, disconnect from mains supply and check to see if the filters are dirty - replace them if necessary.

If indicator continues to display red, turn off and refer to a service agent.

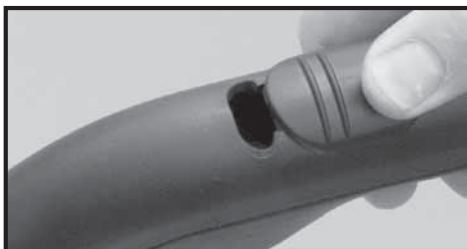


Variable Suction

Control of suction is at your fingertips.

Moving the control forwards increases suction, pulling back on the control reduces suction.

CHANGING THE DUST BAG

The cleaner should be switched off and disconnected from the mains supply before you start to assemble.

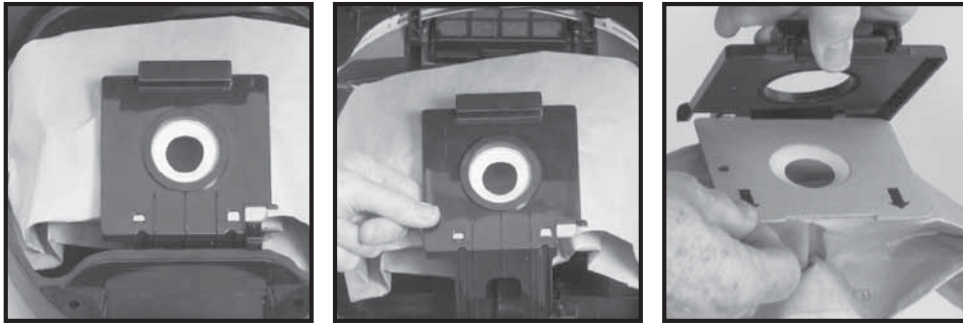

1. Disconnect cleaner from power and remove hose from inlet duct.
2. To gain access to the dust-bag, lift the catch located under the inlet hole and raise the top cover.
3. Without touching the dust-bag, lift the bag assembly and remove.
This will allow you to remove the bag from the holder.
4. To remove dust-bag, push the bag retaining clip and separate bag from holder.
Fitting a new bag is a reversal of above. The arrows on the bag collar show correct positioning.
5. Replace completed assembly back into cleaner. The top cover will not close nor will the cleaner operate without a dust-bag fitted.

FILTER REPLACEMENT

Your cleaner is fitted with 2 filters for cleaner air. Dirty filters will restrict motor performance and cleaning efficiency. Never operate without filters fitted. The motor filter is located directly behind the dust-bag assembly.



Bag out and motor filter removed.

Replacing motor filter

HEPA Filter

2 Year GUARANTEE

This guarantee applies in Australia and New Zealand only.
For the guarantee in another country, please
contact your local retailer/distributor.

Your new Hoover cleaner which has been fully tested, inspected and adjusted, carries in the case of domestic users, a two year parts and labour guarantee against defects. This product is warranted 90 days for commercial usage.

This cleaner is intended for domestic household use only and is not designed for the collection of vitreous building material including particle board construction products and similar products such as wood/fibres, sand, cement, fillers, fibreglass etc.

The pick-up of these materials may be harmful to your cleaner and will void the manufacturer's warranty.

Brushes and filters, unless actually defective in manufacture are not subject to this guarantee since their length of life depends upon usage and care given. Any transportation costs involved in the repair of the appliance or the replacement of a defective part shall be borne by the claimant.

This Guarantee commences from the date of purchase of the cleaner.

When properly used and cared for, your new cleaner will render excellent service, and therefore, the purchaser should carefully read the instruction book, as misuse or failure to follow the instructions makes this guarantee void. It also becomes void if the product is used on an electric voltage other than that shown on the rating plate.

E.H.A Pty Ltd is unable to accept responsibility under this guarantee for damage from repair work carried out by other than authorised service retailers or centres, or from the use of other than genuine parts.

This guarantee does not apply to the cost of replacing any part of the product due to normal wear and tear, alteration, improper installation, physical abuse, misuse or accident.

In the event of service or advice being needed, please contact your retailer.

The benefits conferred by this guarantee are in addition to all other rights and remedies in respect of the product which the consumer has under the Trade Practises Act and other State and Territory laws.

Keep this Guarantee and your receipt as proof of purchase

Purchase Date...../...../.....

Our policy is one of continuous development and accordingly we reserve the right to change specifications without prior knowledge.

E.H.A Pty Ltd (ACN 007 539 577)

Locked Bag 120 Silverwater D.C. 1811 NSW