

 


we  clean

User Guide

Vax Careline: AU: 1300 361 505
NZ: 0800 800 900

Bagless Cylinder

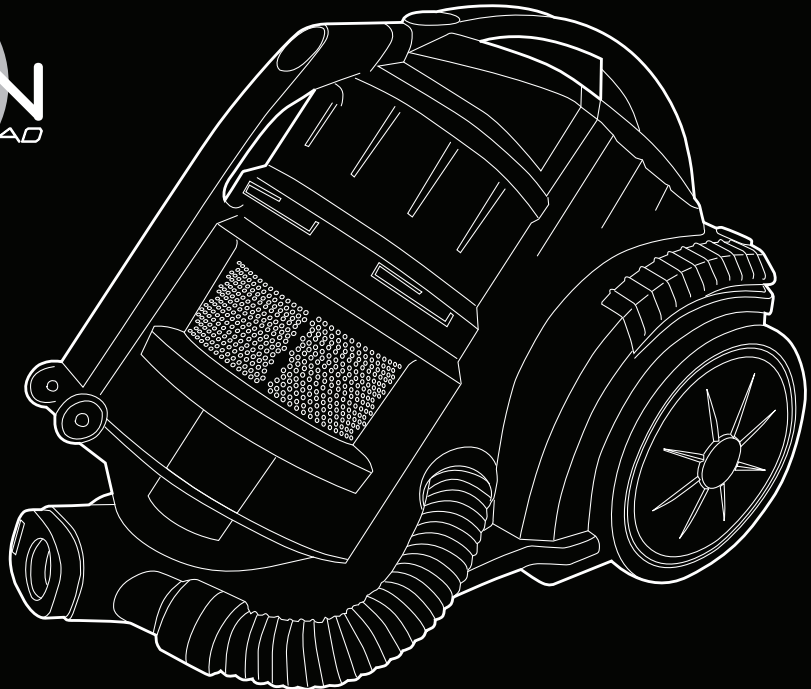

Get Cleaning...

What's your Vax's model number?

V C Z P H 1 6 0 0

What's your serial number? (Located on the base of the machine)

- - - -

Note these down in case you need them in future. Please keep instructions for further use.


www.vax.com.au

VCZPH1600

Vax Service line

AU: 1300 361 505 / NZ: 0800 800 900

 
Machine Overview

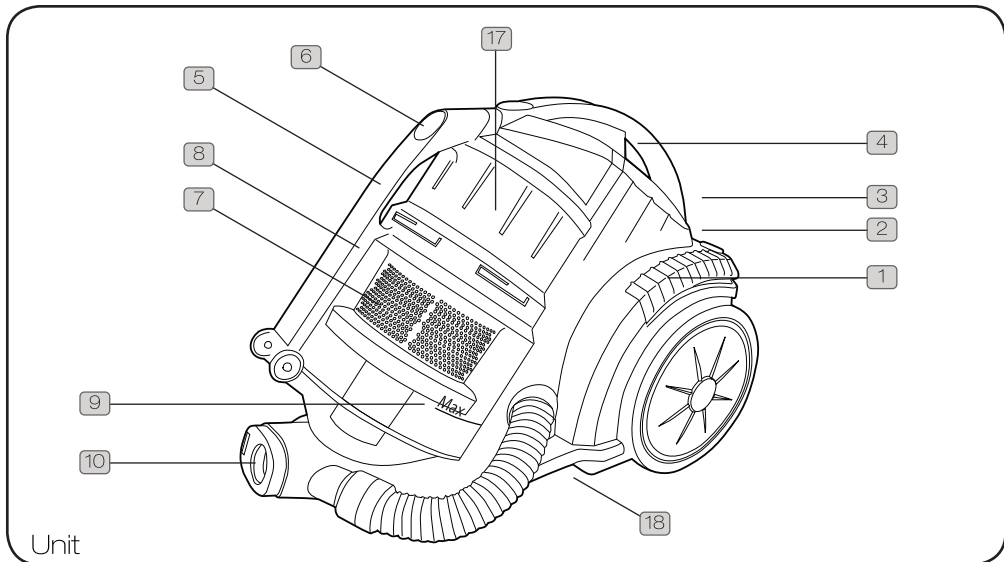

Unit


- | | | |
|------------------------------------|-------------------------------|---|
| 1 On/off button | 5 Dirt container carry handle | 9 Max fill line |
| 2 Auto cord rewind button (hidden) | 6 Dirt container removal | 10 Hose inlet |
| 3 Floor tool parking slot (hidden) | 7 Separator | |
| 4 Carry handle | 8 Dirt container | ⚠ Dirt container must be emptied as soon as this line is reached. |

 Accessories

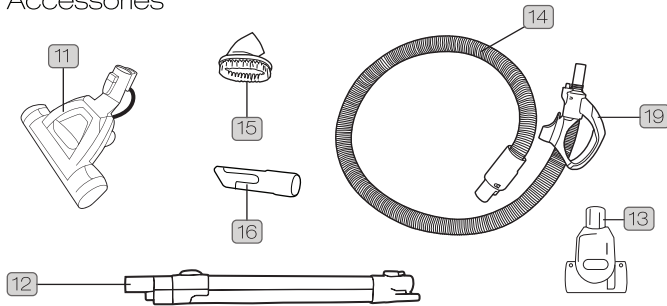

- | | |
|--------------------|----------------------|
| 11 Powerhead | 15 Dusting brush |
| 12 Telescopic tube | 16 Crevice tool |
| 13 Turbo tool | 17 Pre-motor filter |
| 14 Hose | 18 Post-motor filter |

 Filters

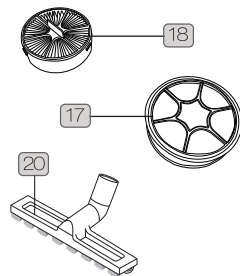


- | |
|---------------------------|
| 19 Brushbar on/off switch |
| 20 Hard floor tool |


General Safety Information


FOR HOUSE HOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:


1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict air-flow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.
19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.


 **WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

 **CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

 **CAUTION:** This hose contains electrical connections:

- do not use to suck up water (for vacuum cleaners only);
- do not immerse in water for cleaning;
- the hose should be checked regularly and must not be used if damaged.

 **IMPORTANT:** If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

 
 **IMPORTANT:** Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

This machine is intended for house hold use only, and NOT for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

Operation


Keep your Vax like new

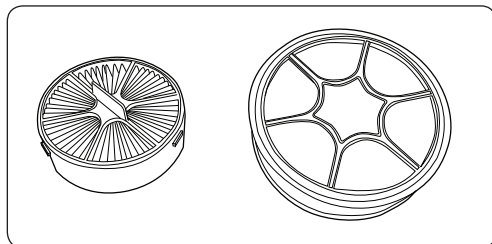

! **IMPORTANT:** The condition of the filters affects the performance of your machine. Please check and clean filters periodically (depending on the level of use). For full cleaning instructions, see Maintenance.

! **IMPORTANT:** Do not use the vacuum cleaner without all of the filters in place.

 Assembling your vacuum cleaner

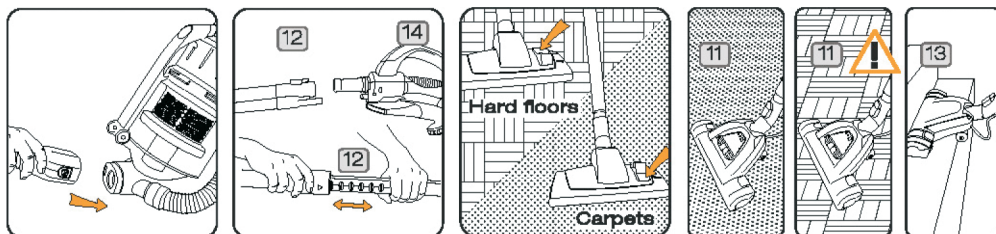


! **IMPORTANT:** For use on hard floors, switch the brushbar off. The on/off switch is located on the hose handle. Alternatively use the hard floor tool provided.

NOTE: The Powerhead, crevice tool and dusting brush can all be attached to the telescopic tube or handle.


Operation

 Operating the appliance

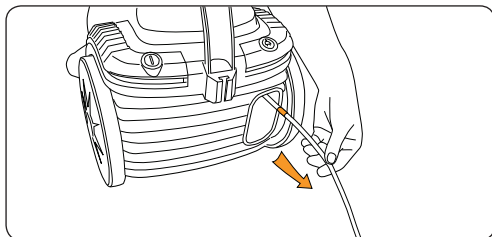


NOTE: Fully unwind power cord before every use. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord length beyond the yellow mark.

 Switch vacuum cleaner on

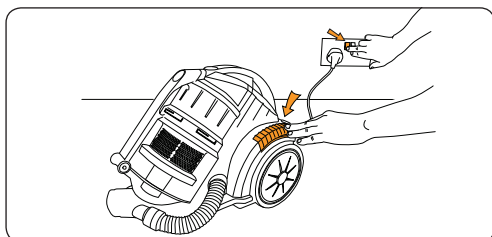

 Switch the vacuum cleaner on by inserting plug into outlet and pressing on/off pedal.

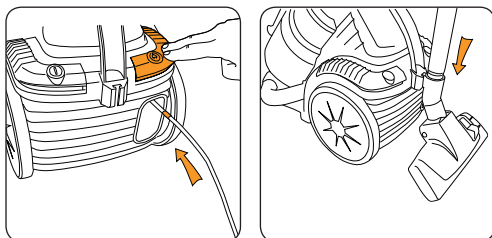


Packing away and storage

 


NOTE: For convenience there is a parking slot located at the rear of the vacuum cleaner where the floor tools and tubes can be attached for storage and carrying.


Maintenance (Keep your Vax as good as new)

Emptying and cleaning the dirt container

-  **WARNING:** Always unplug the vacuum cleaner from the electrical outlet before removing dirt container.
-  **WARNING:** Do not use the vacuum cleaner without all filters in place.
-  **WARNING:** Vax recommends that filters should be checked & cleaned periodically (eg. every 6 months as a guide), depending on level of use.

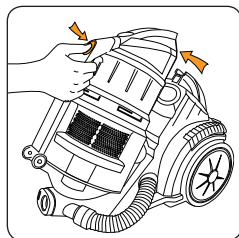

 Press down the button located on the dirt container. When the button is pressed down, the dust barrel can be lifted to remove.



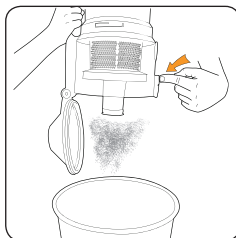


Hold the dirt container over a bin and press the quick release button to empty the container.

When emptied, close the dirt container flap. A click will be heard when closed.

Replace the dirt container.

   Advanced cleaning – Cleaning the cyclone separator

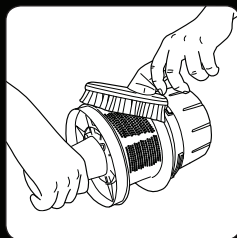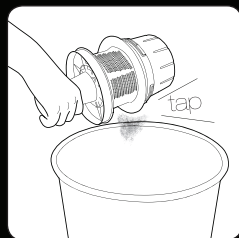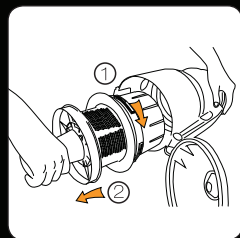


1. Twist and pull the dirt container bin off the cyclone separator. The dirt container bin may be wiped clean.
2. The separator should only be cleaned with a soft brush and wiped with a damp cloth.
3. Leave the separator to dry completely before replacing. Allow 24 hrs to dry.


-  **WARNING:** The cyclone separator should not be submerged in water.

Maintenance (Keep your Vax as good as new)

 
Cleaning the pre-motor filter

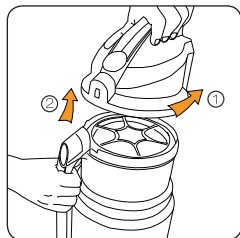

 Twist the top of dust canister and lift.

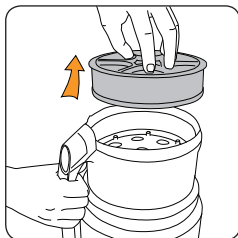

Pull filter out.

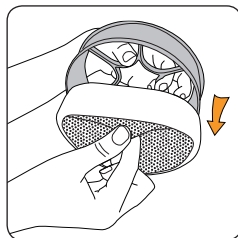 

Separate the two filter components.

 


Tap over bin to release excess dirt.



Rinse in warm water (max 40°C).


Do not use detergents.

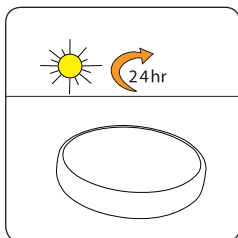


Allow to dry for 24 hours after removing excess water.

Cleaning the post-motor filter

 
WARNING: Do not wash the post-motor filter. 

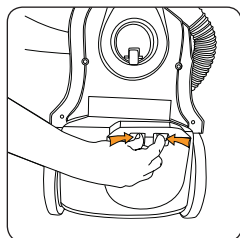

 
Squeeze together the tabs at the base of the vacuum.

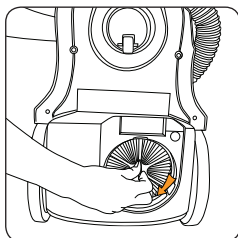

Remove filter by twisting.

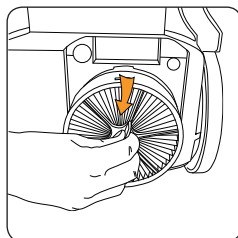 

Pull filter out of cleaner.

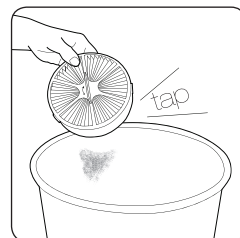 

Tap over bin to release excess dirt. Do not wash.

Maintenance (Keep your Vax as good as new)

Cleaning blockages

⚠ WARNING: To reduce the risk of electric shock, turn the vacuum cleaner off and unplug from the electrical outlet before performing maintenance/troubleshooting checks.

Hose blockages

 
The hose may be disconnected from the vacuum cleaner. Carefully remove any blockages found and reconnect hose securely.

Accessory blockages


Remove accessory from hose/tube. Carefully remove the blockage and return to the cleaner.

Cleaning debris from the Powerhead and Turbo tool


NOTE: Switch the cleaner off and disconnect the power plug from the electrical outlet.

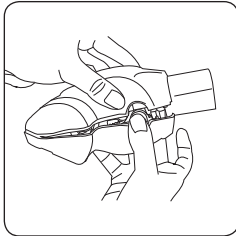

 Press the two side buttons together & pull sides apart.

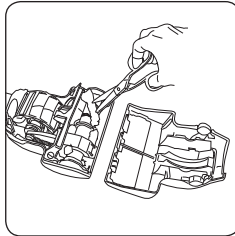


 Carefully use scissors to cut out the blockage.

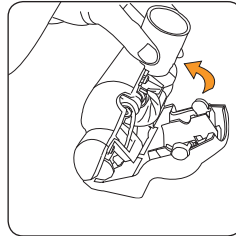


Realign turbo brush sides & press together.

 
Powerhead blockages

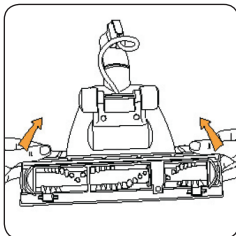

 Open clips at either side of the Powerhead.

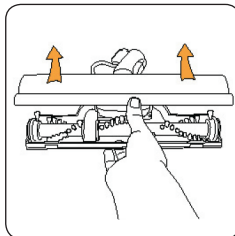

Lift top cover up to reveal brushbar.

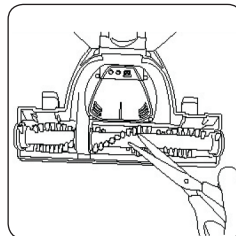 

Cut away tangled hairs with a pair of scissors.

FAQ's



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Problem	Cause	Solution
Is there an accessory missing?		Check the 'Machine Overview' page in this guide to make sure the part is definitely included in your unit
Why won't the vacuum cleaner pick up?	The filters may be clogged	Refer to the Maintenance section
	The dirt container is full or blocked	Refer to the Maintenance section
	The dirt container may be incorrectly installed	Refer to the Maintenance section
Why is dust escaping from the vacuum?	The filters may not be installed correctly	Refer to the Maintenance section
	The dirt container may not be installed correctly	Remove the dirt container from the unit by pressing the dirt container removal button and reattach it to the unit, ensuring it is locked firmly back into place
	The filters may be clogged	Refer to the Maintenance section
Why won't the accessories pick up properly?	The accessory may be blocked	Refer to the Maintenance section
Why will the vacuum cleaner not run?	It may not be plugged into the electrical outlet correctly	Ensure that the plug is pushed into the electrical outlet securely
	The electrical outlet may not be working	Check the fuse or breaker and consult an electrician
	The motor Thermostat may have tripped	Switch off and unplug the vacuum cleaner. Leave it for one hour before switching the vacuum cleaner back on



we  to help

Don't take me back to the shop, simply call us

AU: 1300 361 505
 NZ: 0800 800 900 www.vax.com.au

This does not affect your statutory rights

Other Information

Vax Service & Help

Vax Careline:

Australia 1300 361 505

New Zealand 0800 800 900

Monday-Friday 8.30am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification

On Vacuum

Voltage: 220-240V ~50Hz

Wattage: 1600W

Air Wattage: 320AW

Capacity: 2.6 Litres

Filter: Cyclone Separator – Wipe clean
Pre-motor – Washable sponge
Post-motor – HEPA12, Antibacterial (not washable – tap to clean)

Cord length: 8m

Weight: 6.5kg

Motorised Head Attachment

Voltage: 220-240V ~50Hz

Wattage: 35W

Subject to technical change without notice.



Double Insulated



N197



Indoor Use



Read Instructions



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



we  clean

Distributed by Techtronic Industries Pty. Ltd.
Level 1, 660 Doncaster Road, Doncaster, Australia 3108.
www.vax.com.au Service Line: AU: 1300 361 505 / NZ: 0800 800 900