

- Young children should be supervised to ensure that they do not play with this Remington Express Set® 10.
- Use these rollers only for their intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate your Remington Express Set® 10 if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of Travel Setter is damaged it must only be replaced by a qualified electrical tradesperson.
- Keep the power cord away from heated surfaces.
- Do not use on people sleeping.
- Never drop or insert any object into any opening of this set of rollers.
- Do not use outdoors, where aerosol (spray) products are being used or where oxygen is being administered.
- The rollers will be hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated unit on any soft surface such as a bed, carpet or a towel. Place only on a hard flat surface.

SAVE THESE INSTRUCTIONS



This product is not suitable to use in a bath or shower

MAINTENANCE

Your appliance is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power source and wipe with a damp cloth. Clean rollers with a damp cloth and mild soap.

NEVER immerse the Rollers or the Base in water.

STORAGE

When not in use, unplug the unit. Allow it to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Instead, secure the cord in the dedicated Cord Wrap Storage at the back of the travel pouch. Handle cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

AUTOMATIC WORLD WIDE VOLTAGE

The H1022 Remington Express Set® 10 features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust to the voltage being supplied.

Note: - Some countries will require the use of a plug adaptor that is not included with your Remington Express Set® 10.

This product conforms to radio frequency interference requirements.

Warranty Information can be found in the enclosed warranty card.

Any product purchased and used commercially carries a limited 90 Day Warranty.

REMINGTON®

www.remington-products.com.au

Remington Products Australia Pty Ltd

Chifley Business Park
1 Chifley Drive, Mentone,
Victoria, Australia 3194

Remington Products New Zealand Ltd.

Building C, Ground Floor
600 Great South Road
Greenlane, Auckland, 1051,
New Zealand

®Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

©2009 SBI

Rev:04/09
Part No.T22-28384

REMINGTON®

EXPRESS SET® 10

USE & CARE INSTRUCTION MANUAL

PLEASE READ PRIOR TO USE



2 YEAR **WARRANTY**

H1022

INSTANT HEAT TRAVEL SETTER


H1022 REMINGTON EXPRESS SET® 10 USE & CARE MANUAL

Thank-you for purchasing your Remington Express Set® 10 with 10 velvety soft-flocked rollers. The Remington Express Set® 10 heats up fast and is ready to use in 90 seconds.

Your Remington Express Set® 10 has 10 rollers, 5 medium size and 5 large size, for maximum styling versatility. Also included are 10 metal colour coded clips and 10 white plastic 'C' clips to secure your hair on the roller. All contained in a handy heat and carry case.

The rollers should be used on dry hair. They can be used as often as you like and are suitable for all types of hair although the length of time for which they should be kept in the hair will depend on individual hair types and also the type of curl or bounce that you wish to achieve.

KEY PARTS

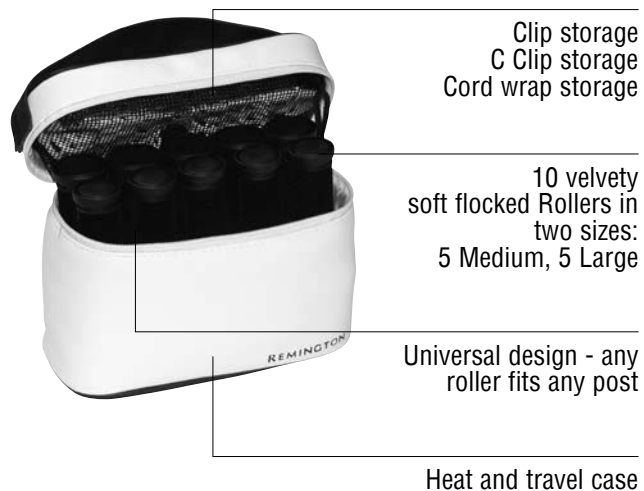

Cool tip base



10 colour coded metal clips:
5 medium (white)
5 large (black)



10 white plastic C clips:
5 medium
5 large

PLEASE READ BEFORE HEATING

Place the unit on a flat hard heat resistant surface. Plug the unit into a domestic power outlet. Switch power on. The lid can be open or closed during heat-up and the rollers will be ready to use in about 90 seconds. For a soft wavy curl use the rollers after 90 seconds. For a tighter curl use the rollers after 2 minutes. At this time they will have reached their maximum temperature.

USING YOUR REMINGTON EXPRESS SET® 10

For optimal results, shampoo and condition hair prior to styling. Hair should be dry, never wet. Section the hair and make sure it is smooth and tangle free before beginning to style. Wrap a section of hair around the roller from the ends and keeping the hair taut, wind the roller up all the way to the roots or to mid length, depending on desired results.

Secure the roller in place with an appropriate size pin. The pins are colour coded by size – white pins are medium sized to use on the medium rollers, black pins are larger to

use on the large rollers. Place the pin across the roller as close to the roots as possible. The plastic C clips have two sizes, medium for the medium rollers and large for the large rollers.

Use the medium size rollers for tight curls and the large rollers for loose curls, volume and waves.

Because hair types vary from person to person, it is advised to perform a curl test on your hair to determine how long the rollers should be left in the hair. Usually after a short time of about 5 – 10 minutes, there will be a soft curl in the hair. The longer the time the rollers are left in your hair, the more curly the effect. If your hair curls easily it may need only a few minutes, but hard to curl hair may need 10 minutes or until the rollers have cooled.

If you wish to reuse the rollers, return them to the unit and wait 90 seconds.

Remove the rollers from your hair by gently unwinding. Let the curl spring back into place and leave the hair to cool fully. For a very curly look comb with your fingers and loosen curls. To create waves brush out after with a soft brush. Finish with a styling spray.

Once Rollers have been replaced in the base unit the metal pins can be stored in the front inside pocket of the Pouch and the plastic C clips can be stored in the inside pocket of the top of the Pouch. Unplug the unit when you have finished styling you hair.

IMPORTANT SAFEGUARDS

Warning: Do Not use this appliance near bath tubs, showers, basins or other vessels containing water.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.

Remington strongly recommends that an approved Safety Switch (residual current device) should protect all bathroom power outlets. Ask an electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS

- Your Remington Express Set® 10 should never be left unattended when plugged in to a power outlet.
- This Remington Express Set® 10 is not intended for use by young children or infirm persons without supervision.