

# REMINGTON®

---

**360°  
Pivot &  
Flex  
Technology**

**R3150AU**



**2 YEAR WARRANTY**

***Use and Care Instruction Manual***

**PLEASE READ PRIOR TO USE**

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using an electric shaver, basic safety precautions should always be observed, including the following. Read all instructions before using this shaver.**

### **KEEP POWER ADAPTOR AWAY FROM WATER**

#### **WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

 
- The shaver should never be left unattended when plugged into a power outlet, except when charging the shaver.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this shaver if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this shaver is damaged it must be replaced. It cannot be repaired.

- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Never insert any object into any opening of this shaver.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use the shaver with a damaged or broken tracks or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the shaver with wet hands.
- For household use only.

**Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.**

**SAVE THESE INSTRUCTIONS**

## Product Features

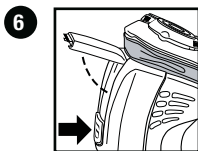

### SHAVER PARTS

1. Pivoting head & cutter assembly
2. Hairpocket release button
3. Individual flexing heads
4. On/Off slide switch
5. Power port
6. Trimmer button
7. Head guard
8. Power cord
9. Cleaning brush

## ***About Your Shaver***

FEATURE	R3150AU
POWER SYSTEM	corded
VOLTAGE TYPE	worldwide
REPLACEMENT PART NO.	SP-5161AH

### **Power System**

**Corded** – shaver can only be used with the power cord.

### **Voltage Type**

**Worldwide Voltage** – shaver automatically adapts to an outlet voltage between 120V and 240V.

## ***Adjusting To Your Shaver***

 
As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

## ***Removing The Protective Head Guard***

Before operating your shaver, remove the protective head guard, which protects the head and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver. When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

## Shaving

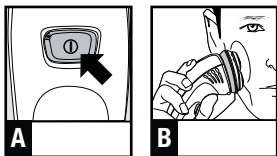

**Before using, read the important safety instructions in this manual.**

1. Press the On/Off button to activate for shaving (Diagram A).
2. Hold the shaver so that all the heads touch your face together (Diagram B). This allows the shaver to work the way it was designed for the closest shave and minimum wear. Avoid holding the shaver at an angle so that only one head touches the skin.

Use short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.

Never press hard when shaving. Pressing hard only flattens the whiskers, which makes it harder for them to enter the cutting chamber. It will also cause the cutting surface to wear out more quickly.

 
3. Press the On/Off button to turn the shaver off (Diagram A).

## Shaving Tips

- Ensure your skin is dry and free of skin oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that all three heads are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movement.
- The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the rotary heads.

**\*\*Remington recommends that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system\*\***

## Trim

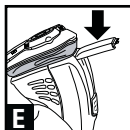










1. Pull trimmer release button down to engage trimmer. (Diagram C)
2. Trim long, difficult hairs and side burns. (Diagram D)
3. Close trimmer by pressing down on trimmer housing. (Diagram E)

## Cleaning & Care

         **NOTE: \*\*When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.\*\***

### CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- Ensure that the main body of the shaver remains dry at all times.

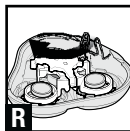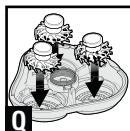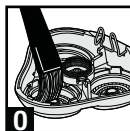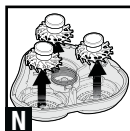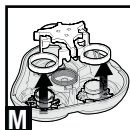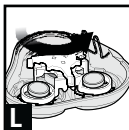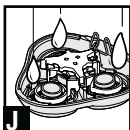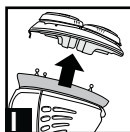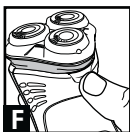

## Daily:

1. Press the hairpocket release button to open hairpocket assembly. (Diagram F)
2. Tap out excess hair shavings. (Diagram G)
3. Close hairpocket assembly. (Diagram H)

## Monthly:

1. Perform the daily cleaning steps 1 and 2.
2. Remove the cover from the hair pocket assembly. (Diagram I) Place the body of the shaver aside to ensure that it will not get wet.
3. Place a drop of liquid soap on each cutter. (Diagram J)
4. Brush the soap around vigorously using the supplied cleaning brush. (Diagram K)
5. Release the inner cutter carrier by rotating the locking arms counter-clockwise. (Diagram L)
6. Remove the inner cutter carrier away from the cutters. (Diagram M)
7. Remove the cutters. (Diagram N)



8. Thoroughly brush any hair off of the inner and outer cutters (Diagram O) and rinse away any soap and debris from inner and outer cutters. (Diagram P)
  9. Replace the inner cutters. (Diagram Q)
  10. Place the inner cutter carrier back into position and lock into place by rotating the locking arms clockwise until they snap into place. (Diagram R)
  11. Lubricate each cutter with household oil.
  12. Close the head assembly. (Diagram H)
- \*\* Trimmer:** Lubricate teeth with oil every six months

## **Lubricate**

Remington® Shaver Saver (SP-4) lubricates and cleans your shaver's cutters and head assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the heads and cutters after each shave to keep your shaver operating at peak performance.

## ***Replacing Your Heads & Cutters***

**Please refer to the shaver comparison and features chart near the front of this manual that lists the correct replacement part number for your shaver.**

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.



**This product is not suitable for use in a bath or shower.**

**Money Back Offer - Australia/New Zealand Only**

If within 30 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Postcode: \_\_\_\_\_

# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We** or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd  
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited,  
as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

Spectrum Brands New Zealand Limited

Building C, Ground Floor

600 Great South Road,

Greenlane, Auckland 1051 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

# REMINGTON®

## REMINGTON SERVICE HOTLINE

- ① Australia 1800 623 118 (toll free)
- ② New Zealand 0800 736 776 (toll free)

## AUTHORISED REPAIR CENTRES

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., or one of its subsidiaries

© 2012 SBI

Rev. 10/12

Part No. T22-31672