

## Ezywash Portable Twin Tub Washing Machine Instruction Manual



Part No. COMP434

### **IMPORTANT**

Read these instructions for use carefully. Familiarise yourself with the appliance before use. Keep these instructions for future reference.

## Important

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance shall not be exposed to rain.
- This appliance should be located on a solid surface in a well ventilated area away from any sources of combustible material and gases.
- Keep the appliance in a shaded environment. Do not expose to direct sunlight for extended periods and keep away from external sources of heat.
- The temperature of water used in the appliance should not exceed 45 degrees centigrade as this may result in damage to the internal tub of the unit.
- Only use washing powder that is suitable for FRONT LOAD washing machines, as this produces less suds and is more suited to this appliance.
- Do not place heavy articles on the lid of the appliance as this may result in damage to the unit.
- This appliance is designed to be used only with fabric articles and must not be used with solid objects or articles. Only clothing, manchester and the like is to be used with this appliance.
- Do not move or relocate the appliance when operating, containing water or clothes. Ensure that the unit is empty and disconnected from the power source before moving.
- Do not place hands in the appliance while operating. Ensure that the unit is switched off prior to filling or removing articles.
- When storing ensure that all water has been removed from the tubs and that they are dry and free of clothes or articles.

**CAUTION:** If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

## Installation & operation of appliance

It is important that your appliance is installed and operated in accordance with the manufacturer's instructions.

### Power requirements

This appliance is designed to be operated on AC input only, voltage is required to be 220-240V AC at 50Hz.

To ensure correct operation of your appliance read and understand the instructions fully prior to using the machine.

### Advice & tips before washing

- **Use washing powder or liquids suitable for front load machines only**
- **Washer capacity** – 2.0kg
- **Maximum water temperature** – 45°C

### Sort your laundry

- Sort items according to how soiled they are, colour & material.

### Clothing

- Read all labels and manufacturers washing instructions .
- Do up zips so they do not harm fabrics.
- New coloured items may contain excess dye and should be washed separately for the first few times.
- Turn delicate items inside out or use a wash bag.
- Empty pockets and wash them inside out if possible.

## Washing Guide

Clothing Type	Wash/Rinse Time	Spin Time
Delicates	3-5min	1-2min
Cotton & Synthetics	5-9min	3-5min
Towels & Sheets	12-15min	4-5min
Heavy Soiled	12-15min	4-5min

The above is to be used as a guide only.

It is recommended that small & delicate articles firstly be placed in a mesh washing bag prior to being placed in the washing tub.

## Washing


- 1) Position appliance in a suitable location.
- 2) Connect to suitable AC outlet.



- 3) Ensure the drain pipe is located in its correct position on the side of the appliance.



- 4) Lift the lid & half fill tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B), taking care not to allow water to flow over the control panel. The detergent packaging will give a recommendation about how much detergent you should use based on the amount and level of soiled clothing that is to be cleaned.

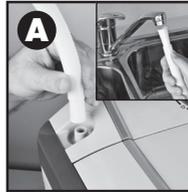

- 5) Place articles in the tub and complete filling the tub with water to the required level mark.



- 6) Select the required washing level – Normal or Gentle.



- 7) Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.



## Draining

- 1) Once the appliance has completed the washing cycle ensure that the drain pipe is located in a suitable position.
- 2) Rotate the Cycle Selector switch in a clockwise direction and select Drain.
- 3) Allow all water to drain away from the appliance



- 4) Remove washing from the tub remembering to squeeze out excess water from the articles.



- 3) Place articles in the tub and complete filling the tub with water to the required level mark – Do not use washing liquid or powder.



- 4) Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.



- 5) Repeat the Draining Operation.

## Spin drying

- 1) Open the External & Internal lids of the spinning tub and remove the plastic spin disc.  
Note: It is important that the spin disc is used every time so as to allow correct operation of the spinner tub.



- 2) Place a selection of articles in the spinning tub & insert the spin disc.




## Rinsing

- 1) Rotate the Cycle Selector in an anti-clockwise direction and select Normal.



- 2) Half fill tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B).

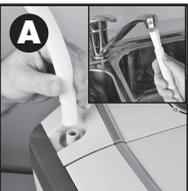

- 3) Rotate the Cycle Selector switch in a clockwise direction and select Drain.



- 4) Close both lids and rotate the spin timer in a clockwise direction to select the desired spinning time. See the Washing Guide to set the correct time.



- 5) Open the External & Internal lids of the spinning tub and remove the plastic spin disc.



- 6) Rotate the Cycle Selector in an anti-clockwise direction and select Normal.



## Maintenance & Storage

The appliance is fitted with a lint collection point that must be cleaned regularly

- 1) Drain all water from the appliance and remove the filter.



- 2) Wash down with clean water and then replace.



With the appliance disconnected from the AC input all external surfaces can be cleaned with warm soapy water taking care not to allow too much water to enter the control panel. Do not use abrasive cleaners or bleach.

Do not submerge the appliance in water.

When storing for periods of time, flush out washing & spinning tub with clean water then allow to dry completely before storing away.

## Identification of parts

1. Wash Timer
2. Cycle selector
3. Spin Timer
4. Wash Lid
5. Spin Lid
6. Drainage Hose
7. Wash Tub
8. Spin Tub

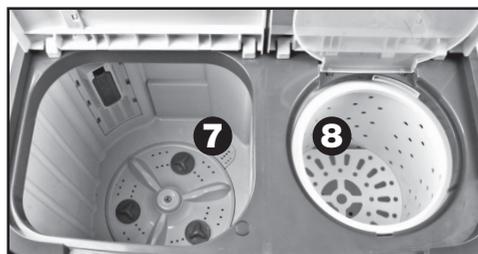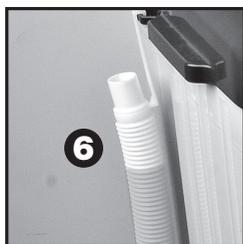

Part No.	COMP434
Height:	650mm
Width:	560mm
Depth:	362mm
Weight (Empty)	12kg
Max Washing Capacity	2.0kg
Rated Voltage	240V AC/50Hz
Rated Power	240W Wash / 120W Spin
Outer Casing	ABS plastic
Inner Casing	ABS plastic
Drain Pipe	460mm



5320

Customer Service: 1300 555 197