

Kuchef®



Super Blend 1000 Instruction Manual

Welcome

Congratulations on choosing to buy a Kuchef® product.

All products brought to you by Kuchef® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

02	Welcome
04	Warranty Details
05	General Information and Safety Instructions
08	Product Overview
09	Getting Started
11	Instructions
13	Other Useful Information
16	Repair and Refurbished Goods or Parts Notice



Kuchef®

Super Blend 1000

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

04

1300 777 137

service@unclebills.com.au

MODEL: IA0955 PRODUCT CODE: 55166 10/2016

3

YEAR WARRANTY

General Information and Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical product.

Electrical Safety and Cord Handling

1. Before turning on the Super Blend 1000, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the product.
2. To protect against fire and electric shock, do not immerse this appliance, cord set or plug in water or any other liquid.
3. Do not use an extension cord unless completely necessary with the Super Blend 1000. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
4. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
5. Do not bend or damage the power cord.
6. Never force the plug into an outlet.
7. Always unplug the Super Blend 1000 when not in use. To disconnect from the power supply, grip the plug and pull from the power outlet. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, maintenance or moving the Super Blend 1000.
8. Do not move or lift the Super Blend 1000 while the power cord is still connected to the power outlet or still on. Always ensure it is switched off and has cooled down before moving.
9. Do not use the Super Blend 1000 if the plug, cord or the Super Blend 1000 itself is damaged. Please contact our After Sales Support line for further advice.
10. Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

General Information and Safety Instructions (cont)

Usage Conditions and Restrictions

1. The Super Blend 1000 is intended for indoor household use only and not for commercial purposes.
2. Do not use the Super Blend 1000 for other than its intended use.
3. The Super Blend 1000 is not a toy. Supervise young children to ensure they do not play with this product.
4. The Super Blend 1000 is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
5. Do not leave the Super Blend 1000 unattended when plugged in. Always switch off and unplug when you are not using the Super Blend 1000.
6. Do not operate or place any part of the Super Blend 1000 on or near any hot surfaces (such as a gas or electric burner, or a heated oven).
7. Do not cover the appliance whilst in use.
8. This unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the Super Blend 1000.
9. Improper installation or misuse of this appliance may result in the risk of fire, electric shock or injury to person.
10. The manufacturer is not responsible for any eventual damage caused by improper or faulty use.
11. The use of attachments not sold or recommended by the manufacturer may cause fire or electric shock or injury.
12. The Super Blend 1000 is not intended to be operated by means of an external timer or any type of separate remote control system.
13. Do not place the Super Blend 1000 against a wall or against other appliances. Leave at least 10cm of free space around the appliance.

General Information and Safety Instructions (cont)

Handling and Usage

1. To prevent the Super Blend 1000 from overheating, never operate for more than 1 minute at a time, as this may cause permanent damage to the motor. If the motor stops working, unplug the power base and let it cool for an hour before attempting to use it again.
2. Always operate the Super Blend 1000 on a dry, level surface. Operating on sinks or uneven surfaces should be avoided.
3. Do not come in contact with the moving parts.
4. Keep your hands and utensils away from the blades while chopping or blending foods to reduce the risk of injury or damage to the appliance. A scraper may be used only when the Super Blend 1000 is not running.
5. Ensure you have screwed the blade attachment securely onto the blending cup before placing it onto the power base and operating the appliance.
6. Be careful when handling the blade attachment, especially when cleaning as the blades are very sharp.
7. Do not place the blade attachment onto the power base without attaching the blending cup first.
8. Always ensure that the blade attachment is tightly and securely fastened to the blending cup before using the Super Blend 1000. A medium to high amount of force should be used to fasten the blade attachment onto the blending cup.
9. Do not blend warm or hot foods and liquids as this may cause a build-up of pressure in the blending cup due to steam being generated from the heat. This pressure build-up may cause the food or liquid to be ejected from the blending cup or cause the blending cup to shatter.
10. Do not operate the Super Blend 1000 when the blending cup is empty as this may damage the appliance.
11. Never remove the blending cup/blade attachment from the power base until the motor has come to a complete stop. Removing the blending cup/blade attachment while the power base is still running may cause damage to the blade coupling or the motor gear.
12. Do not exceed the maximum fill mark on the blending cup when adding ingredients, as this can cause spillage.
13. Do not use the blending cups if they are cracked or broken.

Product Overview

1. 1L Blending Cup
2. 2 x Easy-Drink Lids
3. 2 x 800ml Blending Cups
4. 1000 Watt Power Base
5. 2 x Storage Lids
6. Blade Attachment



Included (not pictured) Instruction Manual, Quick Start Guide, Warranty Card, Power Cord, and Recipe Booklet.

Getting Started

Before First Use

Prior to using your Super Blend 1000, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this appliance. We recommend you keep the original packaging for storing your Super Blend 1000 when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Super Blend 1000 is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children so ensure all packaging materials are out of their reach.
2. Remove the twist-tie which is securing the electrical cord. Uncoil the cord and straighten it to remove any kinks. Do not use the product if the cord or plug is damaged, please call the After Sales Support line for further advice.
3. Wash the 1L blending cup, and 2 x 800ml blending cups, blade attachment, easy-drink and storage lids in warm soapy water, then rinse and dry thoroughly. These parts are dishwasher safe.
4. Wipe the exterior housing of the power base with a soft damp cloth and dry thoroughly.

CAUTION: Do not immerse the power base in water or any other liquids.

5. Place the power base on a flat, stable, level surface to operate.

Getting Started (cont)

The “Pulse” Technique

The Super Blend 1000 features a powerful 1000 watt motor, which emulsifies the ingredients when blending. If you want to make chunky dips or chop vegetables in a coarse manner, it is recommended to use the “Pulse” Technique.

To use the pulse technique:

1. With one hand, hold the base of the blending cup and apply anticlockwise pressure to it to prevent it from locking.
2. With your other hand, press down on the top of the blending cup (blending will start), and then quickly release. To avoid over-blending do not lock the blending cup in place (do not turn clockwise). Continue this process until the desired consistency is reached.

The “Shake” Technique

When filling the Super Blend 1000 with ingredients, sometimes too much ingredients, or not enough liquid is added (can cause the mixture to be too dense). This makes it hard for the ingredients towards the top of the blending cup to make it down to the blades. If the ingredients towards the top of the blending cup are not being blended, use the “Shake” Technique.

To use the shake technique:

1. Remove the blending cup/blade assembly from the power base.
2. Hold the blending cup/blade assembly with both hands and shake until the ingredients at the top of the blending cup have moved closer towards the blending blades.
3. Next, place the blending cup/blade assembly back onto the power base and commence blending once again.

The “Tap” Technique

If you have a problem with ingredients sticking to the side of the blending cup, the “Tap” Technique will assist with moving the ingredients towards the blending blades.

To use the tap technique:

1. Remove the blending cup/blade assembly from the power base.
2. Then, tap the blending cup/blade assembly lightly on the counter/benchtap to force the ingredients towards the blending blades.
3. Next, place the blending cup/blade assembly back onto the power base and commence blending once again.

Instructions

Operating the Super Blend 1000

1. Place the power base on a flat, stable and level surface.
2. Add the ingredients into the nominated blending cup.

NOTE: Do not exceed the maximum fill mark on the blending cup when adding ingredients, as this could cause spillage.

3. Pour in a small amount of liquid into the blending cup, this will assist to blend the ingredients.
4. Twist the blade attachment onto the blending cup by turning it in a clockwise direction until it is securely attached. The blending blades should be clearly visible inside the blending cup.

CAUTION: Always ensure that the blade attachment is tightly and securely fastened to the blending cup before using the Super Blend 1000. A medium to high amount of force should be used to fasten the blade attachment onto the blending cup.

5. Plug the power cord into a power outlet and turn on.
6. Turn the blending cup upside down so the blade attachment is positioned on the bottom of the blending cup.
7. Press the blending cup down and twist it in a clockwise direction to lock it into position. **Once locked, the Super Blend 1000 will commence blending automatically.** When you have reached the desired consistency, twist the blending cup in an anticlockwise direction and wait 3 seconds. Then lift the blending cup from the power base.

NOTE: The Super Blend 1000 is designed to be used for a maximum of 1 minute intervals. Please allow for a 3 minute cool down period in between each 1 minute cycle to ensure the Super Blend does not overheat.

8. Switch off and unplug the Super Blend 1000 from the power outlet.
9. Turn the blending cup upright with the blade attachment on top. Remove the blade attachment by rotating it in an anticlockwise direction and replace it with an easy-drink or storage lid.

Instructions (cont)

NOTE: Always ensure you have securely tightened the blade attachment before operating the Super Blend 1000.

NOTE: To prevent the Super Blend 1000 from overheating, do not blend dry ingredients for more than 30 seconds.

CAUTION: The blades are very sharp, handle with care.

NOTE: You may notice a slight odour being emitted from the Super Blend 1000 during the initial use. This is normal and the odour will cease with continued use.

NOTE: Do not blend warm or hot foods and liquids as this may cause a build-up of pressure in the blending cup due to steam being generated from the heat. This pressure build-up may cause the food or liquid to be ejected from the blending cup or cause the blending cup to shatter.

Other Useful Information

Suggested Uses for the Blending Cups

The table below is to be used as a guide only, and will differ depending on ingredients used.

Purpose	Suggested Blending Cup	Type of Food Examples
Chopping	800 ml	Nuts
	1 litre	Chocolate
Mixing	800 ml	Batters
	1 litre	Dips
Sauces	800 ml	Vinaigrettes
	1 litre	Salad Dressing
Frozen Blending	800 ml	Ice
	1 litre	Frozen Fruit
		Ice Cream
Juices/Smoothies	800 ml	
	1 litre	

Other Useful Information (cont)

Cleaning and Maintenance

1. Unplug and switch off the Super Blend 1000 from the power outlet.
2. Wash the blending cup, blade attachment, easy-drink and storage lids in warm soapy water, then rinse and dry thoroughly. These parts are dishwasher safe.
3. For extra stubborn ingredients stuck within the blending cup and blade attachment, place it onto the power base and turn clockwise to start the blender (run for 20-30 seconds). This will loosen the ingredients stuck and with a light scrub, the ingredients should be easily washed away.
4. Wipe the exterior housing of the power base with a soft damp cloth and dry thoroughly.

CAUTION: Always unplug the Super Blend 1000 when cleaning or assembling.

CAUTION: Do not submerge the power base into water or any other liquids.

CAUTION: The blades within the blade attachment are very sharp, handle with care.

NOTE: Do not use harsh or abrasive cleaners to clean the Super Blend 1000, as this could damage the finish of the appliance.

Storage

- Before packing away the Super Blend 1000 for storage, ensure it is clean and dry.
- We recommend storing the Super Blend 1000 in its original carton to protect it from dust, with all the parts and accessories (1L blending cup, 2 x 800ml blending cups, easy-drink and storage lids and blade attachment).
- Store the Super Blend 1000 in a clean and dry place, out of children's reach.
- Do not place heavy objects on top during storage.

Other Useful Information (cont)

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual please contact service@unclebills.com.au to obtain an electronic copy.

The Super Blend 1000 has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 60335.1:2011 + A1

AS/NZS 60335.2.14

Specification Table

MODEL:	IA0955
COLOUR:	Dark Grey
VOLTAGE:	220-240V~ 50-60Hz
POWER:	1000-1200W
DIMENSIONS:	15 x 15 x 38cm
NET WEIGHT:	2.9kgs
WARRANTY:	3 Years

Version No: 1.0
Issue Date: 17 Jun, 2016





Kuchef®

Super Blend 1000

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

PO Box 6292

Silverwater NSW 1811 Australia

1300 777 137

Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

UNCLE BILLS

KUCHEF SUPER BLEND 1000

Artwork Size: 148 x 152mm

PLU #: 55166

Item Code #: IA0995

On Sale Date: 10/2016

UBA AMENDMENTS: B

DATE: 17-06-2016

UB MODIFIED: Jez (sticky notes)

ALDI AMENDMENTS:1.0

DATE:

MODIFIED:



C M Y K

ARTWORK SIGN OFF

SIGNATURE

SIGNATURE

PRINTER FILE

