



JOIN THE EVOLUTION.™

#### How to Curl and Style Your Hair

The Ultimate Salon Setter features 3 variable sized rollers, allowing for use on all hair types – from medium to long length hair.

**NOTE** – The firmness of the curl is determined by several factors: heat-up time, best roller selection and the length of time the roller is left in the hair.

**Small rollers:** use on short hair to create fullness and a tight curl. Tight curls can be used at the nape of the neck, and used to frame your face.

**Medium rollers:** use on medium to long hair to create a looser curl, yet bouncy and full.

**Large rollers:** use on medium to long hair to create voluptuous curls with full, extra volume.

1. Select the desired roller size that suits the hairstyle you wish to create and separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.
2. Take one section of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using a metal clip.
3. For tight, firm curls use smaller rollers and leave in the hair for at least 10 minutes before removing. For soft, wavy curls use larger rollers and remove rollers from the hair after a shorter period of time.
4. To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

**IMPORTANT:** After using the hairsetter several times, you will find the best timing for the texture of your hair and for the result you desire.

#### How does the ionic feature work?

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

#### What is Ceramic Tourmaline Technology?

Ceramic tourmaline technology provides even heat distribution. Assists in the deep penetration of heat and is a natural source of negative ions for reduced frizz and a silky, smooth finish with enhanced shine.

#### Buzzing noise

This product will make a faint buzzing noise, due to the ionic conditioning technology function. This noise is completely normal, and part of standard operation of this product.

#### User Maintenance

Your appliance is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the hairsetter to cool. Clean the unit and the heating plates with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap).

If any abnormal condition occurs, unplug the appliance, allow to cool and return it to your place of purchase.

#### Limited Three Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website [www.vssassoon.com.au](http://www.vssassoon.com.au)

**To make a warranty claim you must retain your proof of purchase. Further details can be found at [www.vssassoon.com.au](http://www.vssassoon.com.au) and click on 'customer service'.**

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair ©2014 Conair Australia Pty Ltd. Suite 101, 18 Rodborough Rd Frenchs Forest NSW, 2086 Australia

Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247

VSP3029A

**VS**  
SASSOON



instruction booklet  
Ultimate Salon Setter

VSP3029A

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

#### DANGER:

When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.



**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids.
- **Do not reach for an appliance that has fallen into water. Unplug immediately.**
- Unit is hot when in use. Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.


### Ultimate Salon Setter

The VS Sassoon Ultimate Salon Setter is an ideal styling product that can be used to create soft, loose waves & curls to large voluptuous curls with extra volume. It features 20 multi-sized rollers in 3 sizes for creating all types of curls: 8 large, 6 medium and 6 small. With ionic conditioning and ceramic tourmaline technology for a silky, smooth finish, a convenient cord keeper system that rewinds the cord inside the base at a touch of a button for no fuss storage, this hairsetter is suitable for all hair types.

This professional hairsetter also features 12 variable temperature settings to suit all hair types, giving you the confidence to achieve your own desired look.

LONDON • NEW YORK • SYDNEY  
**JOIN THE EVOLUTION.™**

Get more from your styling tools, visit  
**www.vssassoon.com.au**  
for news, styling tips and much more.

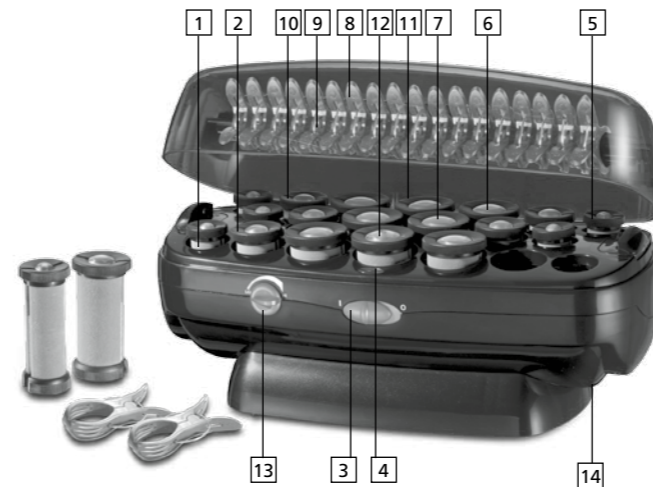

#### Features:

1. Ionic conditioning technology
2. Ceramic tourmaline technology
3. On/off switch
4. On/off indicator light
5. 6 small rollers
6. 6 medium rollers
7. 8 large rollers
8. 20 smart clips
9. Clips are stored in the lid for total convenience
10. Cool touch roller ends on each of the rollers for comfortable control
11. Flocked coating on each of the rollers are gentle on the hair
12. Heat ready indicator on centre roller - turns white when rollers are heated
13. 12 variable temperature settings from 90°C to 140°C
14. Cord keeper system

### How to use your Ultimate Salon Setter

1. A plastic cover has been placed over the plug to protect it during transportation. Remove the plastic cover from the plug before use.
2. Place the hairsetter on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet. Your hairsetter is designed with a cord keeper system for no fuss storage. Gently pull the power cord out from the base, ensuring that the power cord is pulled all the way out until you see the red marker. With lid closed and all rollers in place, plug into a suitable power outlet.
3. Once plugged in, turn the unit on by sliding the on/off switch to the on position. The on/off indicator light will turn red and the rollers will begin heating up.
4. Allow rollers to heat with the lid closed, as this will provide the fastest, most efficient heat up. The rollers will be heated and ready to use within 2 minutes. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to Curl and Style Your Hair' for further information.
5. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

**IMPORTANT - When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up. When removing rollers to place in the hair, the lid must always be open. Leaving the lid closed when rollers are missing will cause the lid to melt. Take extra caution when heating up the appliance when rollers are missing.**

#### What is the Cord Keeper System and How do I use it?



To use this system, unwind the cord by simply pulling the power cord from the base until it stops. As soon as the red marker is visible on the power cord, stop pulling, the power cord has now reached the maximum length (max length is 1.5m). Do not pull beyond this point, as it could cause damage to the power cord.

To rewind the power cord, pull gently on the plug and the cord will begin rewinding inside the base of the hair setter.

**CAUTION: Always make sure the power cord is completely unwound before turning the appliance on. The cord rewinds quickly: to avoid injury, hold the plug with one hand, while holding the hairsetter with the other.**

#### How to use the variable temperature settings

The 12 variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Setting 1 – 3 (90°C to 100°C)	Delicate, fine hair
Setting 3 – 7 (100°C to 120°C)	Average, normal hair
Setting 7 - 12 (120°C to 140°C)	Thick and hard to style hair