


Strider **Compact**

INSTRUCTION MANUAL

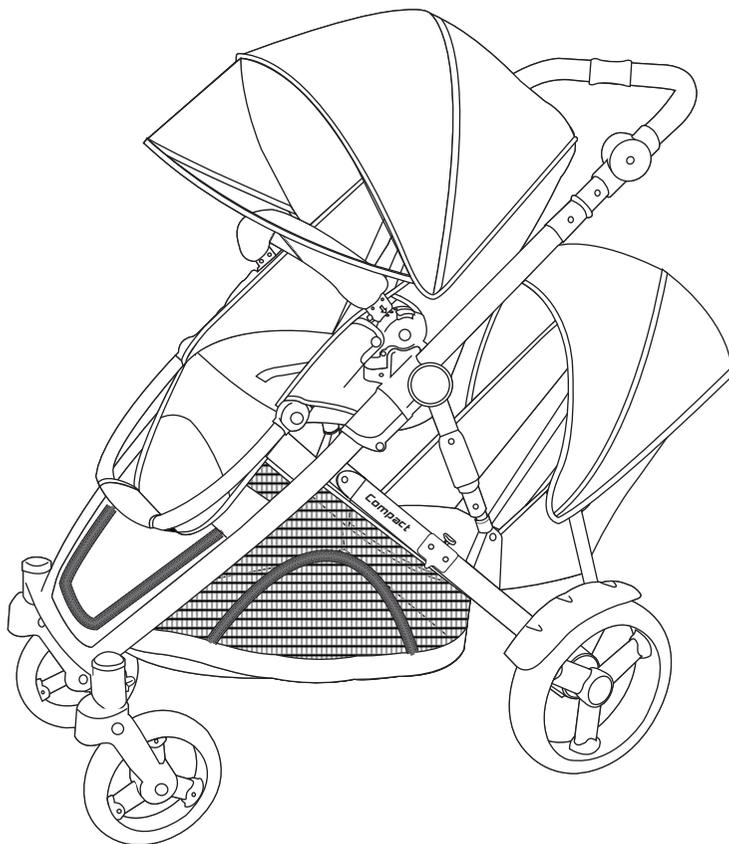

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

Note: Second Seat, Bassinet, Infant Carrier & are all sold separately.

Britax

Steelcraft

Stroller Features	4
Quick Reference Guide to Compact Single Mode Configurations	6
Quick Reference Guide to Compact Double Mode Configurations	7
1 Stroller	8
1.1 Stroller Important Notes & Warnings	9 & 10
1.2 Manual Handling Techniques.....	11
1.3 Stroller Parts.....	12
1.4 Stroller frame opening.....	13
1.5 To fit and remove the wheel guards.....	14
1.6 Rear wheel fitting and removal.....	14
1.7 Front wheel fitting and removal.....	15
1.8 Swivel/fixed front wheel operation.....	16
1.9 To operate the brake.....	16
1.10 To adjust the pivotal handle - 7 positions.....	17
1.11 To fit the accessory bag.....	17 & 18
1.12 Fitting the stroller seat to the frame.....	18 & 19
1.13 To fit the arm bar.....	19 & 20
1.14 Adjusting the backrest.....	20 & 21
1.15 Stroller seat removal.....	21
1.16 To face the seat in opposite direction.....	22
1.17 To fit, use and remove the canopy.....	23 & 24
1.18 Harness adjustment.....	25 - 27
1.19 Tether strap.....	28
1.20 Fitting the seat pad.....	29
1.21 To fit the shoulder pads.....	29
1.22 Adjusting the leg support.....	30
1.23 Fitting the boot cover.....	30
1.24 To use the basket.....	31
1.25 Fitting the mesh cover.....	31 & 32
1.26 Fitting the rain cover.....	33 & 34
1.27 To use the stroller.....	35
1.28 To fold/close the Stroller.....	36 - 39
1.29 To lift and carry the Stroller.....	39
Notes	40

Optional Accessories (Bassinet, Infant Carrier & Second Seat).....	41
2.1 Bassinet Important Notes & Warnings.....	42
2.2 Bassinet Parts.....	42
2.3 Bassinet assembly, fitting & removal.....	43 - 45
3.1 Infant Carrier Important Notes & Warnings.....	46 & 47
3.2 Infant Carrier fitting and removal.....	47 - 49
4.1 Second Seat Important Notes & Warnings.....	49
4.2 Second Seat Parts.....	50
4.3 Fitting Second Seat to the stroller.....	51 & 52
4.4 Adjusting the backrest.....	53
4.5 To fit, use and remove the canopy.....	54
4.6 Harness adjustment.....	55 - 57
4.7 Adjusting the head pillow height position.....	58
4.8 To fit the shoulder pads.....	58
4.9 Fitting the Boot Cover.....	59
4.10 Folding the Second Seat with the frame.....	59 - 61
4.11 Removing the Second Seat from the frame.....	61 & 62
4.12 To use the adaptors.....	62 & 63
4.13 Install the Stroller Seat using the adaptors.....	63
4.14 Install the Infant Carrier using the adaptors.....	64
4.15 Fitting and removing Soft Goods from the second seat frame.....	65 & 66
4.16 Fitting and removing Infant Carrier from the second frame.....	67 & 68
4.17 Refit and remove the soft goods to the Second Seat frame.....	69 & 70
Stroller Folding Configurations.....	71
Care & Maintenance.....	72
Notes.....	73

STROLLER FEATURES



- S1. Adjustable & removable canopy
- S2. Peek a boo window
- S3. Pivotal handle
- S4. Frame fold mouldings (on both sides)
- S5. Canopy mesh (under zip)
- S6. Stroller seat release buttons (on both sides)
- S7. Frame sockets (on both sides) accepts Stroller, seat, Infant Carrier, bassinet or adaptors.
- S8. Frame lock
- S9. Wheel guards

- S10. Side access zip pocket (on both sides)
- S11. UV Sun Visor
- S12. Padded seat insert
- S13. Arm bar
- S14. Removable & reversible Stroller Seat
- S15. 5 point harness
- S16. Crotch pad
- S17. Adjustable footrest
- S18. Front access zip pocket
- S19. Front wheel release
- S20. Swivel wheel lock

STROLLER FEATURES cont...

- S21. Canopy window
- S22. Tether Strap
- S23. Backrest recline lever
- S24. Back pocket
- S25. Accessory bag
- S26. Brake
- S27. Rear wheel release
- S28. Mouldings (for attachment to Second seat connecting pins)
- S29. Second lock (for Second seat)
- S30. Lower mouldings (for attachment to second seat frame)



**Accessory bag and Stroller seat have been removed from the frame shown on the right.*

QUICK REFERENCE GUIDE - SINGLE MODE



Stroller - Forward Facing

Page: 18-19



Stroller - Rear Facing

Page: 22



Bassinet

Page: 42-45



Infant Carrier - Rearward Facing

Page: 46-49

Shown with optional accessories (sold separately)

QUICK REFERENCE GUIDE - DOUBLE MODE



Stroller Forward Facing + Second Seat

Pages: 18-19 + 49-52

With Adaptors: 62 & 63



Stroller Forward Facing + Infant Carrier

Pages: 18-19 + 65-68

With Adaptors: 62-64



Infant Carrier + Second Seat

Pages: 46-49 + 49-52

With Adaptors: 62-64

Recommended to use the adaptors in this mode



Infant Carrier + Infant Carrier

Pages: 46-49 + 65-68

With Adaptors: 62-64

Shown with optional accessories (sold separately)

SECTION ONE: STROLLER



1.1 IMPORTANT NOTES & WARNINGS

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR OR TRAY BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 4 KG IN THE BASKET, 1KG IN THE SEAT BACK REST POCKET (IF SUPPLIED), 1KG IN THE BASSINET POCKET (IF SUPPLIED) OR 1KG IN THE ACCESSORY BAG (IF SUPPLIED).

 **WARNINGS: TO AVOID INJURY OR DEATH:**
ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.

WARNINGS:

- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20 KG, 9KG FOR THE BASSINET, 9KG FOR THE INFANT CARRIER OR 17KG FOR THE SECOND SEAT.

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



CAUTION

This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

1.2 MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed? Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.

1.3 STROLLER PARTS



Stroller frame



Stroller seat



Canopy



Arm bar



Boot cover



Seat pad



Shoulder pads



Accessory bag



Mesh cover



Rain cover



Wheel guards



Foam filled
Rear wheels



Front wheels
(4 wheel model)

1.4 STROLLER FRAME OPENING

IMPORTANT NOTES:

PLEASE REFER TO PAGE 11 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING UNFOLDING OF THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.



- A** After carefully removing the contents from the carton, Lay the frame on a flat surface and remove any excess packaging.



- B** With due care, hold the handle with one hand and with the other hand release the frame lock. Lift the handle up to partially open the frame.




- C** Continue to lift the handle up to open the frame until the left and right side frame mouldings engage and lock together.




- D** Push down on the handle to confirm the frame is locked open.

1.5 FIT & REMOVE THE WHEEL GUARDS

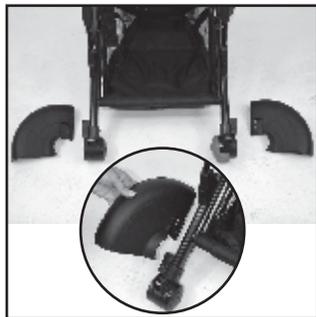

A Position the left and right guards beside the frame as shown.

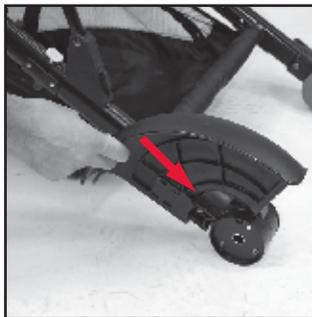


B Fit each guard onto the moulding at the base of the leg tubes. Push down until they lock into position.




C Pull on each guard in the direction shown, to make sure they are locked on correctly.


1.6 REAR WHEEL FITTING & REMOVAL

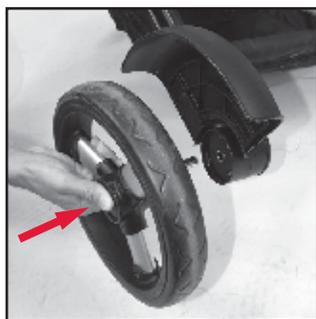

A To fit the rear wheels, align the wheel axle/rod with the hole in the wheel moulding. Press in and hold the central button, then push the rear wheel fully into the wheel moulding.

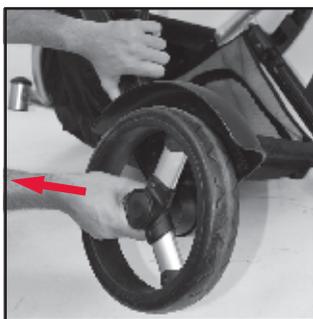

B Release the central button, then pull on the rear wheel to make sure it is locked on. Repeat steps A & B to fit the other rear wheel.

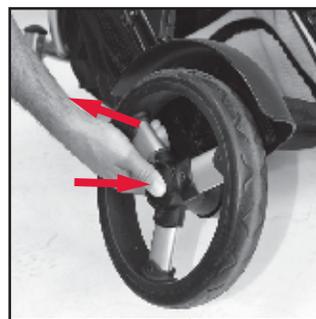


C To release the rear wheels, press in and hold the central button. Then slide the wheel out and remove. Repeat for the other side.


1.7 FRONT WHEEL FITTING & REMOVAL



NOTE: Tip the frame backwards for more convenient assembly.

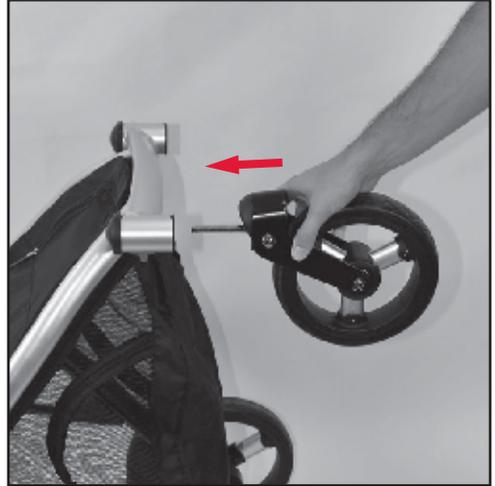

A Take each front wheel assembly and push the axle into the wheel housing, until it locks in.

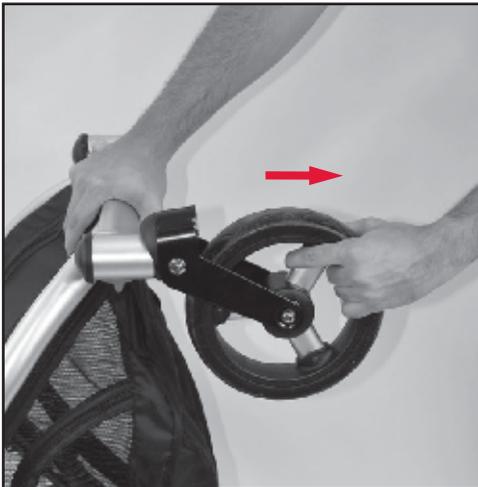

B Pull on both front wheel sets to make sure they are locked on.



C To remove the wheel assembly, turn the top knob to the left to unlock and release the wheel.

1.8 SWIVEL/FIXED FRONT WHEEL OPERATION

NOTE: Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.



A For swivel wheel mode slide both red latches up until they lock it into position.



B To lock the front wheels into the fixed position, slide both red latches down until they lock.



C The front wheels will automatically lock into the fixed position when you move the stroller forward by approximately one metre.

1.9 TO OPERATE THE BRAKE



WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

NOTE: It is recommended to leave the brake locked during the remainder of the stroller and accessory assembly.



A To lock both rear wheels, press the red brake lever all the way down until you hear a click. The indicator will change to red. Push the Stroller back and forth to confirm the wheels are locked.


Indicator




B To unlock both rear wheels, press the red brake lever all the way down until you hear a click. The indicator will change to green.

1.10 TO ADJUST THE PIVOTAL HANDLE

7 POSITIONS

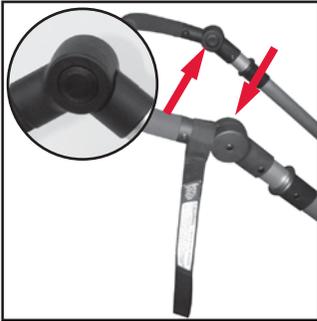

A There is an adjusting button on the inside of each handle moulding.

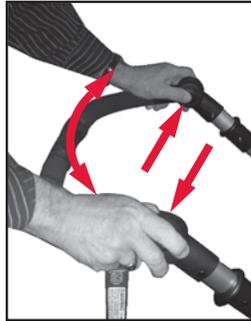

B Press both buttons in together and hold. Now rotate the handle up or down to the desired height position.



C When the desired height position has been achieved, release both buttons.

1.11 TO FIT THE ACCESSORY BAG

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 1KG IN THE ACCESSORY BAG.



A The bag firstly needs to be attached to the hook and loop tab on the inside of the stroller basket.



B Hold the bag up by the black back flap on the rear side of the bag.
Note: the hook and loop tab on the edge of the flap.



C Attach the hook and loop tab to the hook and loop tab on the inside of the basket. This will help to keep it in place.
Note: this flap also contains two pockets.

1.11 TO FIT THE ACCESSORY BAG Cont...



D Now thread each hook and loop tab through the frame moulding brackets as shown.



E Attach each strap to the hook and loop tab sewn onto the bag to hold in place.



F The accessory bag is now ready for use.

NOTE: Remove the bag when using the second seat.

1.12 FITTING THE STROLLER SEAT TO THE FRAME

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.

NOTE: The seat is reversible so it can face in either forward or rearward position.



A Hold the Stroller seat over the frame.



B Align the Stroller seat mouldings on both sides, over the frame connection sockets located in the middle of the stroller.

1.12 FITTING THE STROLLER SEAT TO THE FRAME



C Push the Stroller seat down until both seat mouldings are locked into the frame sockets.



D Pull up on both sides of the stroller seat to make sure it is securely locked into the stroller frame.


1.13 TO FIT THE ARM BAR

IMPORTANT NOTE:


WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.



A One side at a time, align the arm bar pin with the frame moulding as shown.

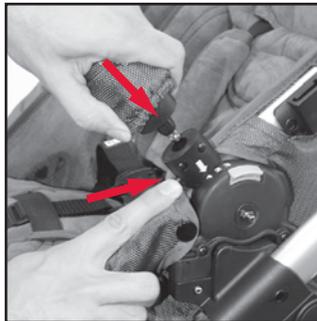


B Press in and hold the engaging/release button, then insert the pin all the way in.

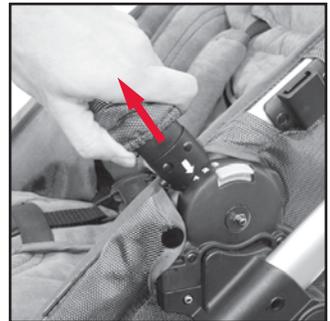

C Release the button, then pull on the arm bar to make sure it is engaged. Repeat steps A, B & C for the other side.

1.13 TO FIT THE ARM BAR Cont...

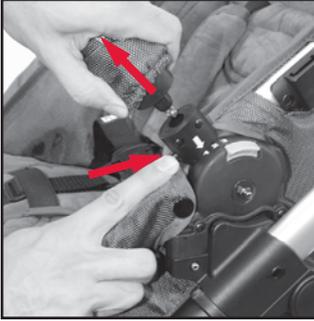

D To release the arm bar, press in and hold the release button located under the arm bar connector, then pull out the arm bar.



E Rotate the arm bar clear of the stroller seat to assist with putting a child in the stroller.



F Lock the arm bar back into position after fastening the child in the harness. Ensure the arm bar is correctly installed. The 'Caution' text must appear on the right hand side so it is possible to read (not upside down).

1.14 ADJUSTING THE BACKREST

WARNINGS:

- **THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.**
- **THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.**

NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

1.14 ADJUSTING THE BACKREST Cont...



A There are 4 indicated seat positions while the seat is facing forward or rearward.



B To adjust up or down, fully lift the adjusting lever all the way up.




C Continue to hold the lever up and adjust the seat to any one of four positions.

1.15 STROLLER SEAT REMOVAL

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.

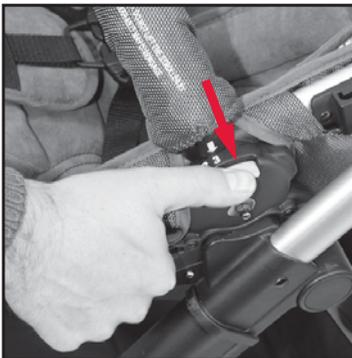

A Hold the seat or arm bar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons.



B While holding the grey buttons, lift the seat out of the frame.

1.16 TO FACE SEAT IN OPPOSITE DIRECTION

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.



A Refer to section 1.15 for removing the seat from the frame.



B Turn the Stroller seat around to face handle. Refer to section 1.12 for fitting the seat to the frame.

! WARNING - IT IS NOT RECOMMENDED TO USE THE TOP SEAT FACING IN THIS POSITION IF YOU ARE USING EITHER THE SECOND SEAT OR THE INFANT CARRIER IN THE LOWER FRAME POSITION.



1.17 TO FIT, USE & REMOVE THE CANOPY

IMPORTANT NOTE:

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.



- A** To attach the canopy, adjust the backrest to the upright position, then slide the canopy mouldings on the frame mouldings until they connect together. Pull up to confirm they are locked on.



- B** Attach the canopy hook strips to the pile strips around the top and sides of the frame for a secure fit.



- C** To adjust the canopy, open by pulling forward, or close by pushing it backward.



- D** For extra protection, pull visor out from under the front of canopy.



- E** To expose the mesh section of the canopy, unzip the center section.



- F** The zip should be fully unzipped to expose the centre mesh section. Use the fabric to expose or enclose the mesh section. Reverse the above steps to close the mesh section.

1.17 TO FIT, USE & REMOVE THE CANOPY cont...



G The window cover is kept in place by a hidden magnet located at the bottom of the window cover.



H To open the window cover, simply lift the cover and place over the centre bow.




I To remove the canopy, pull the canopy off the frame mouldings.

1.18 HARNESS ADJUSTMENT


⚠ WARNING: USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.

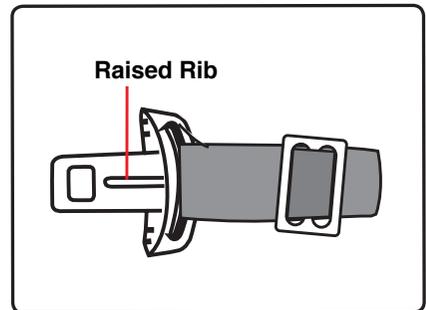


- A** Set parking brake. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

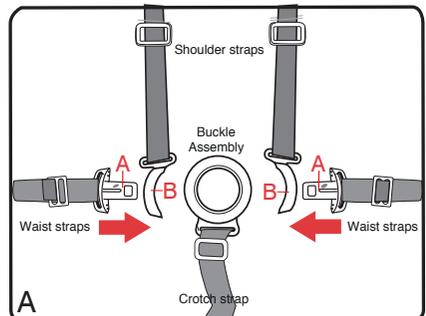

1.18 HARNESS ADJUSTMENT cont...


- B Note: Ensure the straps are not twisted as they may become uncomfortable for the child.**

Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

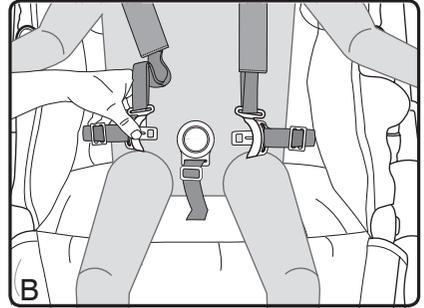


Press in & hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

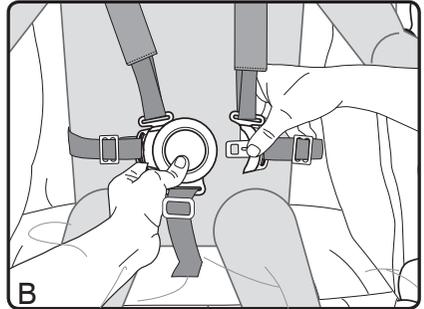


- C** Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

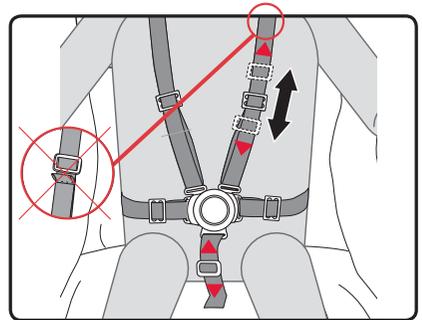


CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS

1.18 HARNESS ADJUSTMENT cont...


- D** Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit.
The waist strap needs to fit firmly around the child.

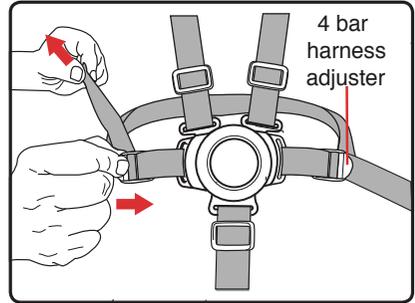

- E** Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

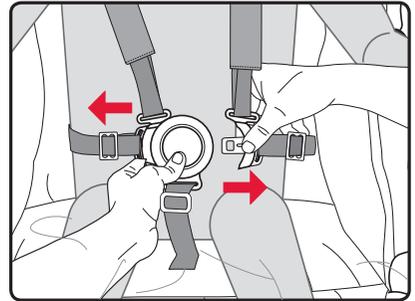

- F** The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, position the shoulder straps near the child's shoulders then either push the shoulder harness tongue out of the current harness slot and through the back of the seat.

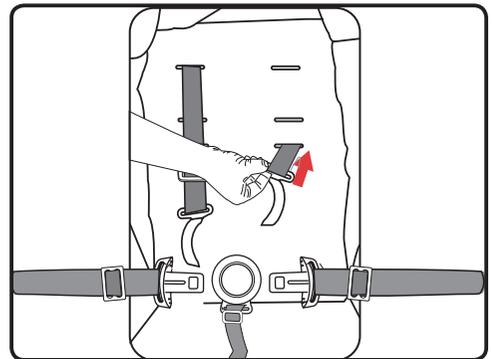

*Depending on the model

1.19 TETHER STRAP

⚠ WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- A** A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



1.20 TO FIT THE SEAT PAD

NOTE: To assist with installing, release one side of the arm bar, see section 1.12 (D) and release the harness buckles.

Do not use this seat pad for children weighing more than 18 kilograms.



A Ensure the shoulder straps are fitted through the appropriate harness slots to suit your child's seated height.



B Fit the harness waist straps through the lower slots in the back of the seat pad.



C Feed the crotch buckle pad through the lower slot in the seat pad.

1.21 TO FIT THE SHOULDER PADS



A Release the harness buckles and slide the shoulder pads onto the shoulder strap



B Repeat for the other shoulder pad.

1.22 ADJUSTING THE LEG SUPPORT

IMPORTANT NOTE:

- THE LEG SUPPORT FEATURE IS PROVIDED FOR YOUR CHILDS COMFORT.
- THE LEG SUPPORT IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG SUPPORT. IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED. IF LEG SUPPORT DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG SUPPORT MODE.



- A** To lower or raise the leg support, press in and hold both the left and right buttons.



- B** While holding both the left and right buttons, tilt the leg support up or down to the desired position.

1.23 TO FIT THE BOOT COVER



- A** Raise the leg support to the horizontal position. Hook the boot cover 'pocket' under the leg support.



- B** Pull the top of the boot cover under the arm bar and then back over the top.



- C** Connect the press studs to keep in place. The boot cover is now ready for use.

1.24 TO USE THE BASKET

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 4KG IN THE BASKET.

NOTE: When a child is in the **Second Seat**, basket access is recommended only from the sides, or from the front.



A Access is available from either side by undoing the zippers.



B Access is available from the front by undoing the zipper.




C Access is available from the rear of the stroller.

1.25 TO FIT THE MESH COVER



A To fit the mesh cover over the stroller seat, place the elastic section of the mesh cover over the front section of the canopy.

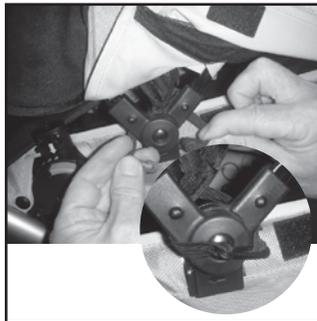

B Lift up the end of the canopy and wrap the elastic loops around the canopy frame as shown and attach together using the clip.



C When fitted to the stroller, the front section of the mesh cover will rest on the leg support.

1.25 TO FIT THE MESH COVER cont...



D Lift the top fabric cover as required or lower for most protection. The mesh cover can be used on both seat directions.



E To fit the mesh cover over the bassinet, place the elastic section of the mesh cover over the front section of the canopy.



F Wrap the elastic loops and clips around the hook and pile strips and attach together using the clip.



G To fit the mesh cover over the second seat, place the elastic section of the mesh cover over the front section of the canopy.



H Wrap the elastic loops and clip around the bars at both sides of the second seat.



I Attach using the clip.

1.26 TO FIT THE RAIN COVER

IMPORTANT NOTE:

ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE. REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.



A To fit the rain cover to the stroller - Place over the stroller canopy as shown. Loop the elastic section over the stroller seat leg support, then pull the rear rain cover section down between the handle.



B Join the hook and pile around the handle tube.



C The rain cover can be fitted to the stroller seat when in forward or rear facing mode.




D To fit the rain cover to the stroller and second seat - Follow step A, then pull the rear rain cover section down between the handle and over the back of the second seat as shown above. Attach the hook and pile as described in B above.



E To fit the rain cover to the Infant Carrier - Place over the Infant Carrier canopy as shown. The elastic section will hang over the front of the stroller, then pull the rear rain cover section down between the handle.

1.26 TO FIT THE RAIN COVER cont...

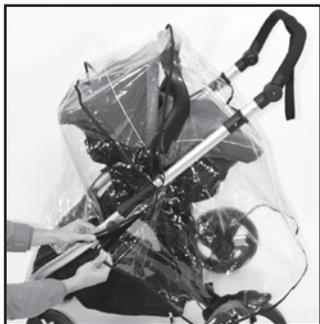

F Join the hook and pile around the handle tube.



G To fit the rain cover to the infant carrier and second seat or second infant carrier - Follow Step E, but ensure to pull the rear rain cover section over the back of the second seat or lower infant carrier as shown. Join the hook and pile around the handle tube.



H Rain cover fitted over the two infant carriers.



I To fit the rain cover to the bassinet- Place over the bassinet canopy as shown. Loop the elastic over the front of the bassinet.



J Join the hook and pile around the handle tube.

1.27 TO USE THE STROLLER

PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

1.28 TO FOLD/CLOSE THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
 - FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
 - WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
 - THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
 - KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.
-
- Remove the bassinet or infant carrier if connected to the frame prior to folding.
 - The second seat can either be removed or folded up prior to folding.
 - The rain cover must also be removed if fitted.

NOTE: Stroller seat and wheels can be removed to reduce the total folded size.

See sections 1.6 & 1.14 for reference. With stroller seat attached, folding the leg support will also help to reduce the folded size.

FOLDING TIPS

1. It is recommended for easier handling, to take the stroller seat off first. Then fold the frame and put both seat and frame in the car.
2. For smaller cars it may also be convenient to simply remove the rear wheels.

1.28 TO FOLD/CLOSE THE STROLLER cont...



- A** Engage the rear brakes. Remove all objects from seat back pocket and basket and close the canopy. Raise the handle up one or two positions (as shown) to avoid contact with the wheels when folded.
- B** Remove the stroller seat from the frame. Hold the seat or arm bar on both sides with your hands. Then with your fingers or thumbs, press down and hold the grey buttons. While holding the grey buttons, lift the seat off the frame.


IMPORTANT NOTE:

INCORRECT FOLDING MAY CAUSE DAMAGE TO THE STROLLER AND FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.

- Ensure the front wheels are in swivel mode, so the front wheels will automatically position under the stroller during folding.



- C** For swivel wheel mode, lift the swivel latch up on both front wheels until they lock into position.

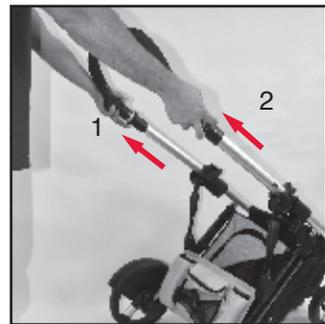

- D** Pull release mouldings 1 & 2 all the way up and hold to release the frame locks.

1.28 TO FOLD/CLOSE THE STROLLER cont...



- E** Push down on the handle and the frame will begin to fold.



- F** Fold all the way down until the frame lock engages.



- G** Frame lock engaged.



- H** The two separate components after folding.



- I** Separation of the stroller seat and frame promotes easier handling and storage.

NOTE: Make sure the frame lock is engaged before lifting up and always bend the knees when lifting.

1.28 TO FOLD/CLOSE THE STROLLER cont...

If you have chosen not to remove the Stroller Seat, follow the procedure below.

Note: Ensure the Stroller seat is forward facing. This will achieve a more compact fold.



J Follow step A. If seat unit is attached and in child facing away from parent mode, then adjust the backrest to the most upright position.



K If seat unit is attached and in child facing parent mode, then adjust the backrest to most reclined position.



L Follow steps C, D & E. Then fold all the way down until the frame lock engages (frame lock shown in step G).

1.29 TO LIFT AND CARRY THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.

Ensure the storage latch is locked onto the frame before lifting the stroller. To lift the stroller, grasp the frame halfway along the stroller, so the stroller is balanced.



Section Two: Bassinet



Section Three: Infant Carrier



Section Four: Second Seat

OPTIONAL ACCESSORIES

2.1 BASSINET WARNINGS & IMPORTANT NOTES (Bassinet sold separately)

WARNINGS:

- **DO NOT USE THE BASSINET ONCE THE CHILD CAN SIT UP.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9KGS.**

IMPORTANT NOTES:

- THE STRIDER AND STRIDER PLUS BASSINETS ARE THE ONLY BASSINETS DESIGNED TO FIT THE COMPACT STROLLER.
- REMOVE THE STROLLER SEAT OR INFANT CARRIER FROM THE FRAME BEFORE FITTING BASSINET.
- ALWAYS REMOVE YOUR CHILD FROM THE BASSINET BEFORE FITTING OR REMOVING FROM THE STROLLER FRAME.
- THE BASSINET MUST ALWAYS FACE TOWARDS THE HANDLE.
- THE BASSINET MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- DO NOT LIFT THE STROLLER BY THE BASSINET.

2.2 BASSINET PARTS



Bassinet
Frame



Bassinet
Liner



Bassinet
Mattress




Bassinet
Boot cover

2.3 BASSINET ASSEMBLY, FITTING & REMOVAL

PLEASE REFER TO PAGE 11 FOR SMART LIFTING TECHNIQUES.



A To assemble bassinet, locate straps in the centre of the frame support rods and pull straps slowly outwards until each rod slides and locks under all 4 clips.

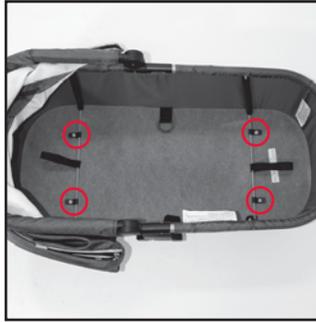

B Frame support rods are locked under all four clips.



C Push down lightly on the top edges of the bassinet to check that the frame supports are firmly locked in place.



D Open canopy by pressing and holding each button on the outside of canopy pivot joint before rotating carry handle bar to vertical position.



E Fit the liner by aligning the opening with the main locking lever and stretching it over both corners of the bassinet. Ensure body band faces upwards.



F Fasten hook and loop strip just under the main locking lever.

2.3 BASSINET ASSEMBLY, FITTING & REMOVAL Cont...



G Fasten hook and loop tabs around the handle mouldings and stretch the liner over the other two corners of the bassinet.



H Fold canopy down (see section 2.3 (D)). Insert the pad into the bassinet with head rest located at the canopy end.



I Attach hook and loop tabs on canopy to the liner on both sides and in two places near the main locking lever.



J To expose the mesh section of the canopy, fully unzip the center section. Use the fabric to expose or enclose the mesh section. To close the canopy reverse the above procedure.



K Place the bassinet boot cover over the bassinet and attach hook on the each side of the boot cover to loop on the each side of the canopy as shown.



2.3 BASSINET ASSEMBLY, FITTING & REMOVAL Cont...

NOTE: The bassinet can only be installed rearward (facing mother position) on the stroller frame. The frame will not fold with bassinet installed so it must be removed before folding.



L Line up plastic moulding on sides of bassinet with sockets in the middle of the stroller frame.



M Lower the bassinet all the way down until it engages into the sockets on both sides.



N Ensure Bassinet is securely locked on by trying to pull up.




O To remove bassinet from the stroller, firmly lift and hold the main lever up. Once released, lift the bassinet out of the stroller.



NOTE: A body band is also installed in the base of the bassinet for optional use.

To use the body band, remove the mattress, open the body band, and then place the mattress back into the bassinet. When not in use, store the body band under the mattress.

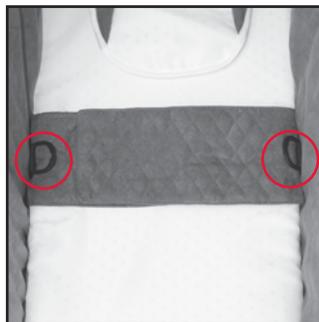

NOTE: D-rings are installed in the base of the bassinet for optional baby harness. The Baby harness is not supplied but can be purchased separately at an independent baby store.

3.1 INFANT CARRIER WARNINGS & IMPORTANT NOTES (Infant Carrier sold separately)

WARNINGS:

- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.**

IMPORTANT NOTES:

- THE STEELCRAFT & STRIDER INFANT CARRIERS ARE THE ONLY COMPATIBLE INFANT CARRIERS DESIGNED TO FIT THE COMPACT STROLLER AND SECOND SEAT FRAME.
- THE INFANT CARRIER OR INFANT CARRIERS MUST BE CORRECTLY FITTED AND LOCKED ONTO THE COMPACT STROLLER OR SECOND SEAT FRAME.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- WHEN LOCKED ONTO THE SECOND SEAT FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE FORWARD FACING POSITION, FITTED FACING TOWARDS THE FRONT OF THE STROLLER.
- SECURE EACH CHILD USING THE INFANT CARRIER OR INFANT CARRIERS HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILDREN IN THE INFANT CARRIERS FOR EXTENDED PERIODS.
- THE INFANT CARRIERS ARE DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT THEY SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER/CARRIERS MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.


3.1 INFANT CARRIER WARNINGS & IMPORTANT NOTES Cont... (Purchased Separately)

- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

PLEASE NOTE: FOR PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

3.2 INFANT CARRIER FITTING & REMOVAL

PLEASE REFER TO PAGE 11 FOR SMART LIFTING TECHNIQUES.

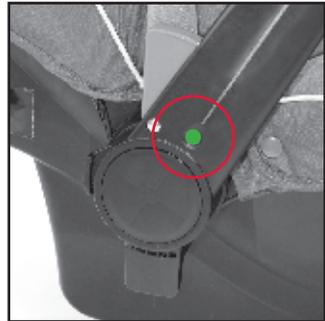

- A** Remove Stroller seat or Bassinet from frame, (See sections 1.15 (B) & 2.3 (O)). The Infant Carrier must face the Stroller handle. With the Infant Carrier handle in the upright position, locate the infant carrier handle mouldings on either side, directly over the frame mouldings. Notice the indicator is **GREEN**.



- B** Push down on the infant carrier and make sure it is located in the frame mouldings. The infant carrier now needs to be locked securely in frame.

3.2 INFANT CARRIER FITTING & REMOVAL Cont...



C By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The **GREEN** indicator will now turn to **RED**.



D Release the handle latches. Then with one hand holding the front of the infant carrier, push the infant carrier handle all the way down until you hear it lock into the frame.



E The handle indicator should now be **GREEN** and the infant carrier should be locked into the frame. If indicator is **RED** the infant carrier handle is not in the locked position, repeat step D



F Pull up on both sides of the infant carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps A to E.



G Secure your baby into the infant carrier with the harness provided. (Refer to instruction manual that comes with infant carrier).



H To remove the infant carrier, squeeze both handle latches in to release the locks. The indicator will now be **RED**.

3.2 INFANT CARRIER FITTING & REMOVAL Cont..



- I Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be **GREEN**.



- J Lift and remove the infant carrier away from the stroller.

4.1 SECOND SEAT WARNINGS & IMPORTANT NOTES (Second Seat sold separately)

WARNINGS:

- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 17kg.**

IMPORTANT NOTES:

- **DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF STROLLER.**
- **THE SECOND SEAT MUST BE CORRECTLY FITTED AND LOCKED ONTO THE SECOND SEAT FRAME.**
- **THE SECOND SEAT CAN ONLY BE USED IN THE FORWARD FACING POSITION, CONNECTED TO THE REAR OF THE STROLLER.**
- **DO NOT OVERLOAD THE STROLLER. OVERLOADING WILL CAUSE THE STROLLER TO TIP BACKWARDS.**

4.2 SECOND SEAT PARTS

- SS1. Second Seat assembly
- SS2. Second Seat engaging pins (2)
- SS3. One hand, 4 position reclining backrest
- SS4. Adjustable /removable canopy
- SS5. Canopy Release Buttons
- SS6. Receivers (2)
- SS7. Head Pillow
- SS8. Shoulder pads (2)
- SS9. Second Seat leg tube



4.3 FITTING SECOND SEAT TO THE STROLLER

IMPORTANT NOTES:


PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

- WHEN FITTING, OPENING OR FOLDING THE SECOND SEAT, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED OR UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.

NOTE: For easier installation, rotate the pivotal handle in the most upright position.



A Remove the accessory bag if fitted. Apply the stroller brake, rotate the pivotal handle up to create more assembly space. Adjust the stroller seat to the most upright position.

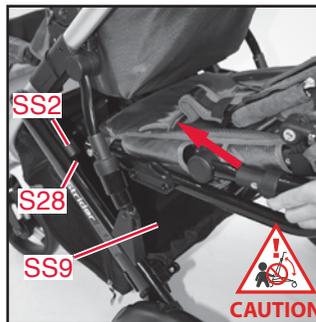

B The second seat connecting pins (**SS2**) need to lock into the frame mouldings (**S28**). Hold the second seat frame so the leg tube (**SS9**) is underneath and facing the second seat.



C While holding the second seat, hook the connecting pins (**SS2**) into the frame mouldings (**S28**), then pull downwards.

4.3 FITTING SECOND SEAT THE STROLLER



D Lower the second seat frame and push down to lock the leg tubes (**SS9**) into the lower stroller frame mouldings (**S30**). Repeat step D if the frame doesn't lock into place.



E Pull up on the second seat frame to make sure it is locked onto the stroller frame. Ensure to grasp the second seat frame as shown above.



F Raise the backrest adjusting lever and lift the head end of the second seat so that the foot end slides down the stroller frame and engages into the second lock (**S29**).

4.4 ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.



- A** Adjust to desired seating position by using the one hand backrest adjusting lever. Lift the lever all the way up and at the same time, lift up on the seat.



- B** The seat will slide up and down the frame. Lock into any one of 4 seating positions by releasing the backrest adjusting lever and allow the seat to engage at the desired position.

4.5 TO FIT, USE & REMOVE THE CANOPY

IMPORTANT NOTE:

- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.



A To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.



B Attach the canopy hook strips to the pile strips around the top of the frame for a secure fit.



C To adjust the canopy, open by pulling forward, or close by pushing it backward. To remove the canopy see section 4.15 (C).



D To expose the mesh section of the canopy, unzip the centre section.




E The zip should be fully unzipped to expose the centre mesh section. Use the fabric to expose or enclose the mesh section.

4.6 HARNESS ADJUSTMENT


⚠ WARNING: USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.

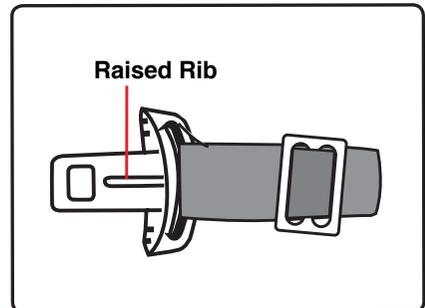


- A** Set parking brake. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

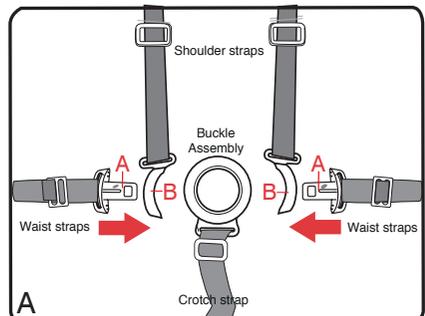

4.6 HARNESS ADJUSTMENT cont...


- B Note:** Ensure the straps are not twisted as they may become uncomfortable for the child.

Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

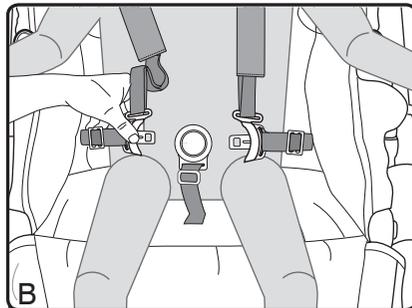


Press in & hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

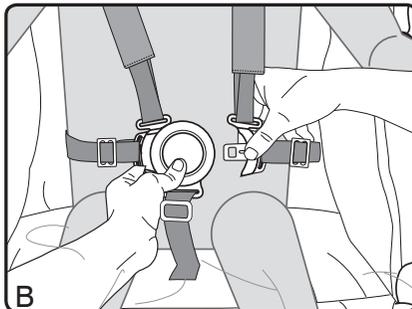


- C** Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

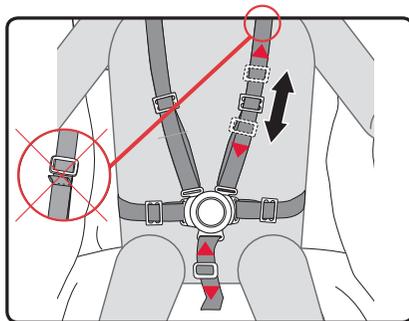


CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS

4.6 HARNESS ADJUSTMENT cont...


- D** Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit.
The waist strap needs to fit firmly around the child.

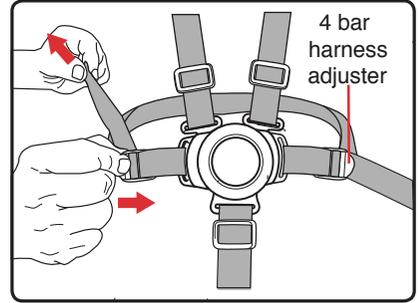

- E** Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

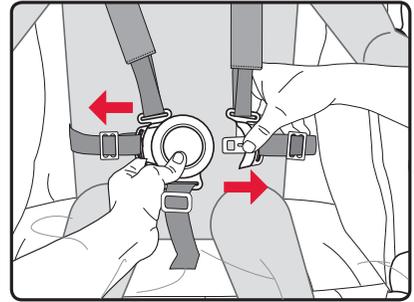

- F** The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, position the shoulder straps near the child's shoulders then either push the shoulder harness tongue out of the current harness slot and through the back of the seat.

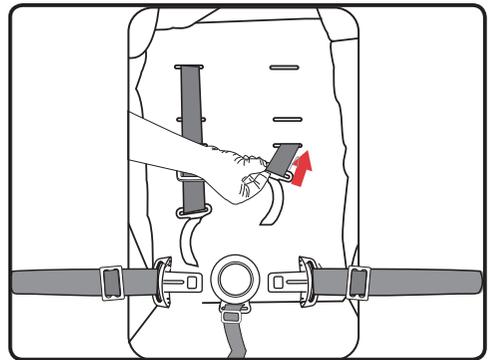

*Depending on the model

4.7 ADJUSTING THE HEAD PILLOW HEIGHT POSITION



- A** The head pillow has a small height adjusting range. Attach to the best suited hook and pile position as required.

4.8 TO FIT THE SHOULDER PADS



- A** Release the harness buckles and slide the shoulder pads onto the shoulder strap



- B** Repeat for the other shoulder pad.

4.9 TO FIT THE BOOT COVER



- C Fit the boot cover inside the basket over the bottom part of the second seat.

4.10 FOLDING THE SECOND SEAT WITH THE STROLLER FRAME

IMPORTANT NOTES:

PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

- WHEN OPENING OR FOLDING THE SECOND SEAT, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED OR UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.

4.10 FOLDING THE SECOND SEAT WITH THE STROLLER FRAME Cont...

IMPORTANT NOTE:

INCORRECT FOLDING MAY CAUSE DAMAGE TO THE STROLLER AND FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.


NOTE: When folding the stroller with the second seat attached, you must adjust the stroller pivotal handle to the regular or highest position (see section 1.10), to prevent the handle from coming in contact with the second seat and causing damage to the stroller.



IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE SECOND SEAT BEFORE FOLDING OR REMOVING THE SECOND SEAT.

FOLD THE SECOND SEAT BEFORE FOLDING THE STROLLER.

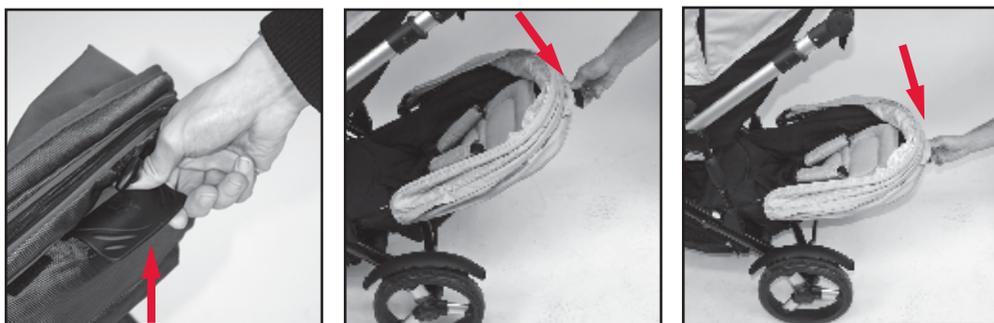

- A** Fold the canopy back, then fully lift up the backrest adjusting lever and lower the second seat to the lowest position.

4.10 FOLDING THE SECOND SEAT WITH THE STROLLER FRAME Cont...



B While still holding the backrest adjusting lever up, press the safety lock button (**S29**), and continue to lower the head end of the second seat.



C Continue to lower the second seat, the foot end of the second seat will slide up the frame to the folded position.



D The second seat is shown in the fully folded position above. To fold the stroller frame see section **1.28**.


4.11 REMOVING THE SECOND SEAT FROM THE STROLLER FRAME

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE FOLDING OR REMOVING THE SECOND SEAT.



A First, fold the second seat up under the frame - (see section **4.10**).

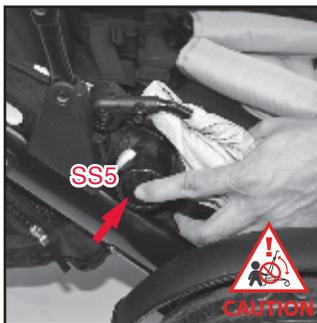

B With the second seat in the folded position, locate the release buttons (**SS5**) on the sides of the second seat frame.




C Wrap your hands around the second seat frame and fully depress the release buttons until you see the adjacent buttons pop out of the mouldings.

4.11 REMOVING THE SECOND SEAT FROM THE STROLLER FRAME Cont...



D The adjacent buttons pop out of the mouldings when the release buttons are fully depressed.

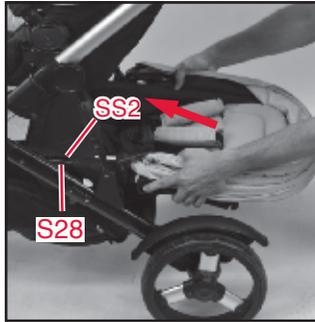

E A gentle upward, then forward motion (as indicated by the arrow) will be required to release the second seat connecting pins (**SS2**) out of the frame mouldings (**S28**).




F Lift the second seat out and away from the frame.

4.12 TO USE THE ADAPTORS

NOTE: Adaptors are supplied to create more space if required, when using the second seat or infant carrier on second seat frame.



A Align the adaptor with the stroller frame mouldings as the adaptor extends towards the front of the stroller and the ribbed section of the mouldings face inwards.

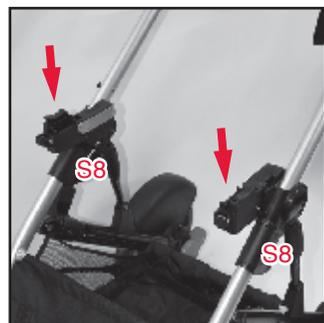


B Press down on the adaptors to lock into the stroller frame mouldings (**S8**).

4.12 TO USE THE ADAPTORS Cont...



C Pull up on the adaptors to make sure they are locked on.

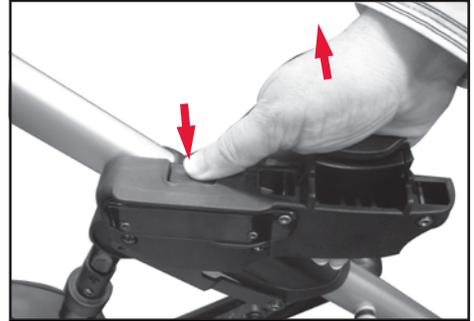

D To remove the adaptors, push down and hold the button, then pull the adaptor up and out of the moulding.

4.13 TO INSTALL THE STROLLER SEAT USING THE ADAPTORS



A Lock the stroller seat into the adaptors in the forward facing position.



B Adjust the stroller backrest angle as required.



CAUTION: STROLLER SEAT MUST BE CORRECTLY ATTACHED, (SEE FITTING AND REMOVAL SECTIONS 1.12 & 1.15).

4.14 TO INSTALL THE INFANT CARRIER USING THE ADAPTORS

IMPORTANT NOTE:

DO NOT INSTALL THE INFANT CARRIER IN A FORWARD FACING POSITION, EVEN WHEN USED IN CONJUNCTION WITH THE SECOND SEAT. THE INFANT CARRIER MUST ALWAYS FACE REARWARDS.



A Lock the infant carrier into the adaptors, with the infant carrier facing towards the stroller handle.



B Pull up on the infant carrier to make sure it is locked in.



CAUTION: INFANT CARRIER MUST BE CORRECTLY ATTACHED, (SEE FITTING AND REMOVAL SECTIONS 3.2 & 4.11).

4.15 FITTING & REMOVING SOFT GOODS FROM THE SECOND SEAT FRAME



A To fit the infant carrier to the second seat frame, you must first remove the second seat from the stroller and remove the soft goods.



B Lay the second seat frame on a flat surface facing upwards. Release hook and loop tabs which attach the canopy to the top of the second seat.



C To remove the canopy, press in and hold the release tabs while pulling the canopy out of the frame mouldings.



D Turn the second seat over so it is facing downwards, then release all the hook and loop tabs



E Undo the D ring from the bar by sliding the webbing through the slot.



F Release hook and loop tab (1 & 2) on both sides.

4.15 FITTING & REMOVING SOFT GOODS FROM THE SECOND SEAT FRAME cont...



G Release the hook and loop tabs on both sides.



H Release hook and loop tab.




I Pull the fabric pocket off from both button frame posts.



J Pull the fabric clear of the mouldings and pull the fabric off the frame. The following steps explain how to fit the second seat frame to the stroller.



K The second seat connecting pins (**SS2**) need to lock into the frame mouldings (**S28**). Hold the second seat frame so the leg tube (**SS9**) is underneath and facing the head end of the second seat.

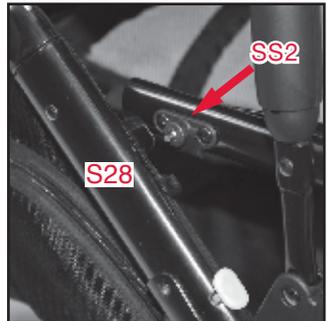

L Hold the second seat and hook the connecting pins (**SS2**) into the stroller frame mouldings (**S28**), then pull downwards.

4.16 FITTING & REMOVING INFANT CARRIER FROM SECOND SEAT FRAME



- A** Lower the second seat frame and push down to lock the leg tubes (**SS9**) into the lower stroller frame mouldings (**S30**). Repeat step L if the frame doesn't lock into place.



- B** Raise the backrest adjusting lever and lift the head end of the second seat so that the foot end slides down the stroller frame and engages into the second lock (**S29**). When locked, frame is slightly above horizontal.



- C** For easier installation, remove stroller seat or infant carrier from frame, (**see sections 1.15 (b) & 3.2 (O)**). The infant carrier must face towards the front of the stroller. With the infant carrier handle in the upright position, locate the infant carrier handle mouldings on either side, directly over the second seat frame mouldings. Notice the indicator is **GREEN**.



- D** Push down on the infant carrier and make sure it is place in the frame mouldings. The infant carrier now needs to be locked securely into the frame.




- E** By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The **GREEN** indicator will now to **RED**.



- F** Release the handle latches. Then with one hand holding the front of the infant carrier, push the infant carrier handle all the way down until you hear it lock into the frame.

4.16 FITTING & REMOVING INFANT CARRIER FROM SECOND SEAT FRAME cont...

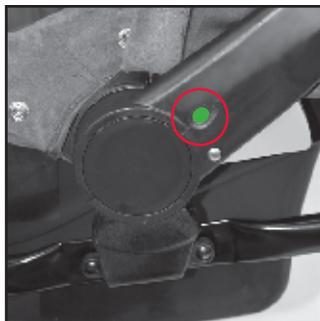


G The handle indicator should now be **GREEN** and the infant carrier should be locked into the frame. If indicator is **RED** the infant carrier handle is not in the locked position, repeat steps E & F.



H IMPORTANT: Pull up on both sides of the infant carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps E to G.



I Secure your baby into the infant carrier by the harness provided. (Refer to the instruction manual which comes with the infant carrier).

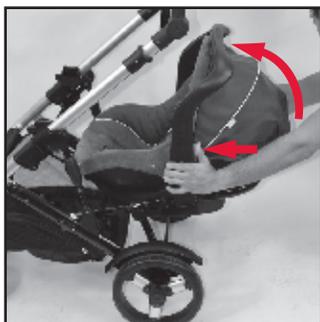

J To remove the infant carrier, squeeze both handle latches in to release the locks. The indicator will now be **RED**. Rotate the handle forward.



K Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be **GREEN**.



L Lift and remove the infant carrier away from the second seat frame.

Note: To create more space when the infant carrier is installed on the second seat frame, you can use the adaptors on the stroller frame to support the stroller seat or second infant carrier.

4.17 REFIT THE SOFT GOODS TO THE SECOND SEAT FRAME



A Lay the second seat frame on a flat surface as shown above.




B Pull the fabric over the frame.



C Ensure the latch at the top of the frame is pulled through the cutout in the fabric cover.



D Stretch the bottom of the cover to refit the fabric pocket on the bottom frame post. Repeat for both sides.

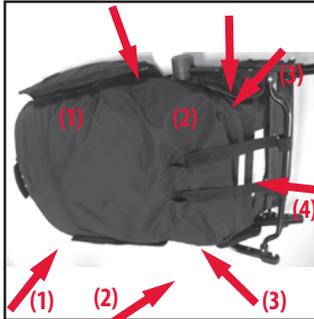

E Re-attach all the hook and loop tabs and pull the mouldings through the holes in the soft goods.



F Attach hook and loop tab (1) on both sides.

4.17 REFIT THE SOFT GOODS TO THE SECOND SEAT FRAME cont...



G Attach hook and loop tab (3) on both sides.




H Attach hook and loop tab (2) on both sides making sure the canopy moulding on the top side of the frame is exposed.



I Attach the D ring and webbing around the bar by sliding the webbing through the D ring slot.



J Turn the second seat over so it is facing upwards. To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.

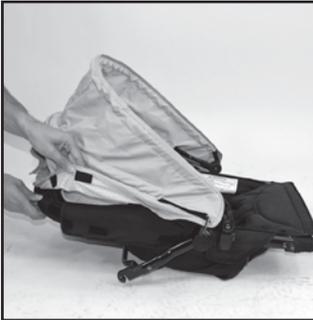

K Attach the canopy hook strips to the pile strips around the top and sides.

NOTE: Removal of the second seat soft goods is the reverse instructions of the above procedure.

STROLLER FOLDING CONFIGURATIONS

PLEASE REFER TO PAGE 11 FOR LIFTING TECHNIQUES.

The following are recommended configurations for storage and transportation in a vehicle.

Shown with second seat (optional accessory, sold separately).

Note: The easiest method is to remove the top seat and optional accessories from the stroller frame and place the accessories and stroller frame into the vehicle separately.



Stroller frame only



Stroller seat



Second seat



CAUTION: The stroller can be folded with the top seat and seat attached to the stroller frame, however, caution must be taken when lifting the stroller because of the overall weight.



Stroller frame
+ Second seat



Stroller frame + seat
+ Second seat

Note: The stroller pivotal handle is required to be placed into the regular or highest lockable position (see section 1.10).

This will prevent the handle from coming into contact with the second seat and causing damage to the stroller.

If the tension is too hard DO NOT force, re-open the stroller and ensure the stroller pivotal handle is set to the highest point.

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



[youtube.com/user/BritaxChildcare](https://www.youtube.com/user/BritaxChildcare)



[facebook.com/steelcraft](https://www.facebook.com/steelcraft)



twitter.com/britaxaustralia



britax.com.au



1300 303 330

BRITAX CHILDCARE PTY. LTD. A Britax International Company ABN 55 006 773 6000
99 Derby Road, Sunshine, Victoria, 3020, Australia

Britax Childcare Pty Ltd (Customer Service 1300 303 330)
Britax Childcare (NZ) Ltd (Customer Service 0508 688 822)

For our entire Steelcraft product range, visit www.britax.com.au

Due to the variations in style and design of our products, the illustrations used in this instruction booklet are generic.

We reserve the right to alter these products without notice.

Fabric and colour may vary from images shown.

©2012-2013 The Steelcraft, Compact, Strider and Strider Plus trademarks are the property of Britax Childcare Pty. Ltd. - Australia

The Britax Trademark is the property of Britax Childcare Holdings Limited - UK.

Patents apply. Patents pending.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prams and Strollers - Safety Requirements."

* Excludes accessories

Britax

Steelcraft

Art No.4001656